

4. Horn Switch

A: REMOVAL

CAUTION:

Before handling the airbag module, refer to “CAUTION” of “General Description” in “AIR-BAG SYSTEM”. <Ref. to AB-5, CAUTION, General Description.>

NOTE:

Horn switch is a unit with the driver's airbag module.

- 1) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 2) Remove the driver's airbag module. <Ref. to AB-15, REMOVAL, Driver's Airbag Module.>

B: INSTALLATION

CAUTION:


- Before handling the airbag module, refer to “CAUTION” of “General Description” in “AIR-BAG SYSTEM”. <Ref. to AB-5, CAUTION, General Description.>

- Do not allow harness and connectors to interfere or get tangled up with other parts.

- 1) Install the driver's airbag module. <Ref. to AB-15, INSTALLATION, Driver's Airbag Module.>
- 2) Install each part in the reverse order of removal.

C: INSPECTION

- 1) Remove the horn switch. <Ref. to COM-5, REMOVAL, Horn Switch.>
- 2) Check the resistance between horn switch terminal and airbag module bracket.

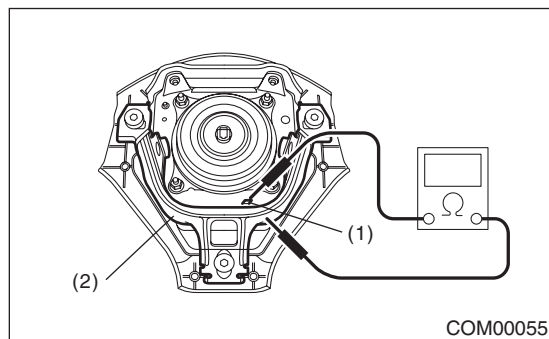

- (1) Horn switch terminal
(2) Airbag module bracket

Switch position	Terminal No.	Standard value
The airbag module bracket being pushed	Horn switch terminal and airbag module bracket	Less than 1 Ω
The airbag module bracket being separated		1 M Ω or more

- 3) Replace the driver's airbag module if the inspection result is not within the standard value.

Horn Switch

COMMUNICATION SYSTEM

GLASS/WINDOWS/MIRRORS

GW

	Page
1. General Description	2
2. Power Window System	8
3. Power Window Control Switch	9
4. Front Door Glass	12
5. Front Regulator and Motor Assembly	13
6. Remote Control Mirror System	14
7. Scalp Cap	15
8. Outer Mirror Assembly	16
9. Outer Mirror	19
10. Remote Control Mirror Switch	20
11. Rear Door Glass	21
12. Rear Regulator and Motor Assembly	22
13. Windshield Glass	23
14. Rear Gate Glass	28
15. Rear Window Glass	31
16. Rear Window Defogger System	33
17. Rear Quarter Glass	35
18. Rearview Mirror	38
19. Wiper Deicer System	39