

3. Cruise Control Module

A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

B: REMOVAL

For removal procedures of the control module, refer to Engine section.

- Except for STI model: <Ref. to FU(w/o STI)-57, REMOVAL, Engine Control Module (ECM).>
- STI model: <Ref. to FU(STI)-59, REMOVAL, Engine Control Module (ECM).>

C: INSTALLATION

For install procedures of the control module, refer to Engine section.

- Except for STI model: <Ref. to FU(w/o STI)-57, INSTALLATION, Engine Control Module (ECM).>
- STI model: <Ref. to FU(STI)-59, INSTALLATION, Engine Control Module (ECM).>