

8. Neutral Position Switch

A: NOTE

For neutral position switch, refer to following section.

- 5MT model: <Ref. to 5MT-33, Switches and Harness.>
- 6MT model: <Ref. to 6MT-41, Neutral Position Switch.>

Neutral Position Switch

CRUISE CONTROL SYSTEM

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

CC(diag)

	Page
1. Basic Diagnostic Procedure	2
2. General Description	4
3. Electrical Component Location	5
4. Engine Control Module (ECM) I/O Signal	6
5. Subaru Select Monitor	7
6. Diagnostics with Phenomenon	9
7. List of Cancel Code	12
8. Diagnostic Procedure with Cancel Code	14