


## 10. Steering Switch

### A: REMOVAL


#### WARNING:

Before servicing, be sure to read the notes in the "AB" section for proper handling of the driver's airbag module. <Ref. to AB-5, CAUTION, General Description.>


- 1) Set the front wheels in straight ahead position.
- 2) Turn the ignition switch to OFF.
- 3) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 4) Using TORX® bit T30 (1), loosen two TORX® bolts which secure the driver's airbag module.

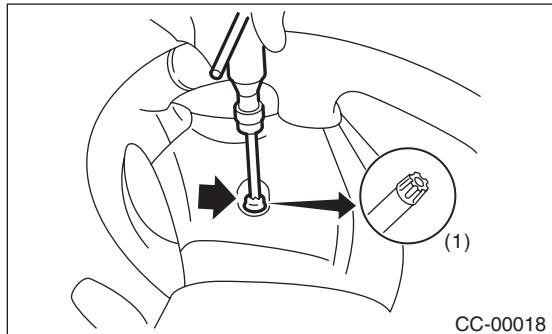

- 5) Disconnect the airbag module connector on back of the airbag module. <Ref. to AB-8, PROCEDURE, Airbag Connector.>
- 6) Remove the steering wheel.
- 7) Remove the screws, disconnect the steering switch connector, and remove the lower cover from steering wheel.

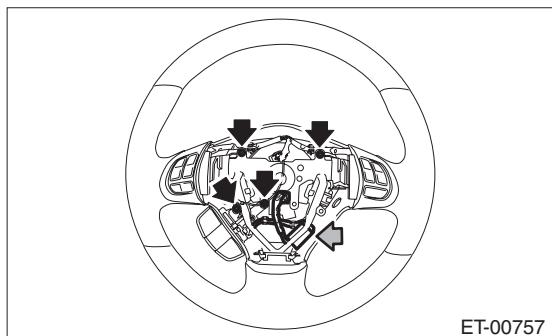

- 8) Remove the screws and remove the steering switch.

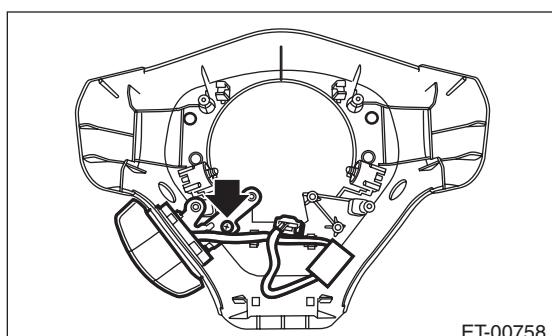


### B: INSTALLATION

Install each part in the reverse order of removal.

### C: INSPECTION

- 1) Remove the airbag module from the steering wheel. <Ref. to AB-15, REMOVAL, Driver's Airbag Module.>
- 2) Connect the tester as shown in the figure, then check resistance between terminals when each switch is pressed.

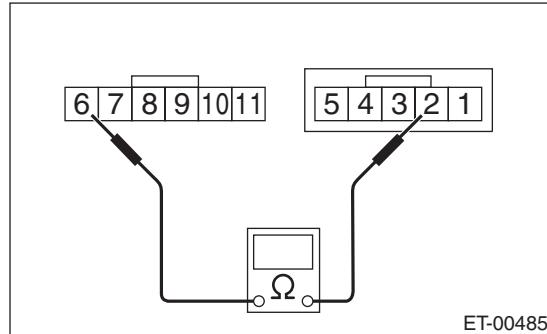

Switch	Resistance
No switch pressed	1 MΩ or more
HOOK ON	Approx. 330 Ω
HOOK OFF	Approx. 1010 Ω
TALK	Approx. 3.21 kΩ

- 3) If internal resistance is out of specification shown in the above table, replace the steering switch.