


7. Rear Speaker

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear door trim. <Ref. to EI-46, REAR DOOR, REMOVAL, Door Trim.>
- 3) Remove the mounting screw of the rear speaker.

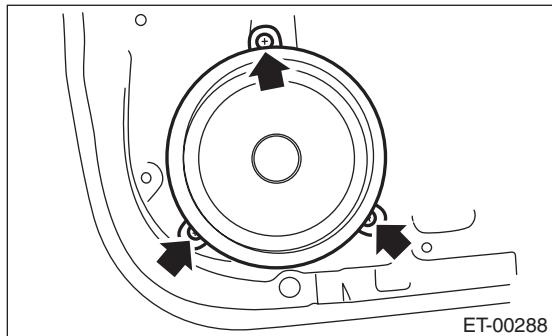

- 4) Disconnect the harness connector and remove the rear speaker.

B: INSTALLATION

Install each part in the reverse order of removal.