


8. Antenna


A: REMOVAL

1. ROOF ANTENNA

- 1) Remove the roof trim. <Ref. to EI-66, REMOV-AL, Roof Trim.>
- 2) Disconnect the harness connector and terminal, and remove the mounting nut (A).

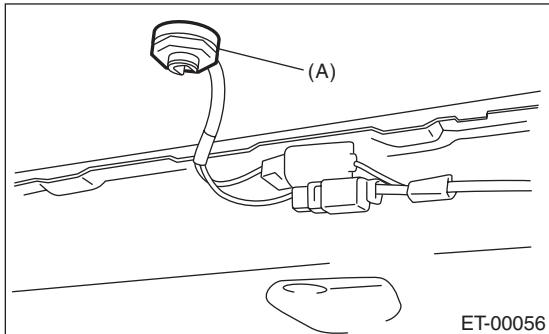

- 3) Pull out the antenna from the roof top.

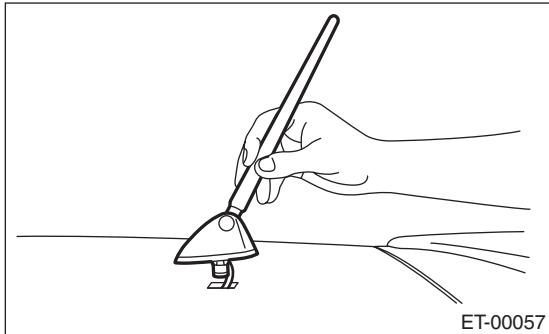

2. FEEDER CORD

- 1) Remove the roof trim. <Ref. to EI-66, REMOV-AL, Roof Trim.>
- 2) Remove the feeder cord from the roof trim.

B: INSTALLATION

Install each part in the reverse order of removal.

NOTE:

For how to attach the feeder cord, refer to the "Roof Trim" section. <Ref. to EI-68, INSTALLATION, Roof Trim.>

C: INSPECTION

Check for cracks or damages.

If any cracks or damages, replace the antenna.