


3. Front Fender


A: REMOVAL

1. FENDER PANEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the side sill spoilers. <Ref. to EI-43, REMOVAL, Side Sill Spoiler.>
- 3) Remove the front bumper face. <Ref. to EI-31, FRONT BUMPER FACE, REMOVAL, Front Bumper.>
- 4) Remove the headlight assembly. <Ref. to LI-15, REMOVAL, Headlight Assembly.>
- 5) Remove the mud guard. <Ref. to EI-30, REMOVAL, Mud Guard.>
- 6) Detach the tabs and remove the cowl panel side.

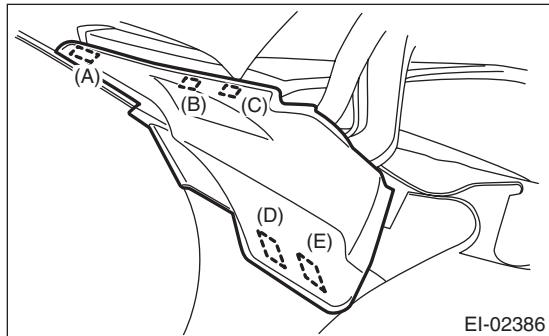

- (1) Detach tabs (A), (B), and (C) from the vehicle exterior.
- (2) Detach tabs (D) and (E).
- 7) Remove the bolt, and remove the front fender panel.

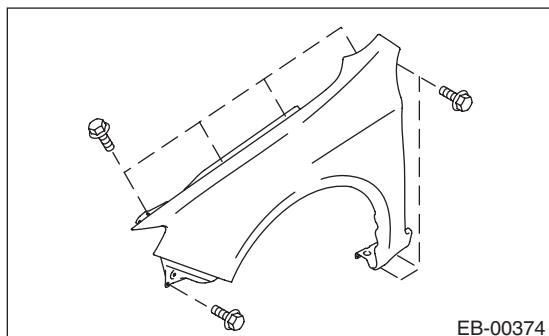


2. COWL SIDE STAY

For operation procedures, refer to performance stay items. <Ref. to EB-18, REMOVAL, Front Performance Stay.>

3. FENDER GARNISH

- 1) Disconnect the ground cable from battery.
- 2) Remove the side sill spoilers. <Ref. to EI-43, REMOVAL, Side Sill Spoiler.>
- 3) Remove the clips and remove the front fender garnish.

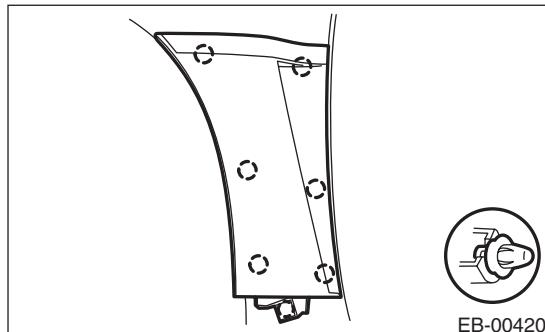

B: INSTALLATION

CAUTION:

- Always use new double sided tape.
- After the installation of front fender panel, be sure to perform headlight beam adjustment.

- 1) Install each part in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

NOTE:

Install while paying attention to make a uniform clearance around the front fender panel. For the dimension of clearance, refer to "SPECIFICATION" in "General Description". <Ref. to EB-2, SPECIFICATION, General Description.>

- 2) Adjust the headlight beam and fog light beam.

- Adjust the headlight beam. <Ref. to LI-16, HEADLIGHT BEAM ADJUSTMENT, ADJUSTMENT, Headlight Assembly.>
- Adjust the fog light beam. (Model with fog light) <Ref. to LI-21, FOG LIGHT AIMING, ADJUSTMENT, Front Fog Light Assembly.>