


## 4. Front Performance Stay

### A: REMOVAL

- 1) Remove the front fender. <Ref. to EB-17, REMOVAL, Front Fender.>
- 2) Remove the bolts and harness clip, and remove the front performance stay.

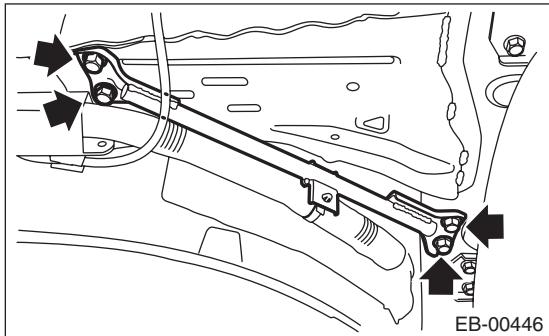

### B: INSTALLATION

- 1) Install each part in the reverse order of removal.

#### *Tightening torque:*

**70 N·m (7.14 kgf·m, 51.6 ft-lb)**

#### NOTE:

Install while paying attention to make a uniform clearance around the front fender panel. For the dimension of clearance, refer to "SPECIFICATION" in "General Description". <Ref. to EB-2, SPECIFICATION, General Description.>

- 2) Adjust the headlight beam and fog light beam.
  - Adjust the headlight beam. <Ref. to LI-16, HEADLIGHT BEAM ADJUSTMENT, ADJUSTMENT, Headlight Assembly.>
  - Adjust the fog light beam. (Model with fog light) <Ref. to LI-21, FOG LIGHT AIMING, ADJUSTMENT, Front Fog Light Assembly.>