


## 8. Rear Sealing Cover

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear door trim. <Ref. to EI-46, REAR DOOR, REMOVAL, Door Trim.>
- 3) Remove the rear speaker. <Ref. to ET-9, REMOVAL, Rear Speaker.>
- 4) Remove the sealing cover.

**CAUTION:**

- Carefully remove the butyl tape. Excessive force will easily break the cover.
- If the sealing cover gets broken, replace it with a new part.

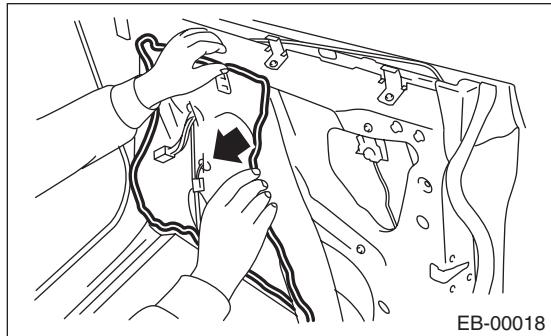

### B: INSTALLATION

**CAUTION:**

- If the sealing cover gets broken, replace it with a new part.
- Apply a butyl tape evenly.
- Attach the sealing cover, keeping it from becoming wrinkled.
- If the butyl tape is applied unevenly, it will cause water leakage and soiling.

- 1) Install each part in the reverse order of removal.
- 2) When replacing the sealing cover, use the butyl tape.
- 3) Press the butyl tape-applied area firmly to prevent any floating on surface.

**Butyl tape:**

*3M8626 or the equivalent*

### C: INSPECTION

If the sealing cover gets damaged, replace it with a new part.