


General Description

EXTERIOR/INTERIOR TRIM

1. General Description

A: COMPONENT


1. FRONT GRILLE

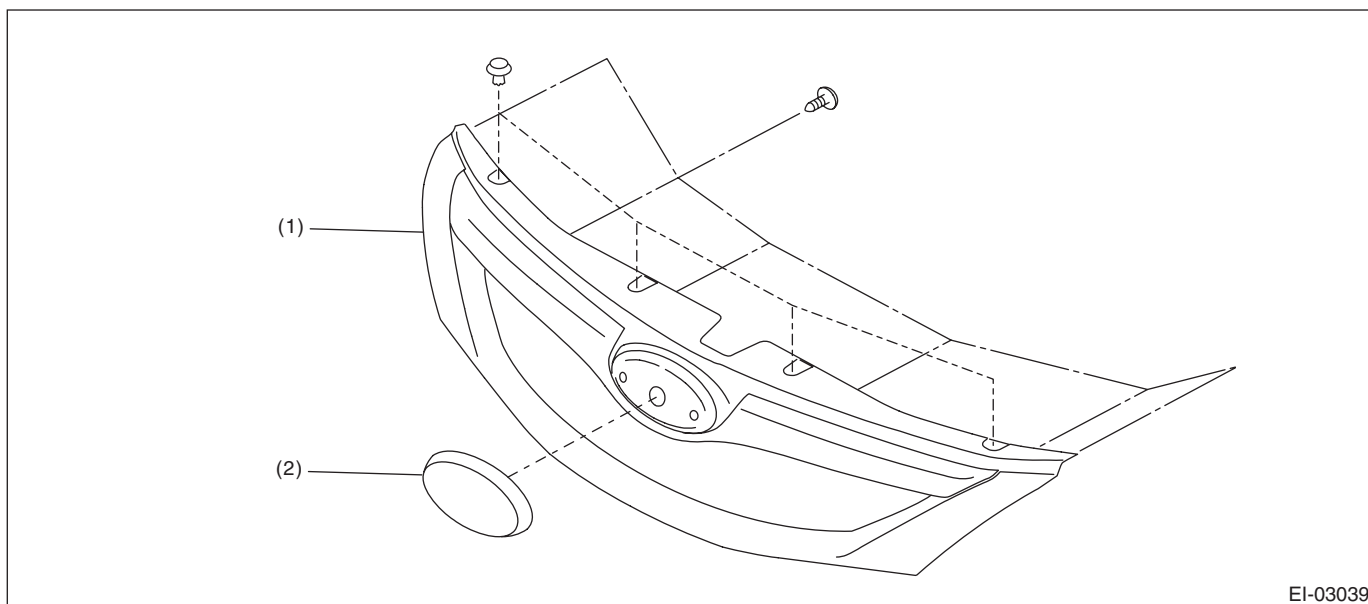

(1) Front grille ASSY

(2) Front grille emblem


2. UNDER COVER

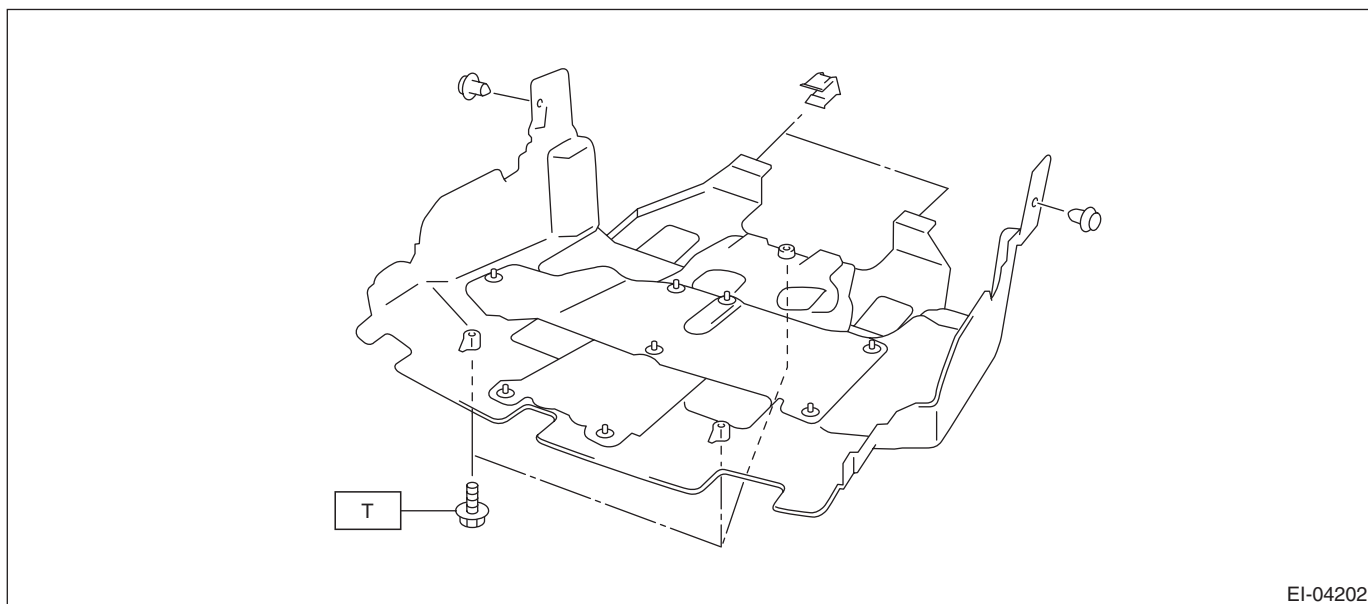

Tightening torque: N·m (kgf-m, ft-lb)

T: 18 (1.84, 13.3)

3. UNDER PROTECTOR

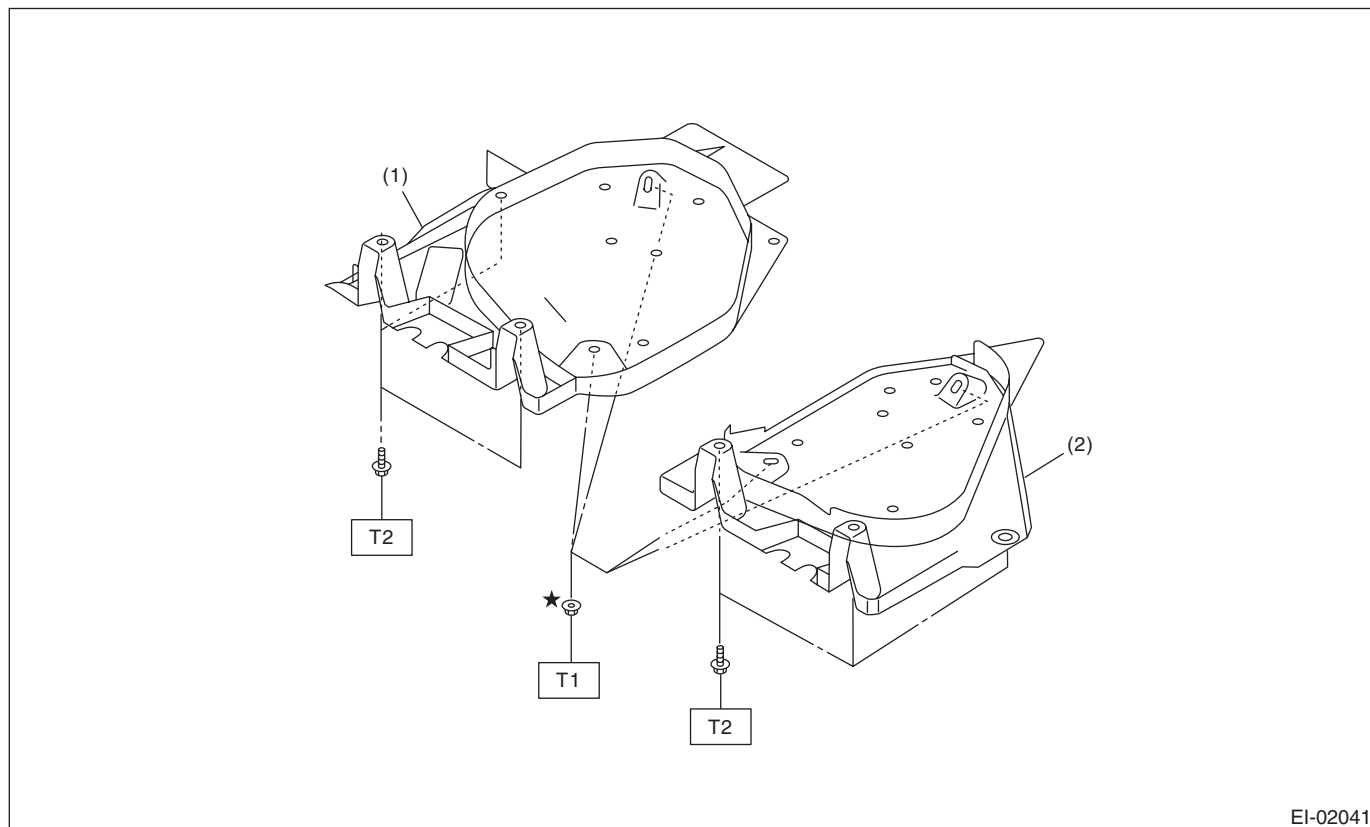

(1) Fuel tank protector RH

(2) Fuel tank protector LH

Tightening torque: N·m (kgf-m, ft-lb)

T1: 9 (0.92, 6.6)


T2: 18 (1.84, 13.3)

General Description

EXTERIOR/INTERIOR TRIM

4. FRONT HOOD GRILLE

Except for STI model

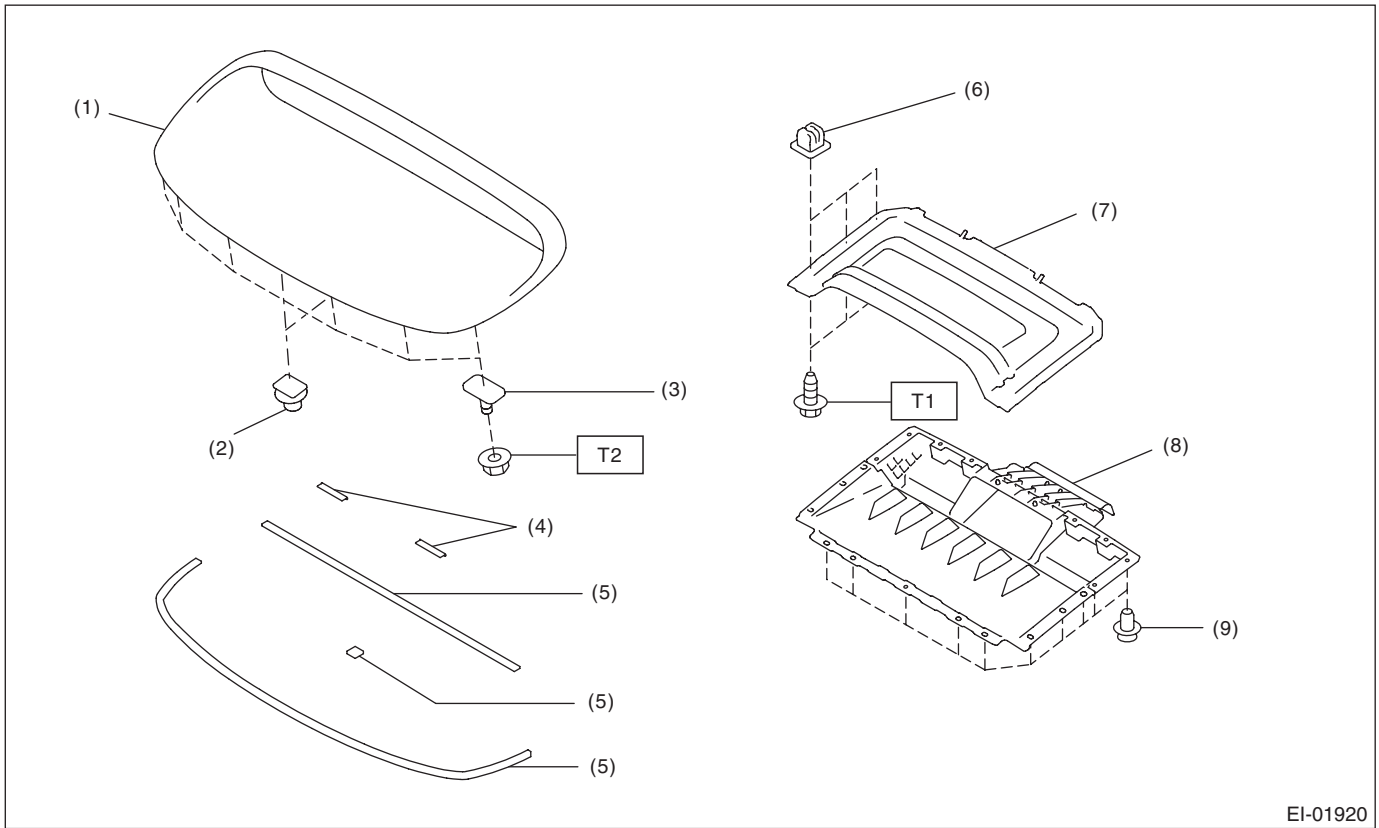


- | | |
|-----------------------|---------------------|
| (1) Front hood grille | (6) Grommet |
| (2) Clip anchor | (7) Hood duct |
| (3) Bolt | (8) Hood duct inner |
| (4) Protector | (9) Clip |
| (5) Packing | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 1.0 (0.1, 0.7)

T2: 4.5 (0.46, 3.3)

STI model

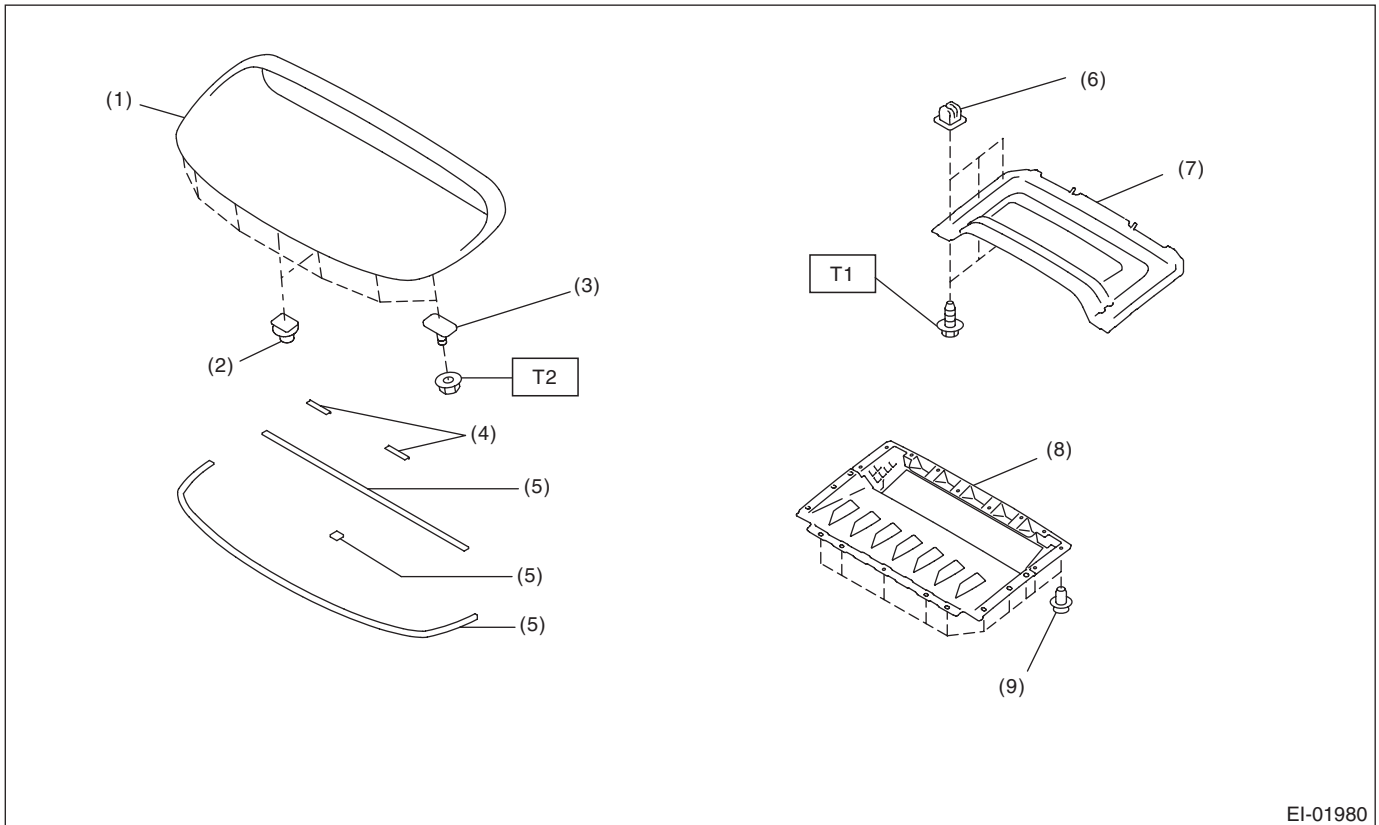

- | | |
|-----------------------|---------------------|
| (1) Front hood grille | (6) Grommet |
| (2) Clip anchor | (7) Hood duct |
| (3) Bolt | (8) Hood duct inner |
| (4) Protector | (9) Clip |
| (5) Packing | |

Tightening torque: N·m (kgf-m, ft-lb)


T1: 1.0 (0.1, 0.7)

T2: 4.5 (0.46, 3.3)

General Description

EXTERIOR/INTERIOR TRIM

5. FRONT BUMPER

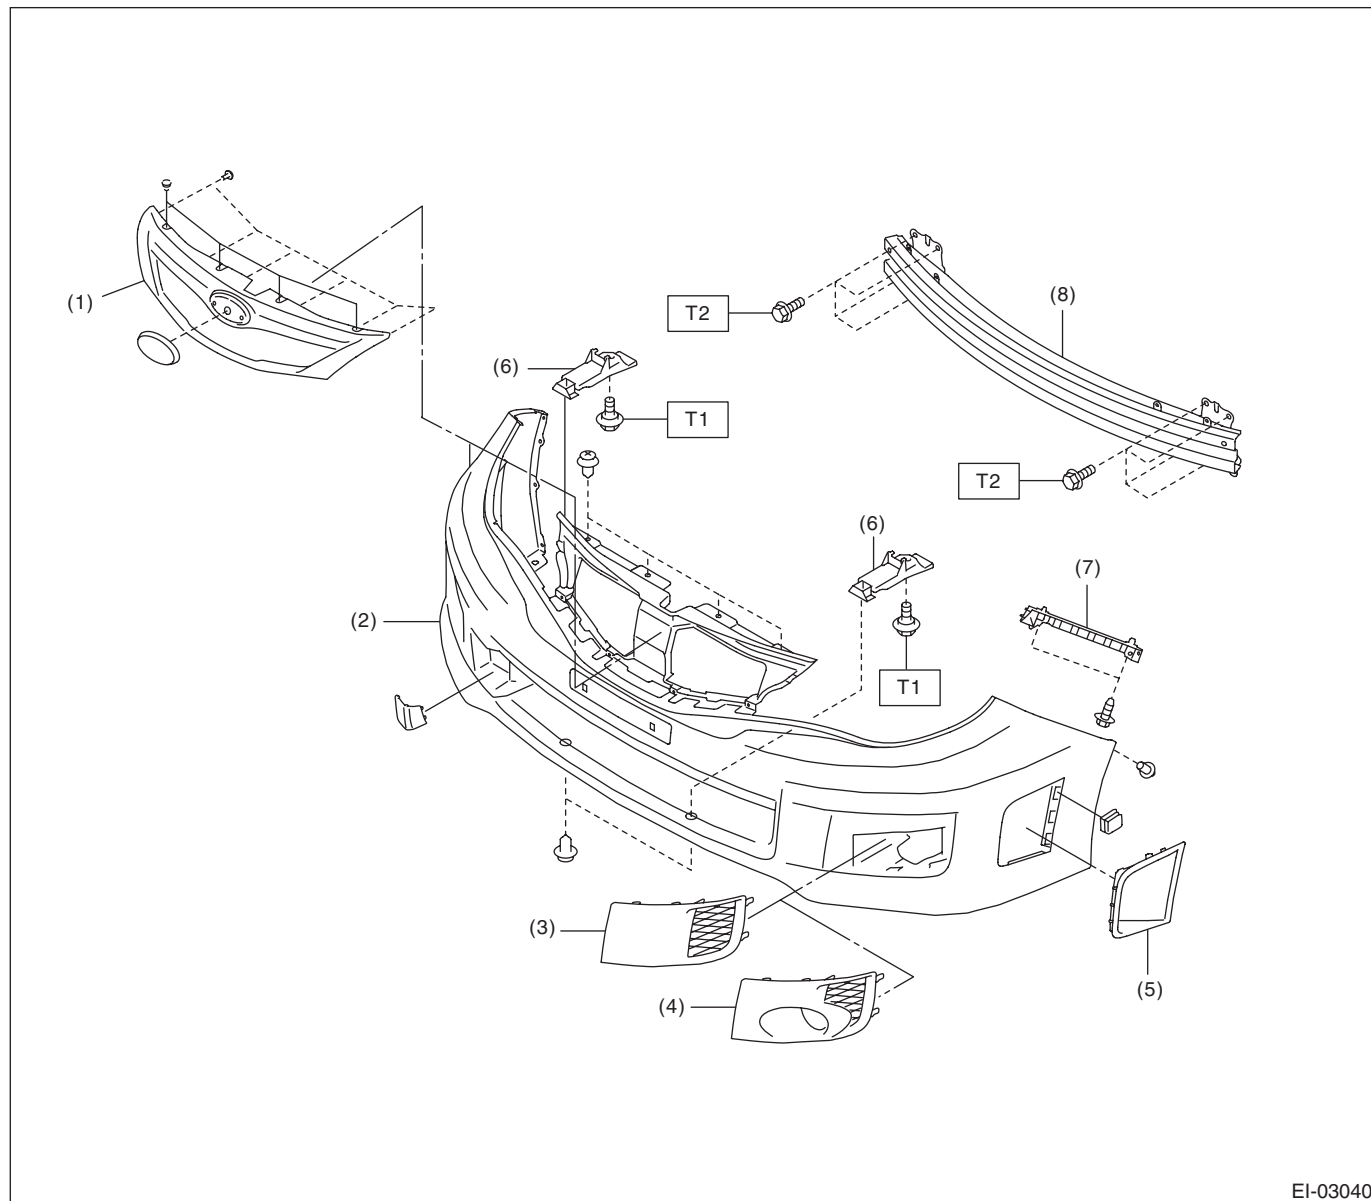

- (1) Front grille ASSY
- (2) Bumper face
- (3) Front cover
- (4) Fog light cover

- (5) Side cover
- (6) Front bracket center lower
- (7) Front side bracket
- (8) Bumper beam reinforcement


Tightening torque: N·m (kgf·m, ft·lb)

T1: 7.5 (0.76, 5.5)

T2: 32 (3.26, 23.6)

6. REAR BUMPER

5 door model

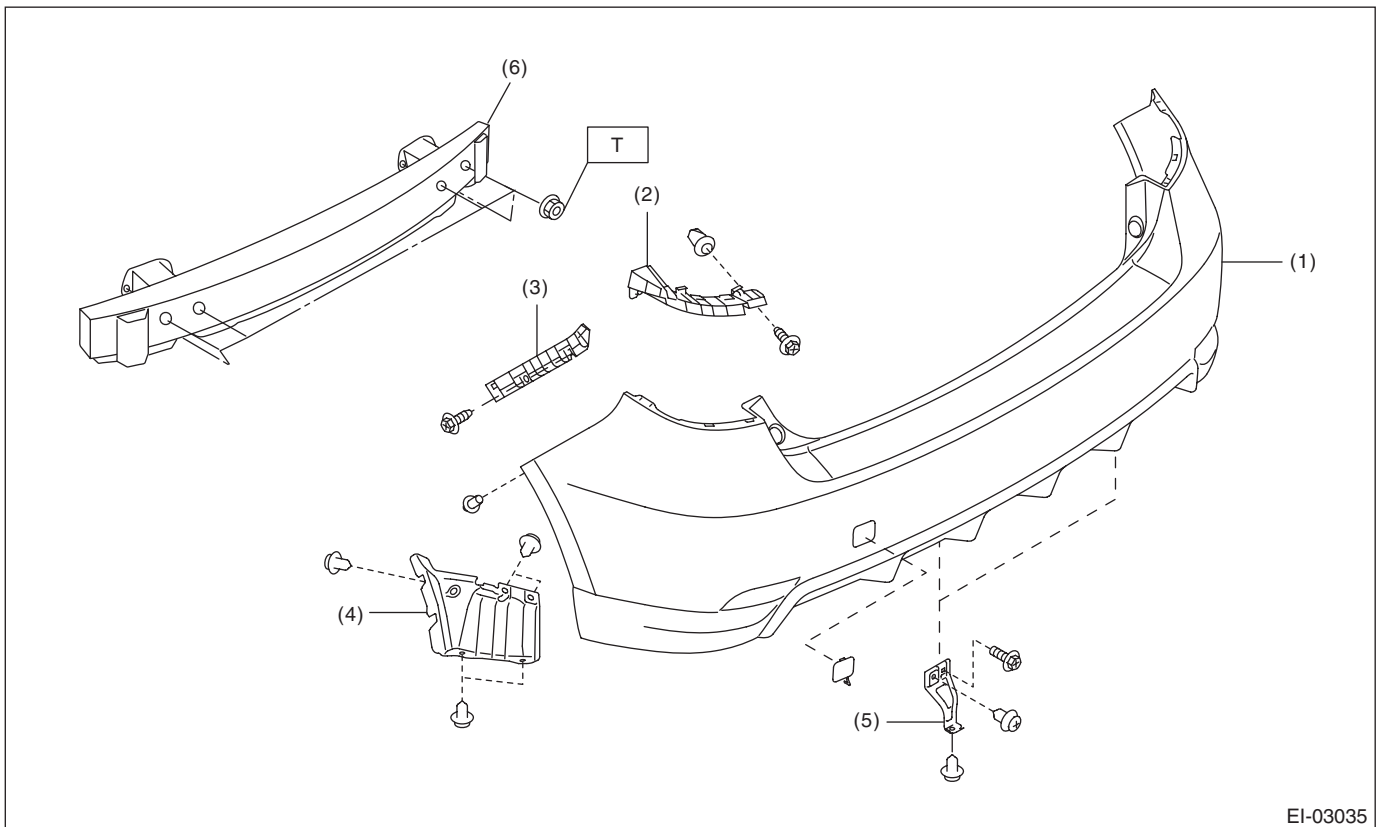

EI-03035

- | | |
|-------------------------|-------------------------------|
| (1) Bumper face | (4) Rear side cover lower |
| (2) Rear bracket corner | (5) Lower bracket |
| (3) Rear side bracket | (6) Bumper beam reinforcement |


Tightening torque: N·m (kgf-m, ft-lb)

T: 45 (4.59, 33.2)

General Description

EXTERIOR/INTERIOR TRIM


4 door model

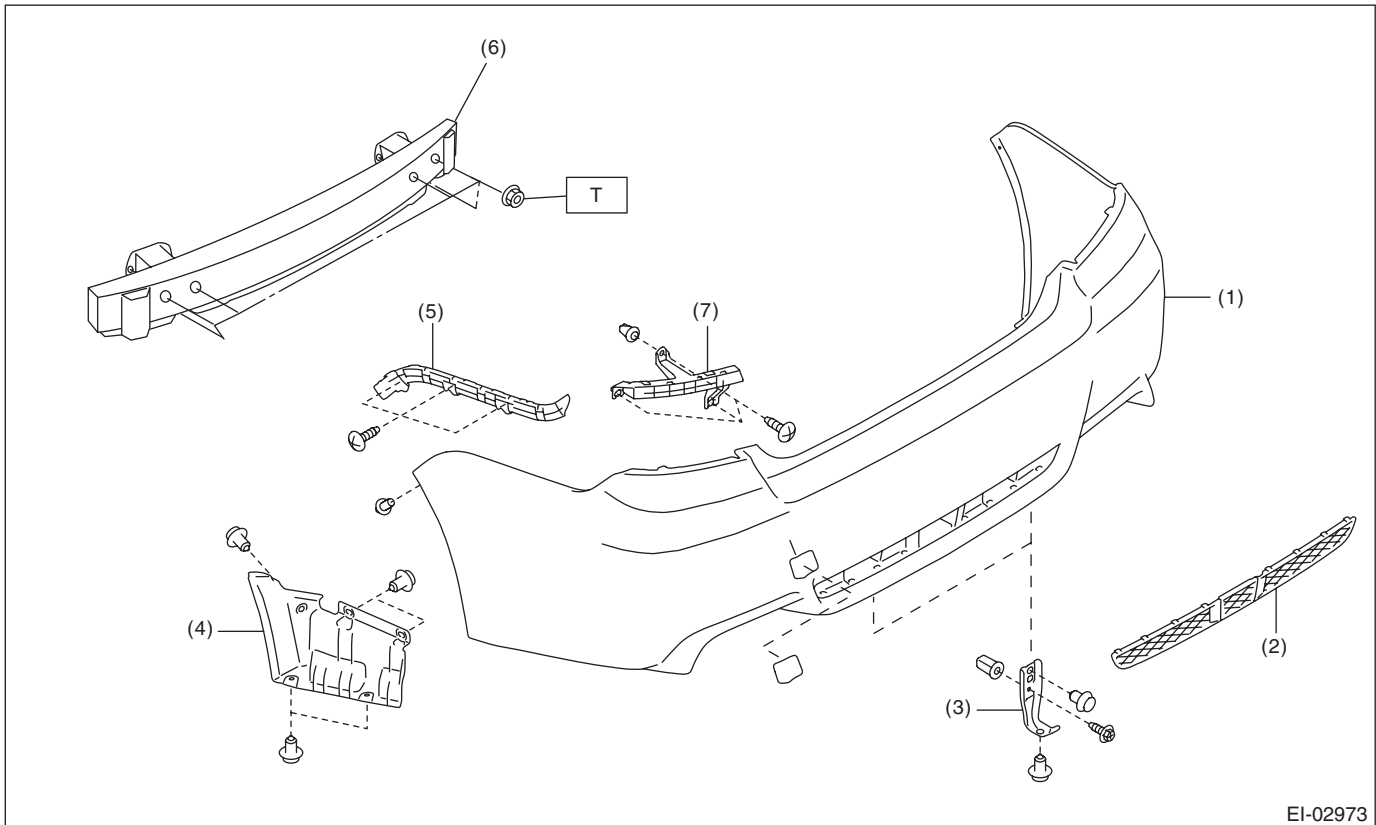

- | | |
|---------------------------|-------------------------------|
| (1) Bumper face | (5) Rear side bracket |
| (2) Cover bumper rear | (6) Bumper beam reinforcement |
| (3) Lower bracket | (7) Rear bracket corner |
| (4) Rear side cover lower | |


Tightening torque: N-m (kgf-m, ft-lb)
T: 45 (4.59, 33.2)

7. MUD GUARD

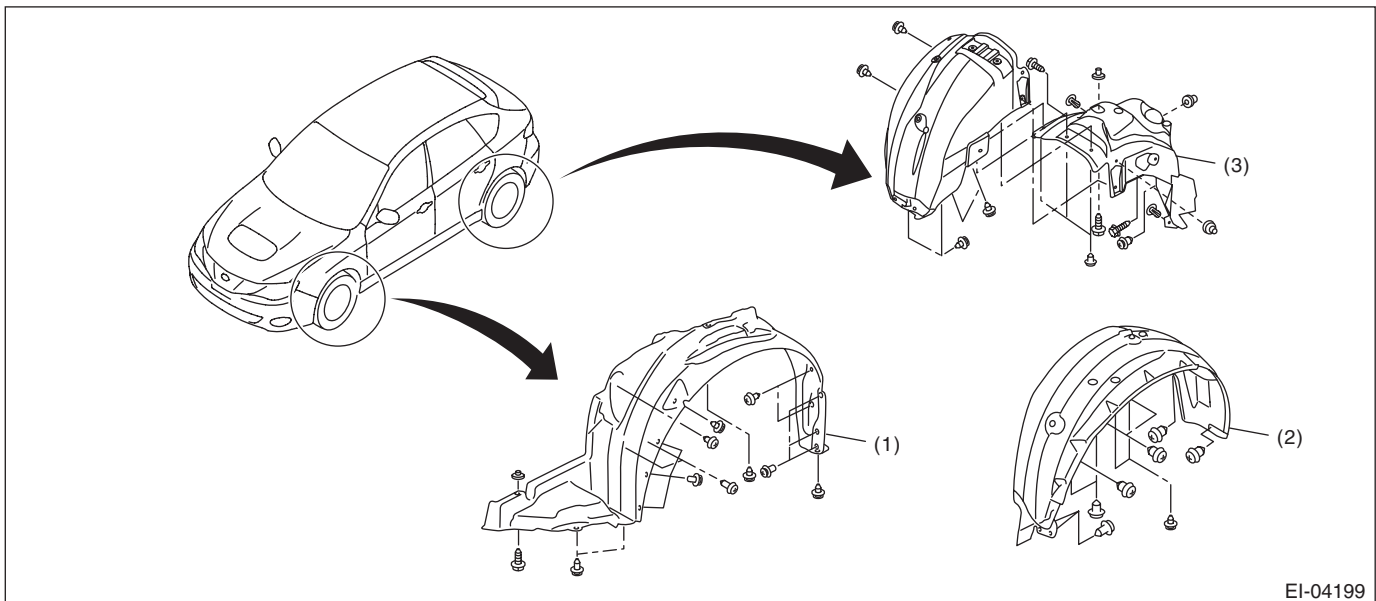

- | | | |
|---------------------|-----------------------|-----------------------|
| (1) Front mud guard | (2) Rear mud guard LH | (3) Rear mud guard RH |
|---------------------|-----------------------|-----------------------|

8. COWL PANEL

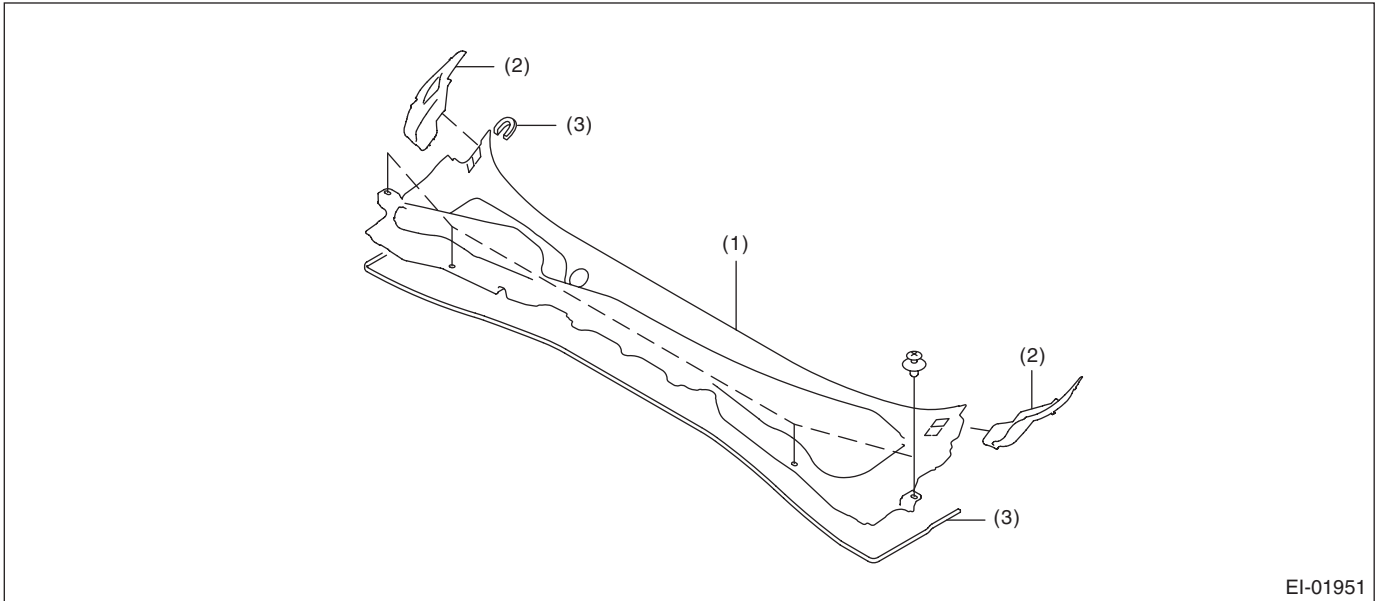


EI-01951

(1) Cowl panel

(2) Cowl panel side

(3) Gasket

9. ROOF SPOILER

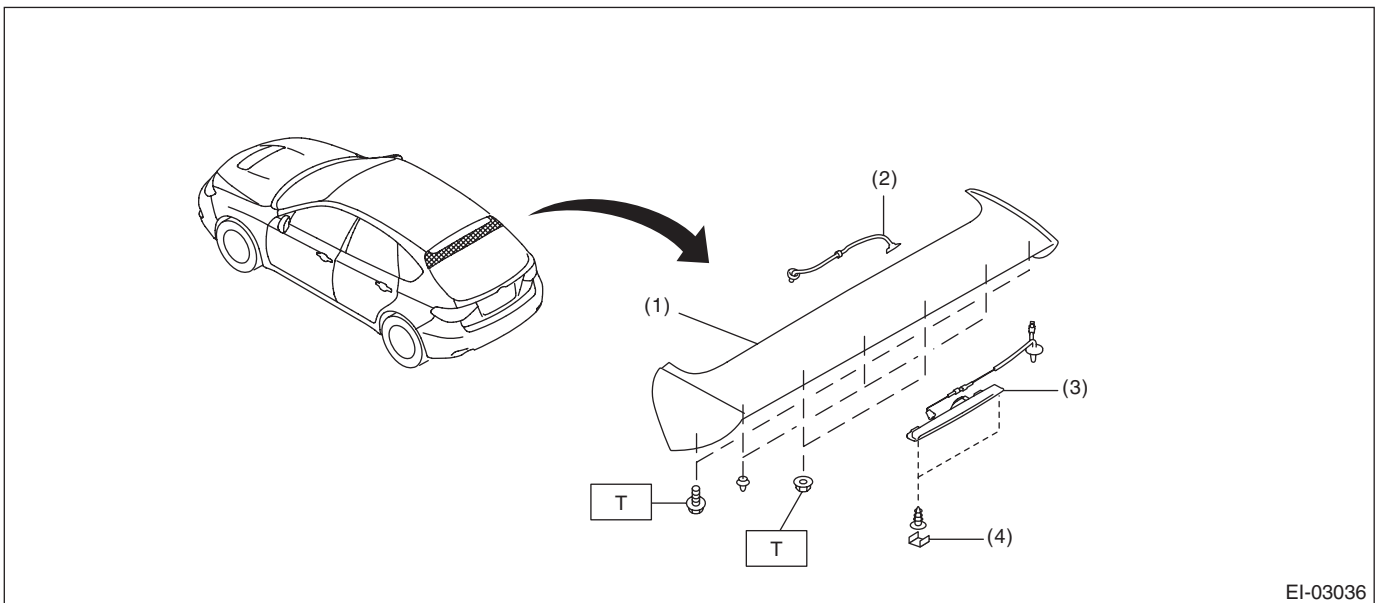

EI-03036

(1) Roof spoiler

(2) Washer nozzle

(3) High-mounted stop light

(4) Cap

Tightening torque: N·m (kgf-m, ft-lb)


T: 7.5 (0.76, 5.5)

General Description

EXTERIOR/INTERIOR TRIM

10.REAR SPOILER

Small type

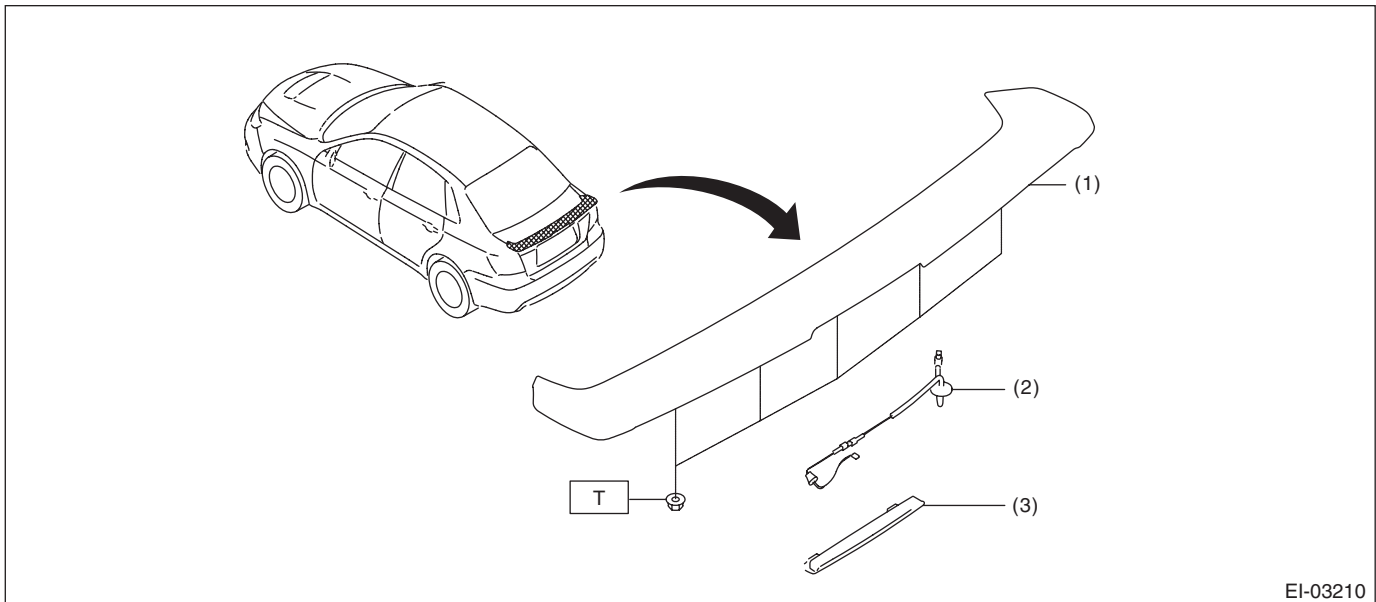


EI-03210

- (1) Rear spoiler
- (2) High mounted stop light harness

- (3) High-mounted stop light

Tightening torque: N·m (kgf·m, ft·lb)
T: 7.5 (0.76, 5.5)


Large type

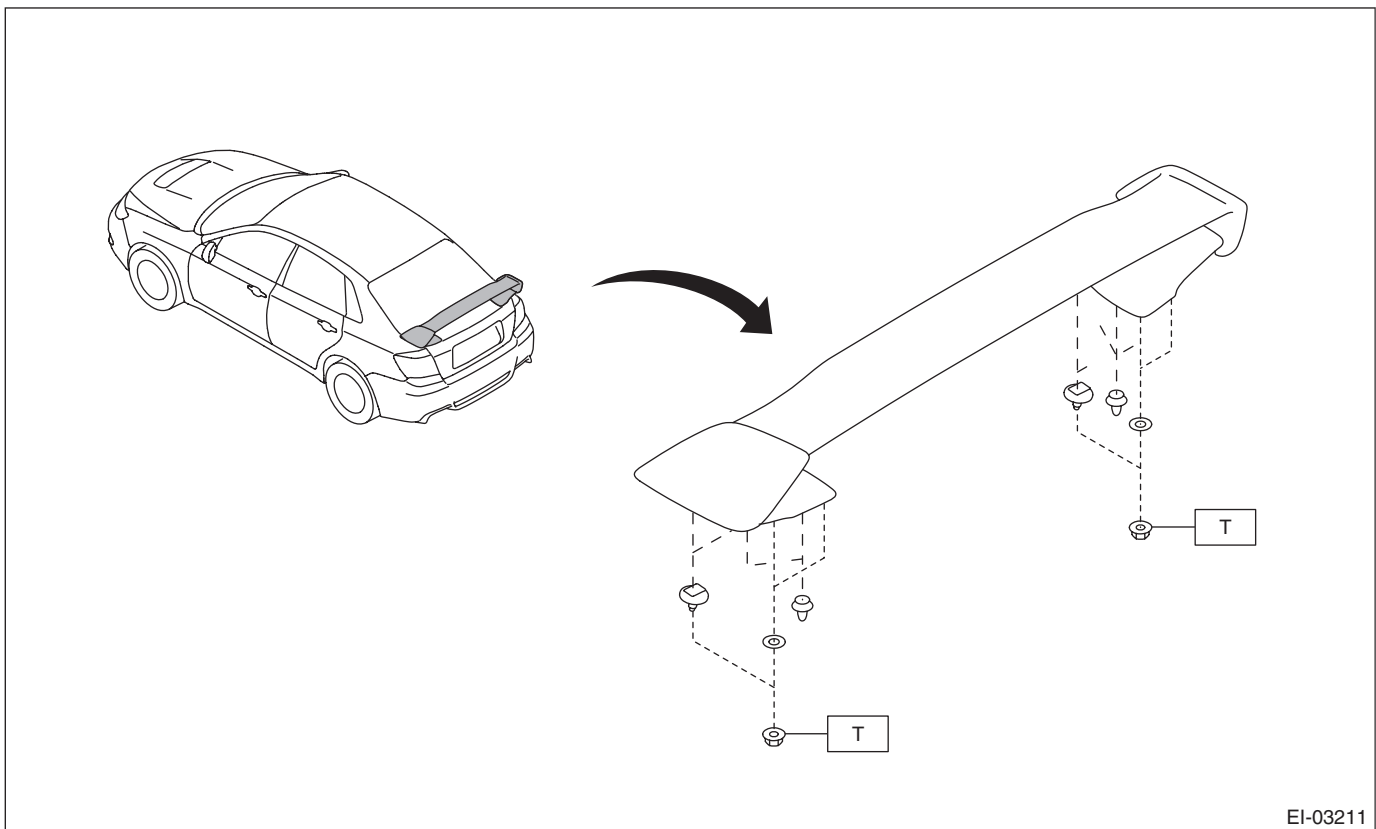


EI-03211

Tightening torque: N·m (kgf·m, ft·lb)
T: 7.5 (0.76, 5.5)

11.SIDE SILL SPOILER

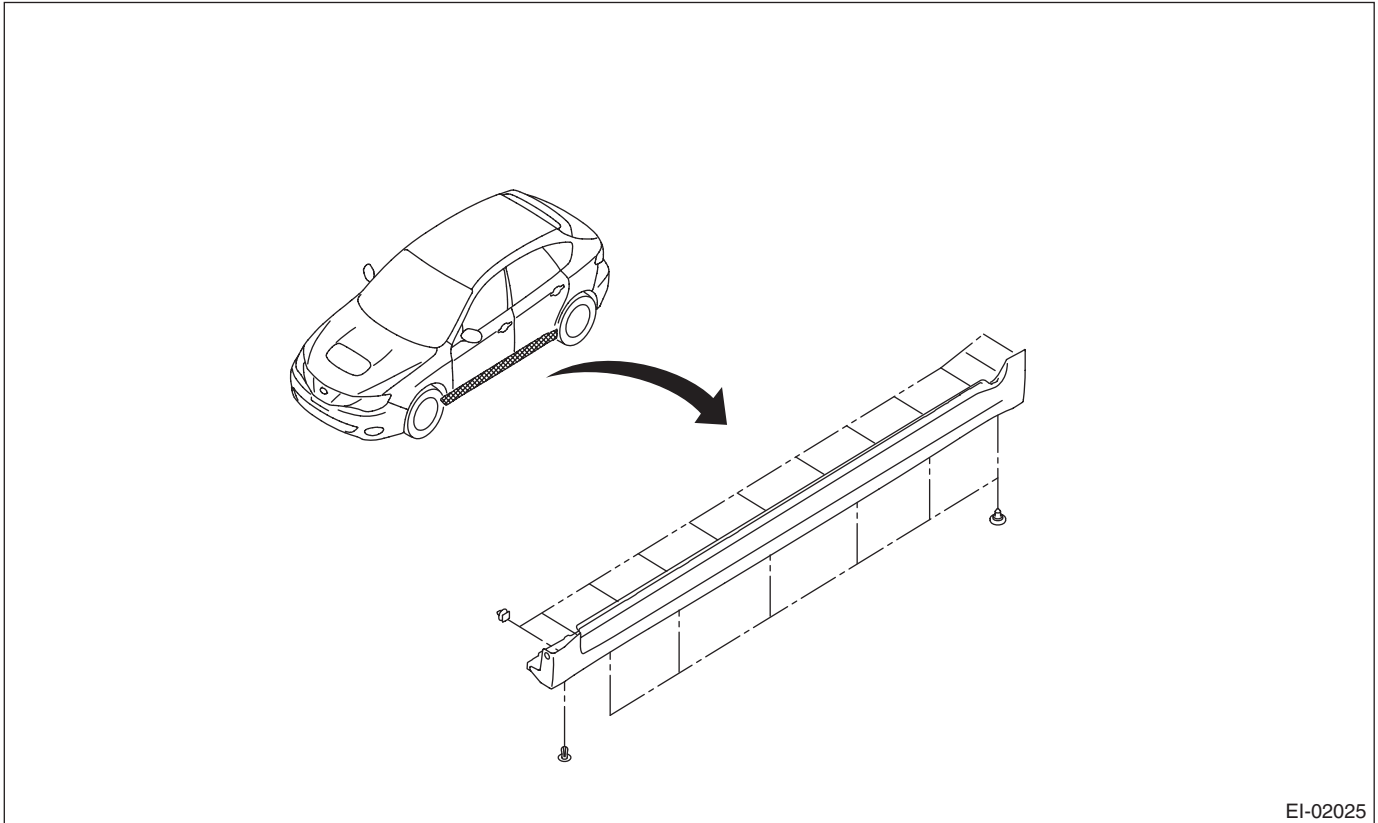

12.ROOF MOLDING

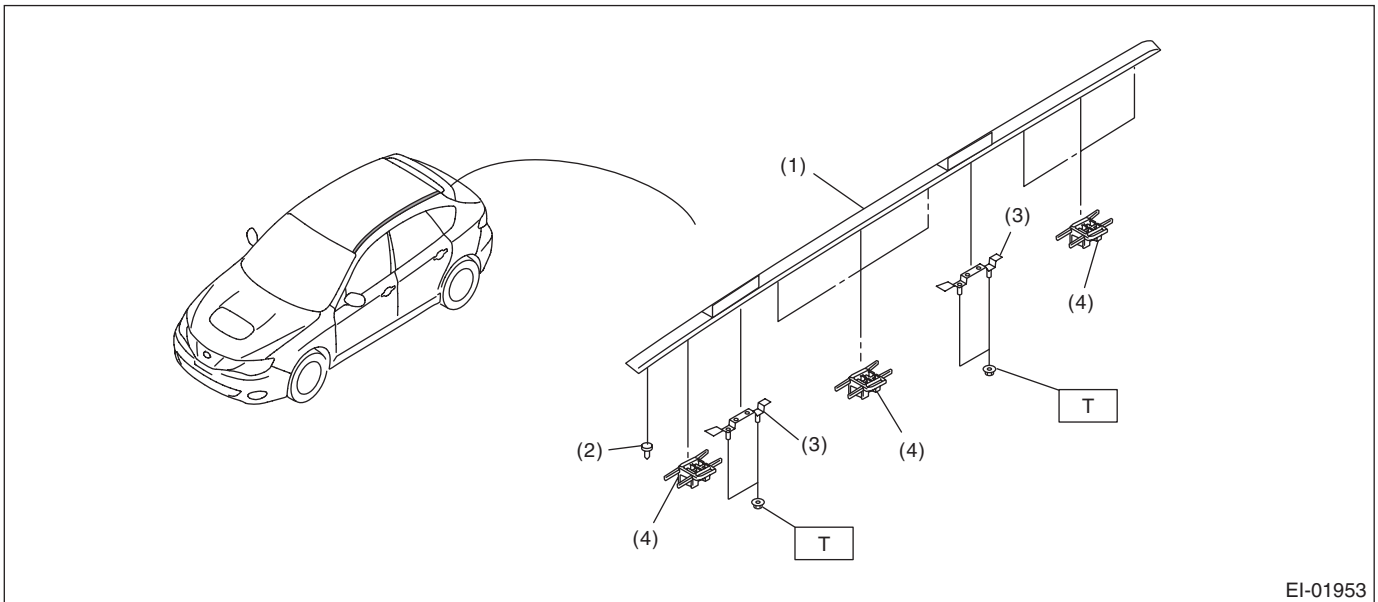

- (1) Roof molding
- (2) Rivet


- (3) Roof carrier attachment bracket
- (4) Clip

Tightening torque: N·m (kgf·m, ft·lb)
T: 7.5 (0.76, 5.5)

General Description

EXTERIOR/INTERIOR TRIM

13.REAR GATE GARNISH

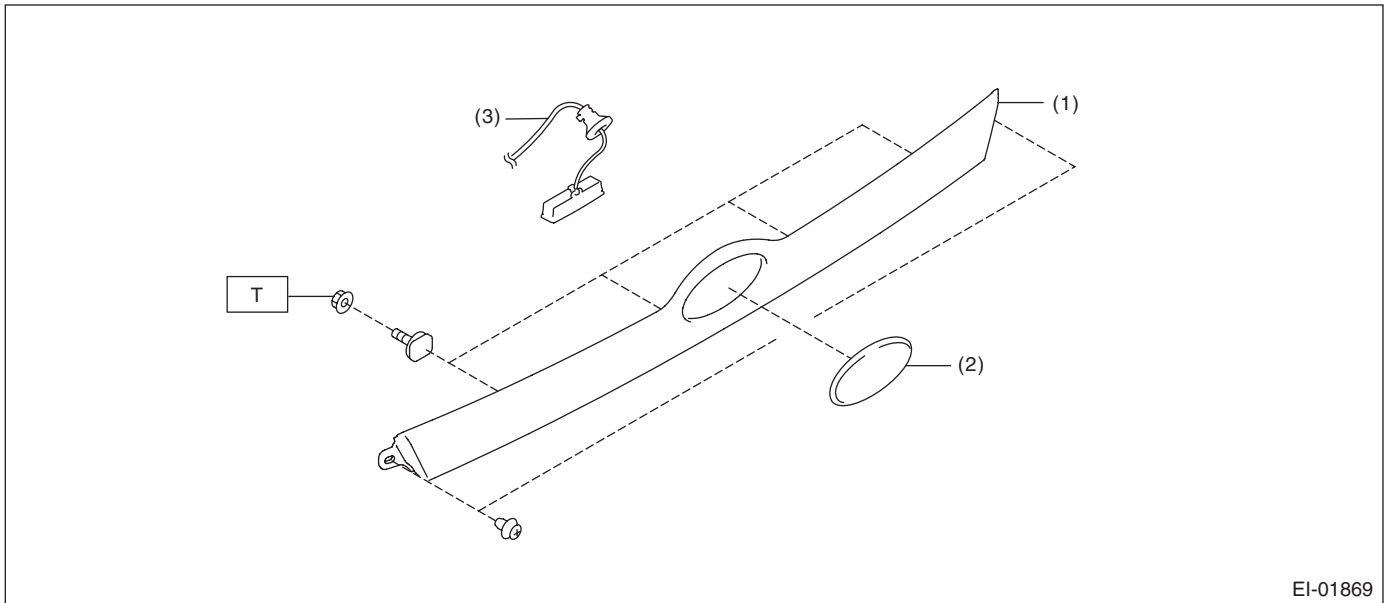

(1) Rear gate garnish


(3) Rear gate opener button harness

(2) Ornament

Tightening torque: N·m (kgf-m, ft-lb)

T: 4.5 (0.46, 3.3)

14.TRUNK LID GARNISH

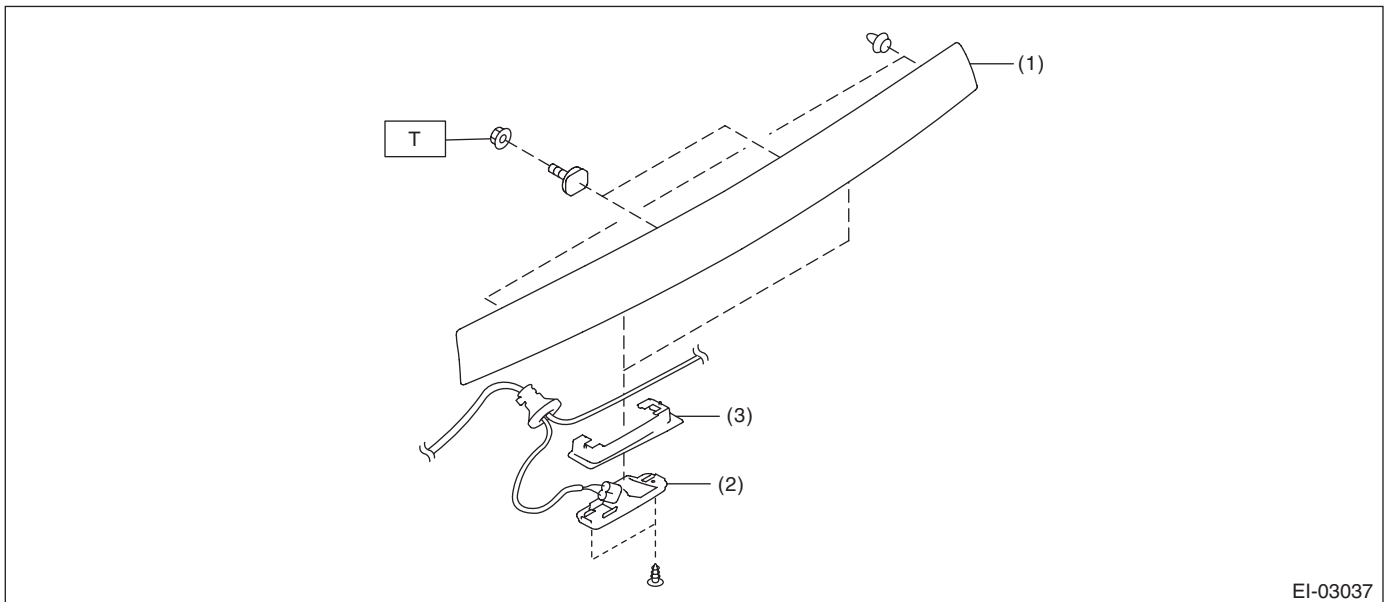

(1) Trunk lid garnish


(3) License light bracket

(2) License light ASSY

Tightening torque: N·m (kgf-m, ft-lb)

T: 4.5 (0.46, 3.3)

15.DOOR TRIM

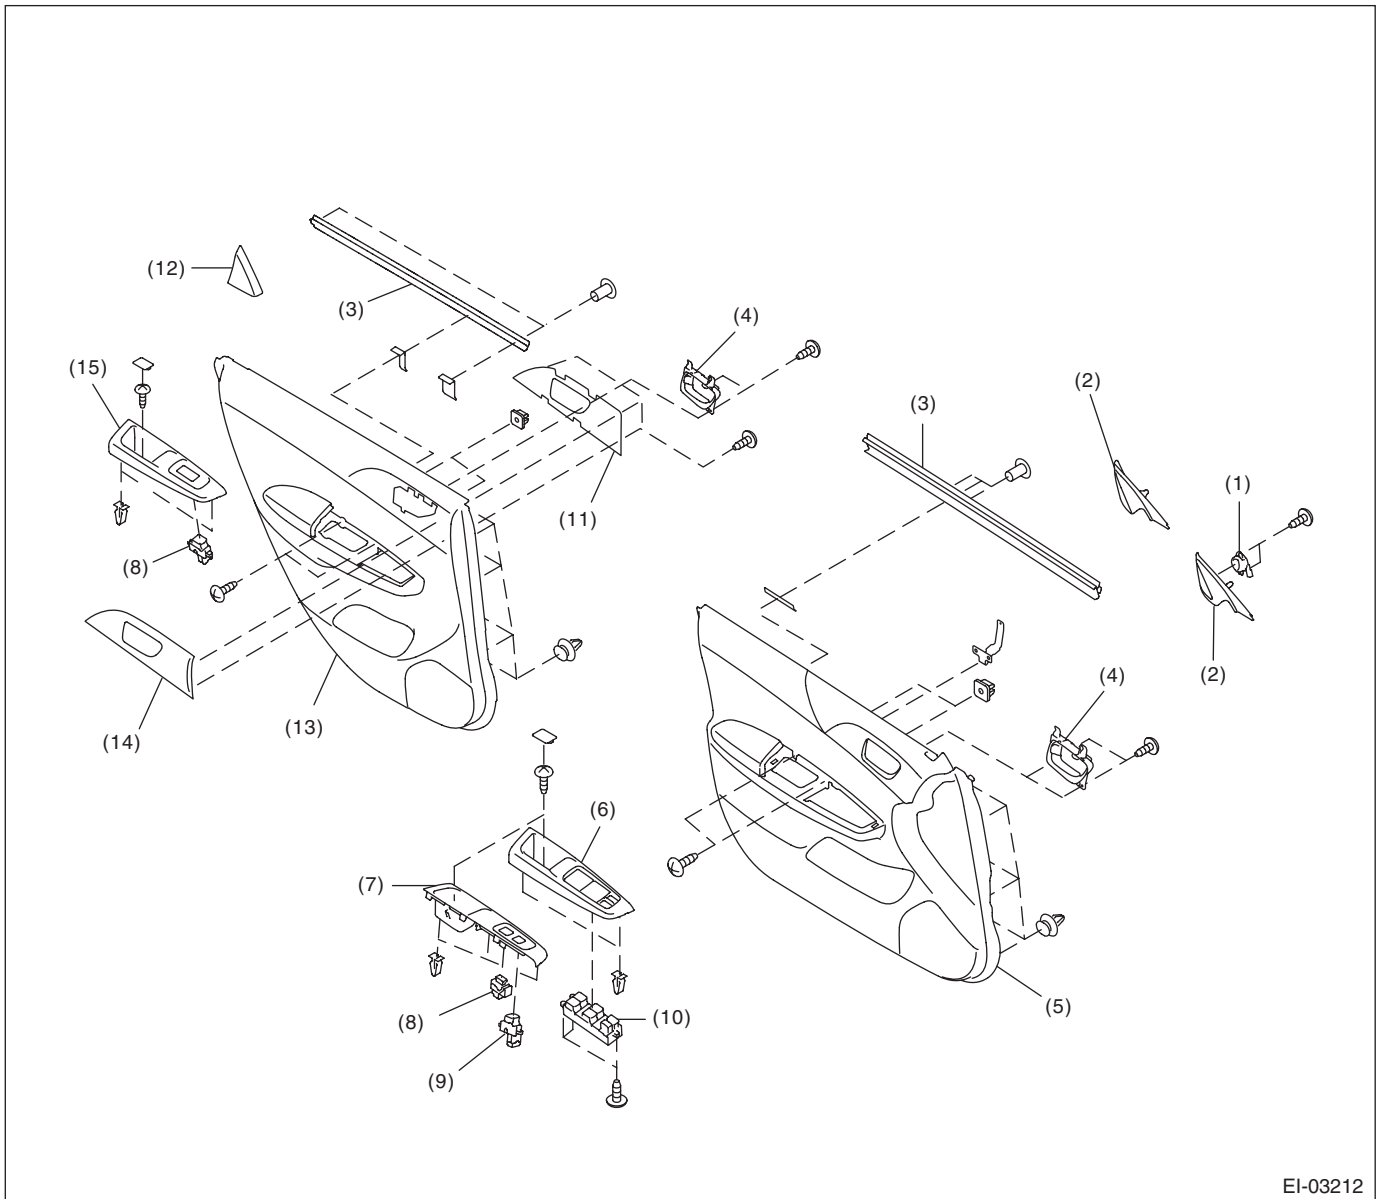

EI-03212


- | | | |
|-------------------------|------------------------------------|-------------------------------------|
| (1) Tweeter | (6) Power window switch panel LH | (11) Rear door ornament board |
| (2) Gusset cover front | (7) Power window switch panel RH | (12) Gusset cover rear |
| (3) Upper weather strip | (8) Power window sub-switch | (13) Rear door trim |
| (4) Inner remote | (9) Door lock switch | (14) Rear door ornament panel |
| (5) Front door trim | (10) Power window main switch ASSY | (15) Power window switch panel rear |

General Description

EXTERIOR/INTERIOR TRIM

16.CONSOLE BOX


Except for STI model

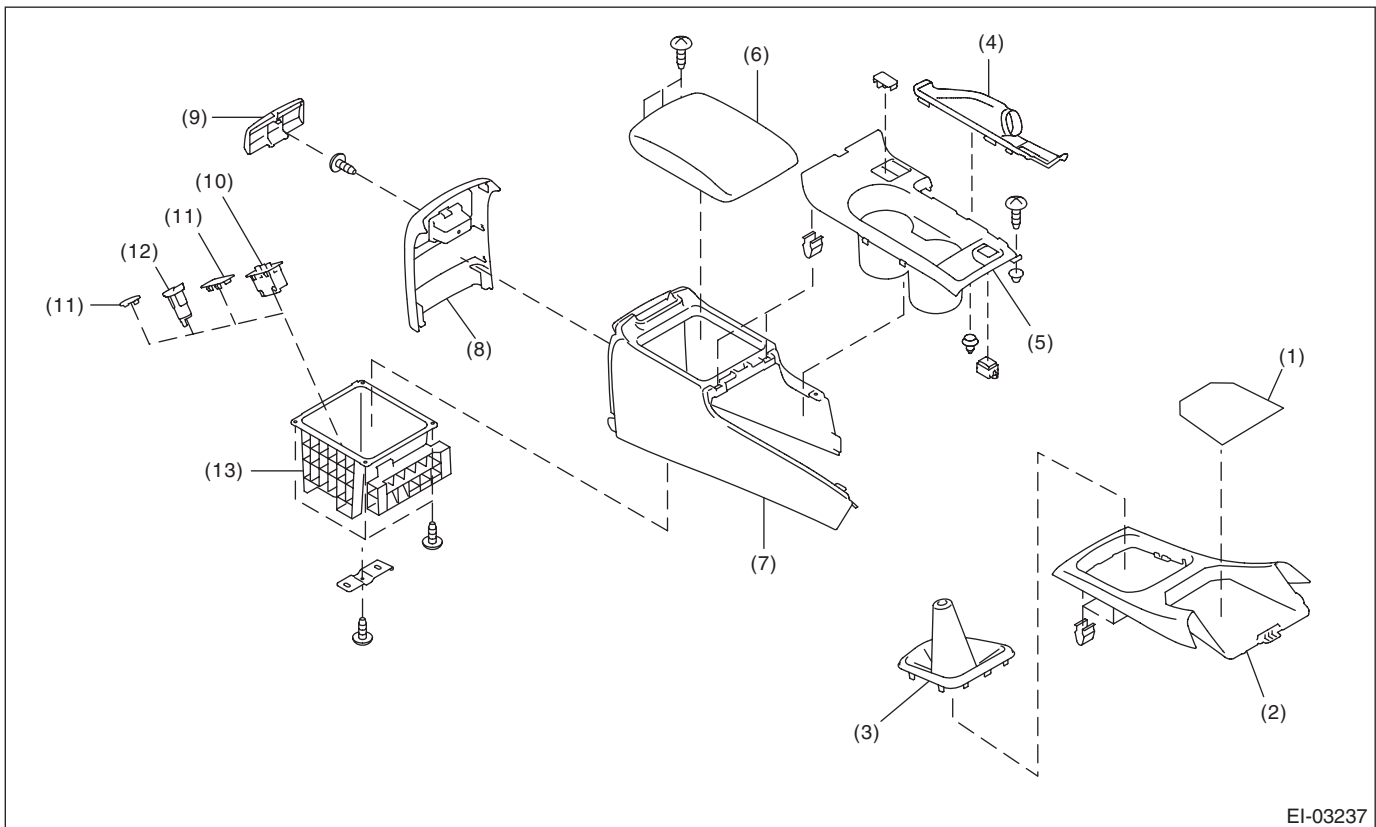

EI-03237

- | | | |
|------------------------------|---------------------------|------------------------------------|
| (1) Console front mat | (6) Upper lid | (11) Cap |
| (2) Console front panel | (7) Console box outer | (12) Accessory power supply socket |
| (3) Shift boot | (8) Console box end cover | (13) Console pocket |
| (4) Parking brake lever boot | (9) Console box end cap | |
| (5) Console cover | (10) AUX input terminal | |

STI model

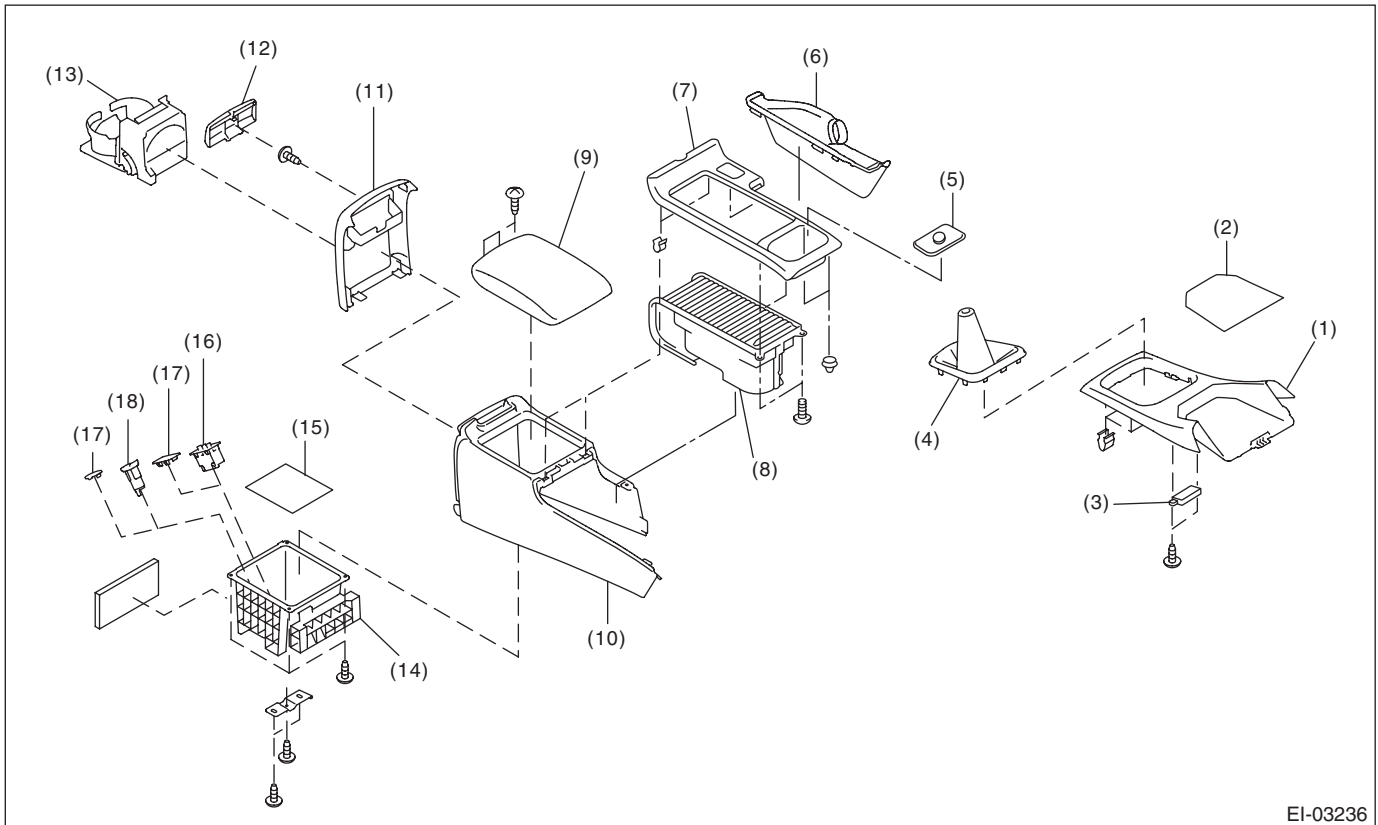


EI-03236

- | | | |
|------------------------------|----------------------------|------------------------------------|
| (1) Console front panel | (7) Console cover | (13) Rear cup holder |
| (2) Console front mat | (8) Cup holder ASSY | (14) Console pocket |
| (3) Illumination ASSY | (9) Upper lid | (15) Console mat |
| (4) Shift boot | (10) Console box outer | (16) AUX input terminal |
| (5) SI-DRIVE switch | (11) Console box end cover | (17) Cap |
| (6) Parking brake lever boot | (12) Console box end cap | (18) Accessory power supply socket |

General Description


EXTERIOR/INTERIOR TRIM

17.INSTRUMENT PANEL

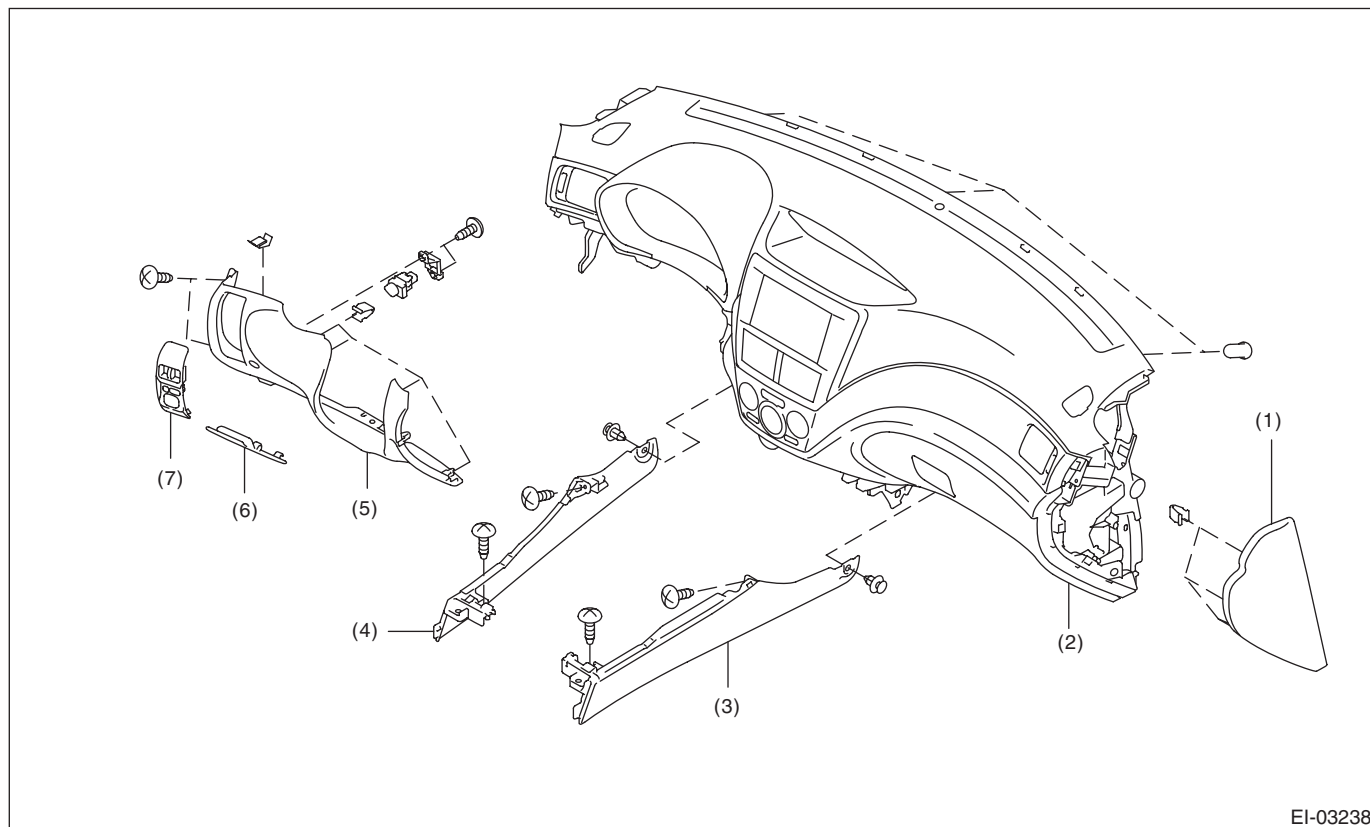

EI-03238

- | | | |
|---------------------------------|----------------------------------|-----------------------|
| (1) Instrument panel side cover | (4) Console side panel LH | (7) Switch panel ASSY |
| (2) Instrument panel ASSY | (5) Instrument panel lower cover | |
| (3) Console side panel RH | (6) Fuse box lid | |

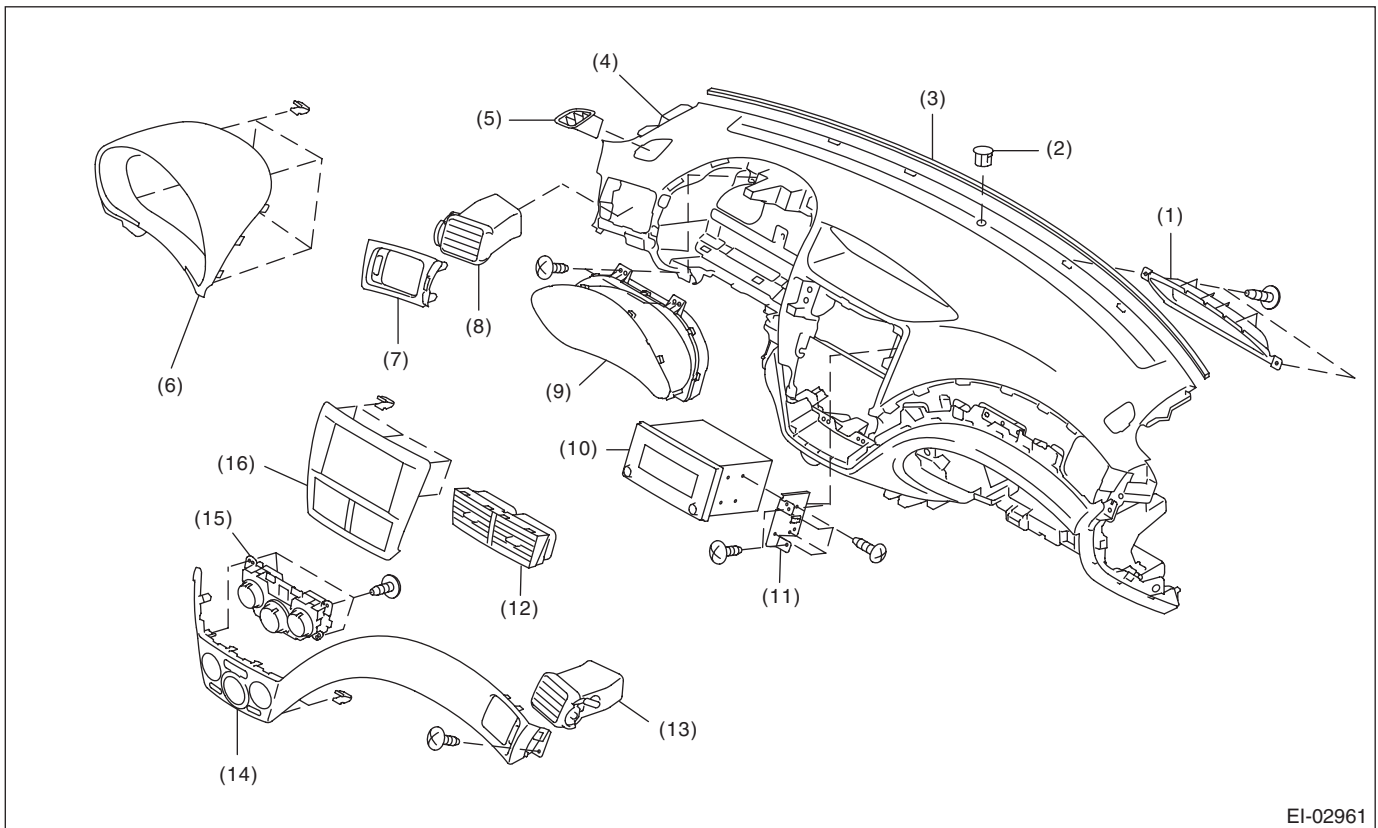


EI-02961

- | | | |
|---------------------------|-----------------------------|------------------------------|
| (1) Clock panel | (7) Ornament panel LH | (13) Air vent side grille RH |
| (2) Sunload sensor | (8) Air vent side grille LH | (14) Ornament panel RH |
| (3) Cushion | (9) Combination meter ASSY | (15) Control module |
| (4) Instrument panel ASSY | (10) Audio | (16) Center panel |
| (5) Defroster side grille | (11) Audio bracket | |
| (6) Meter visor ASSY | (12) Air vent grille CTR | |

General Description

EXTERIOR/INTERIOR TRIM

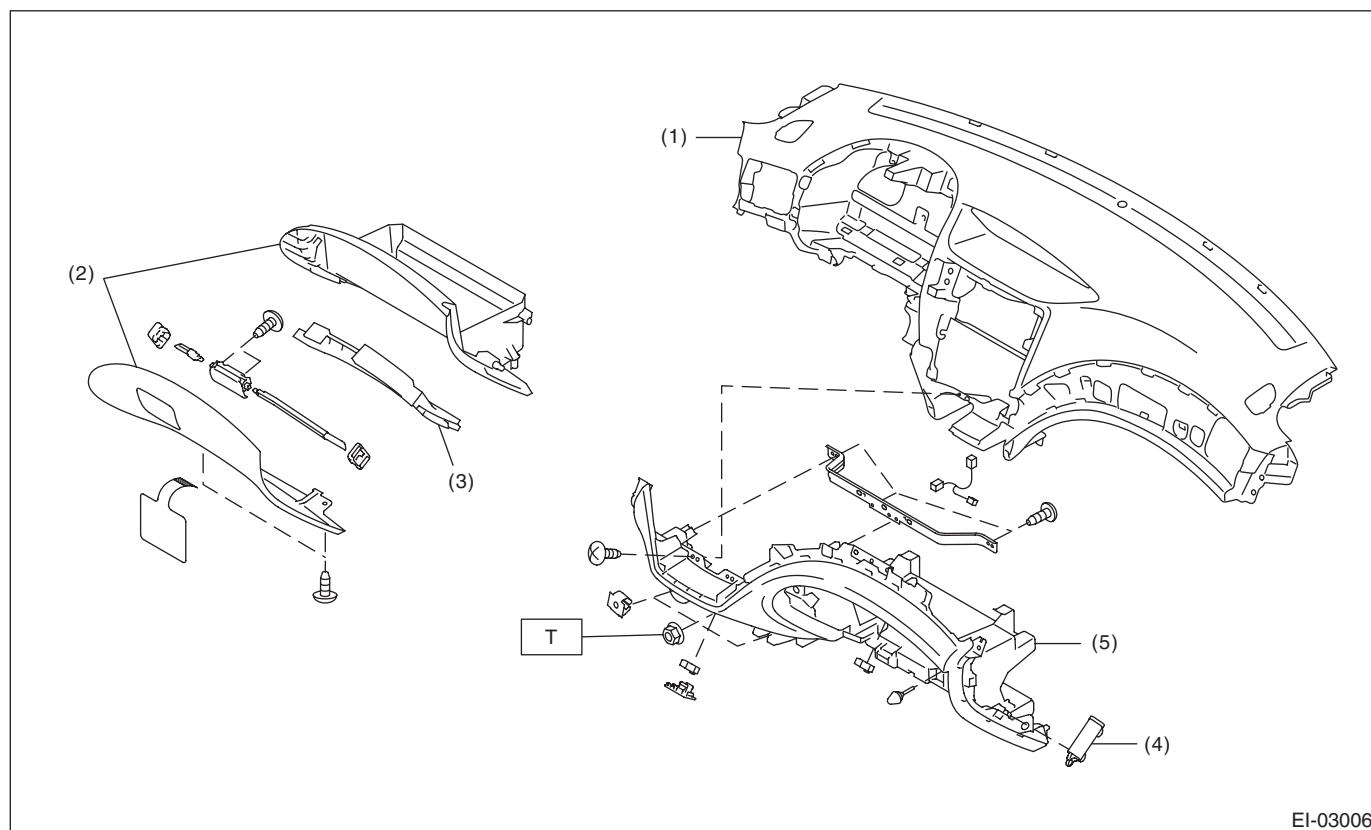

(1) Instrument panel pad and frame ASSY

(2) Glove box lid ASSY


(3) Glove box pad

(4) Glove box damper

(5) Instrument panel lower

Tightening torque: N·m (kgf·m, ft·lb)

T: 7.5 (0.76, 5.5)

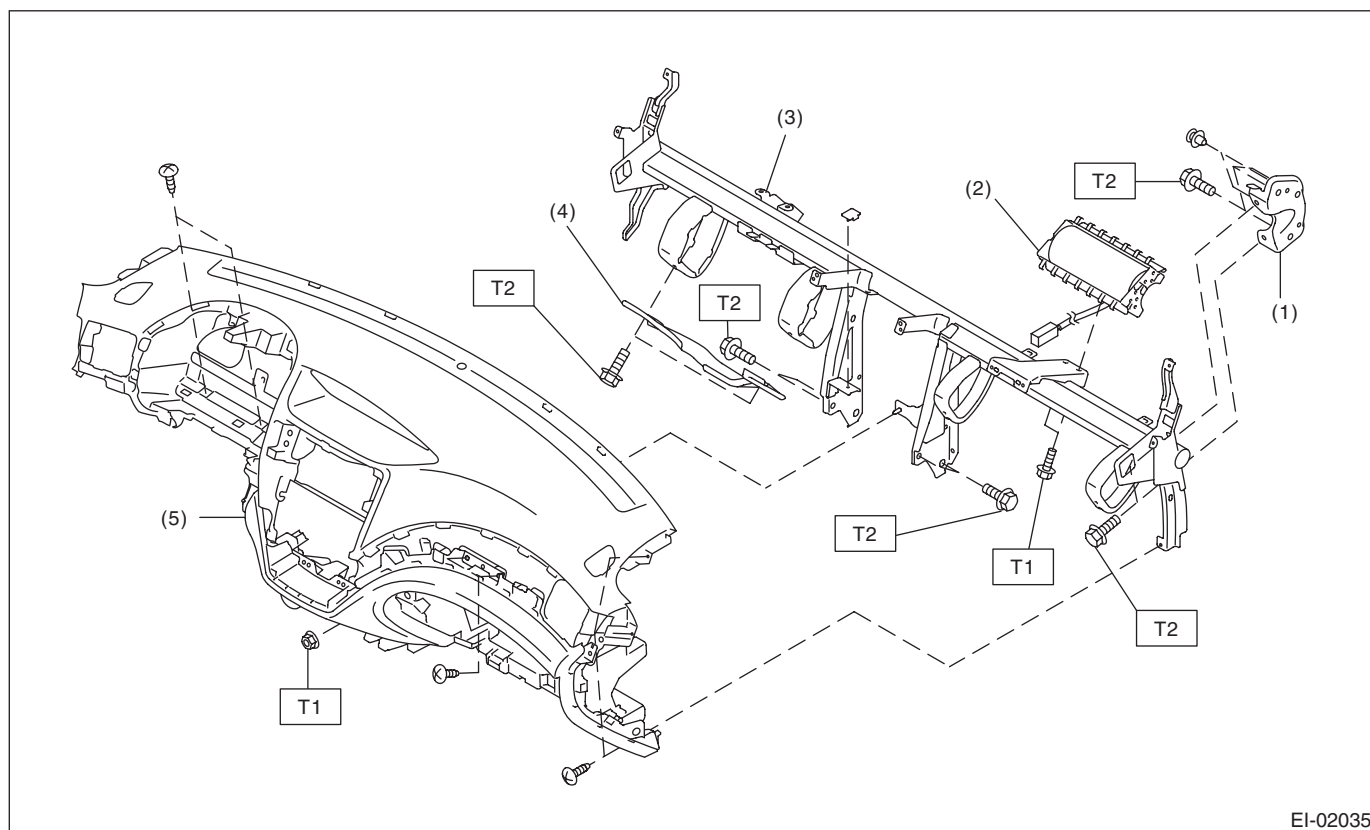

EI-02035

- | | |
|------------------------------------|---------------------------|
| (1) Steering support beam bracket | (4) Knee guard panel |
| (2) Passenger's airbag module ASSY | (5) Instrument panel ASSY |
| (3) Steering support beam ASSY | |


Tightening torque: N·m (kgf·m, ft·lb)

T1: 7.5 (0.76, 5.5)

T2: 25 (2.55, 18.4)

General Description


EXTERIOR/INTERIOR TRIM

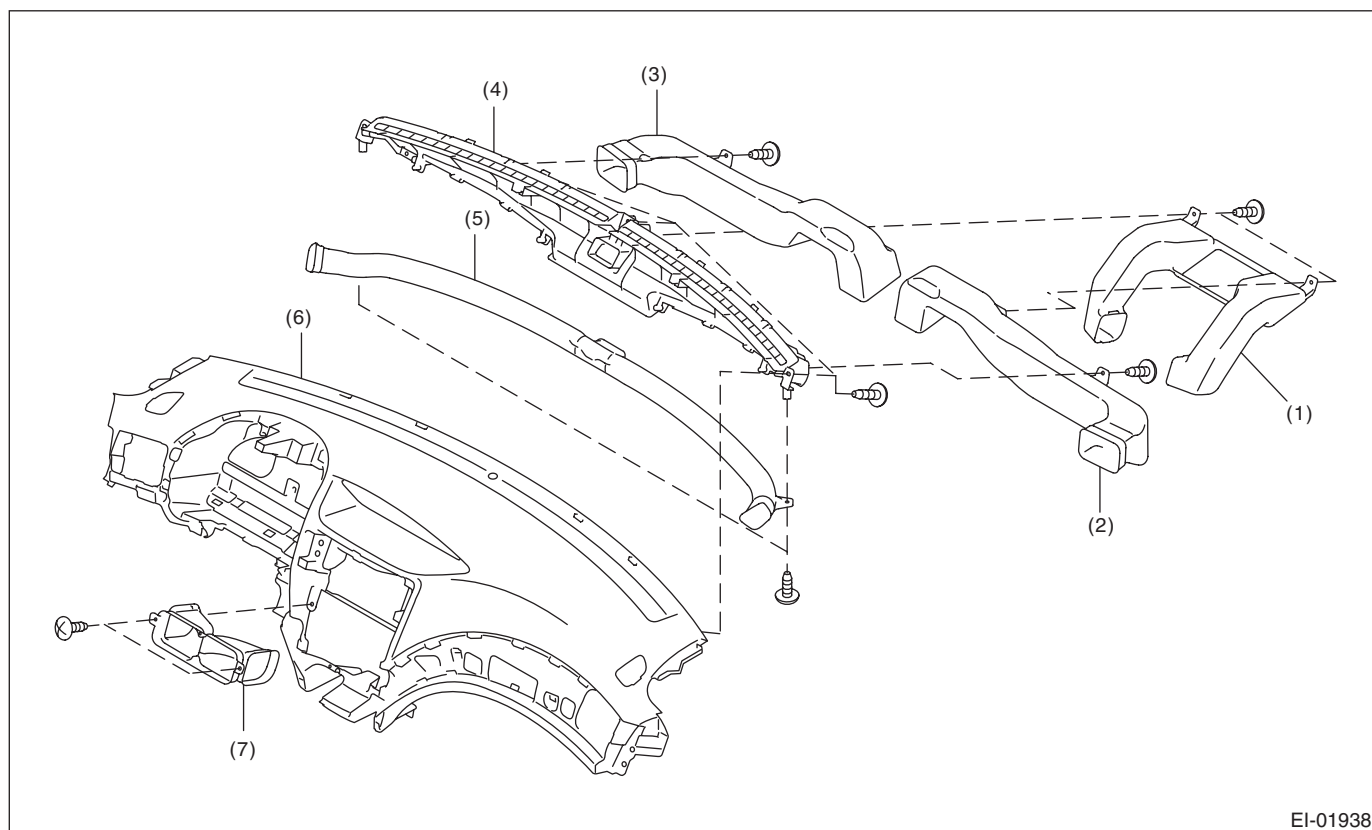

EI-01938

- | | | |
|-----------------------|---|----------------------------|
| (1) Center vent duct | (4) Defroster nozzle ASSY | (7) Center vent duct front |
| (2) Side vent duct RH | (5) Side defroster | |
| (3) Side vent duct LH | (6) Instrument panel pad and frame ASSY | |

18.INNER TRIM (5 DOOR MODEL)

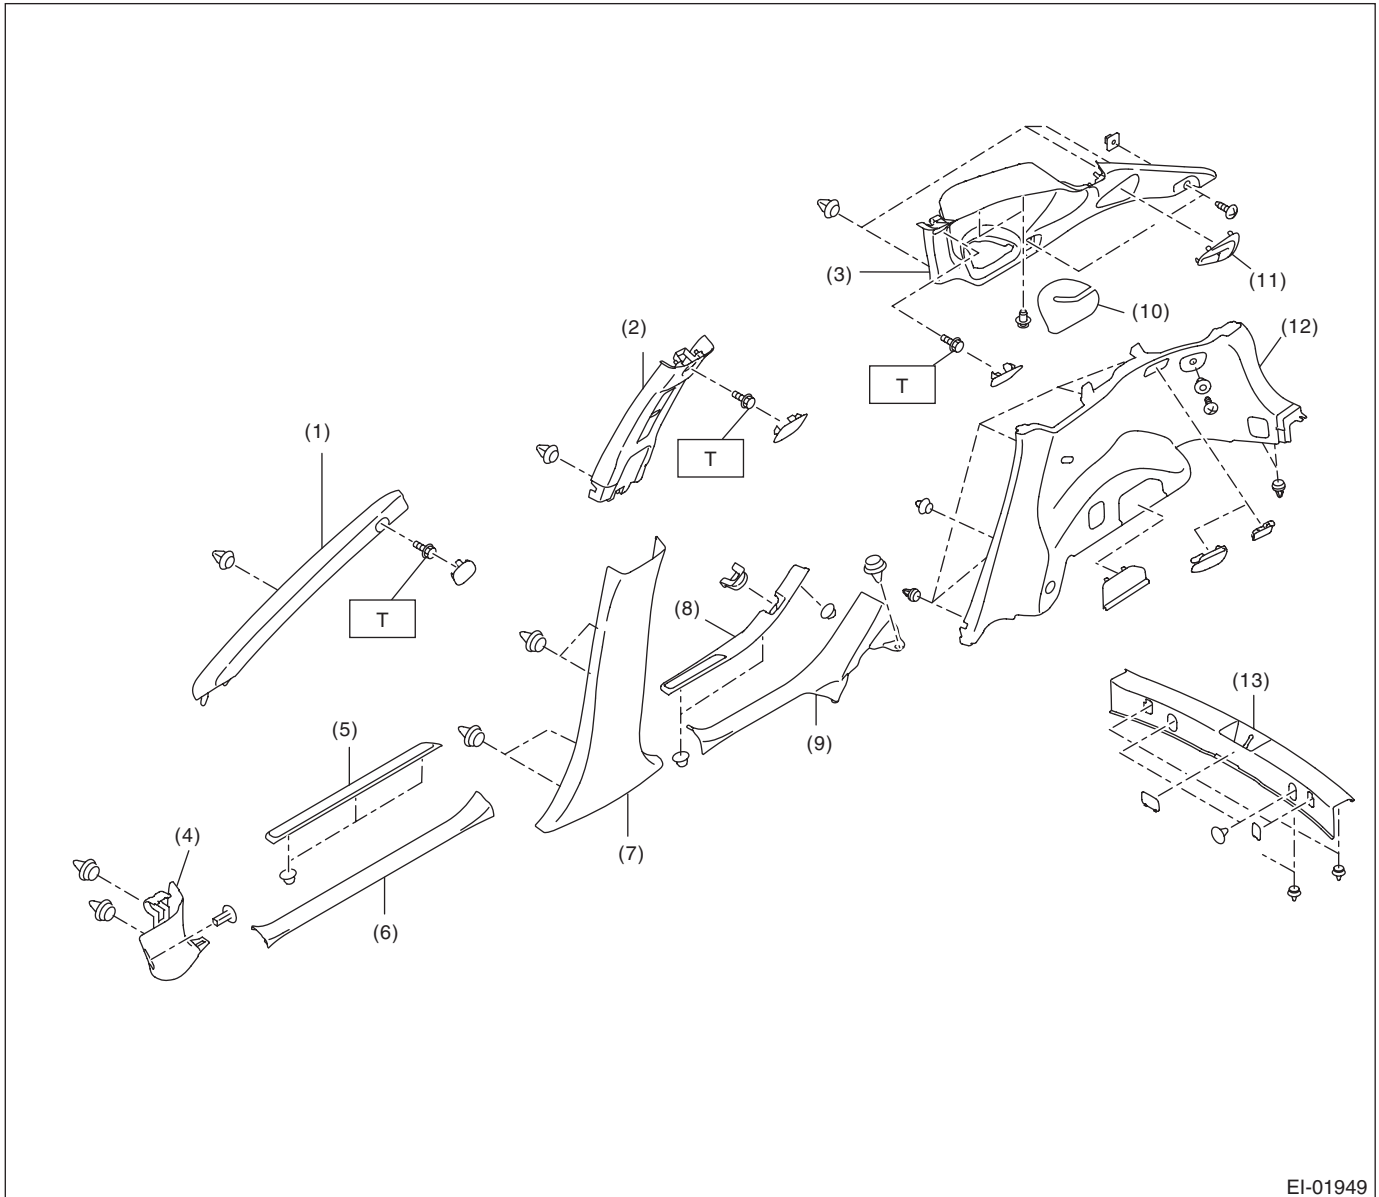

EI-01949

- | | |
|-------------------------------|------------------------------|
| (1) Front pillar upper trim | (7) Center pillar lower trim |
| (2) Center pillar upper trim | (8) Rear outside scuff plate |
| (3) Rear quarter upper trim | (9) Rear inside scuff plate |
| (4) Front pillar lower trim | (10) Side seat belt cover |
| (5) Front outside scuff plate | (11) Center seat belt cover |
| (6) Front inside scuff plate | |

- | |
|------------------------------|
| (12) Rear quarter lower trim |
| (13) Luggage room end cover |


Tightening torque: N-m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

General Description

EXTERIOR/INTERIOR TRIM

19.INNER TRIM (4 DOOR MODEL)

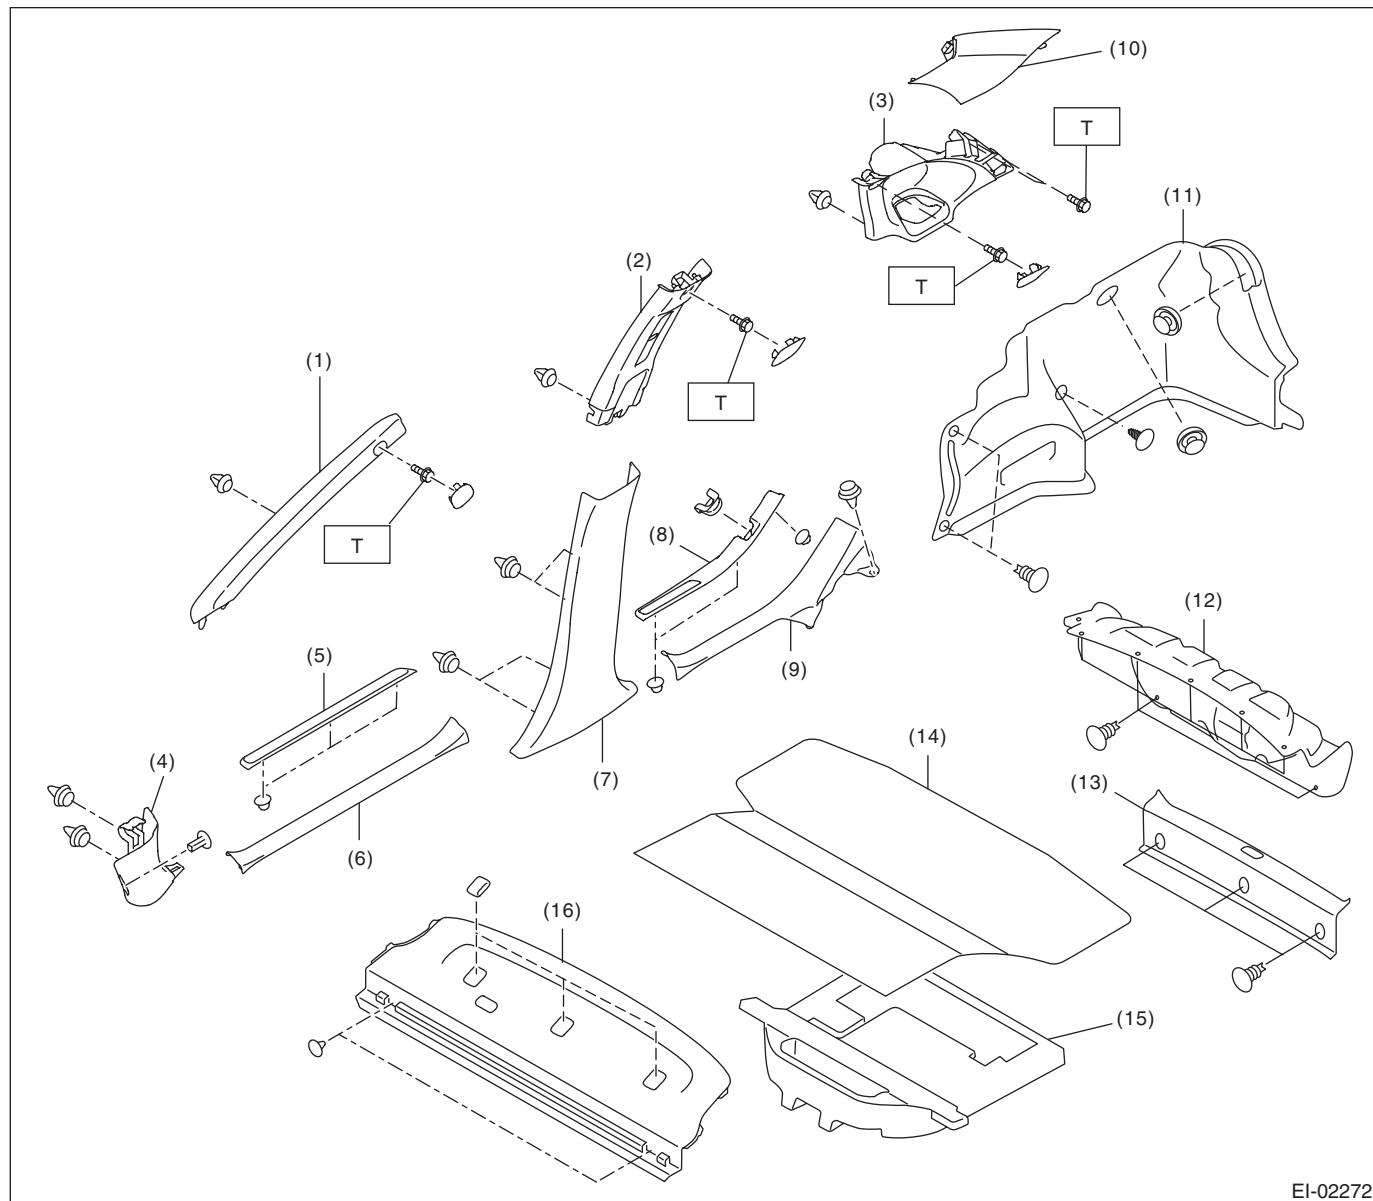

EI-02272


- (1) Front pillar upper trim
- (2) Center pillar upper trim
- (3) Quarter upper trim, front
- (4) Front pillar lower trim
- (5) Front outside scuff plate
- (6) Front inside scuff plate
- (7) Center pillar lower trim

- (8) Rear outside scuff plate
- (9) Rear inside scuff plate
- (10) Quarter upper trim, rear
- (11) Quarter lower trim
- (12) Trunk lid trim
- (13) Trunk room end cover

- (14) Trunk room mat
- (15) Sub trunk box
- (16) Rear shelf trim

Tightening torque: N-m (kgf-m, ft-lb)
T: 7.5 (0.76, 5.5)

20.REAR GATE TRIM

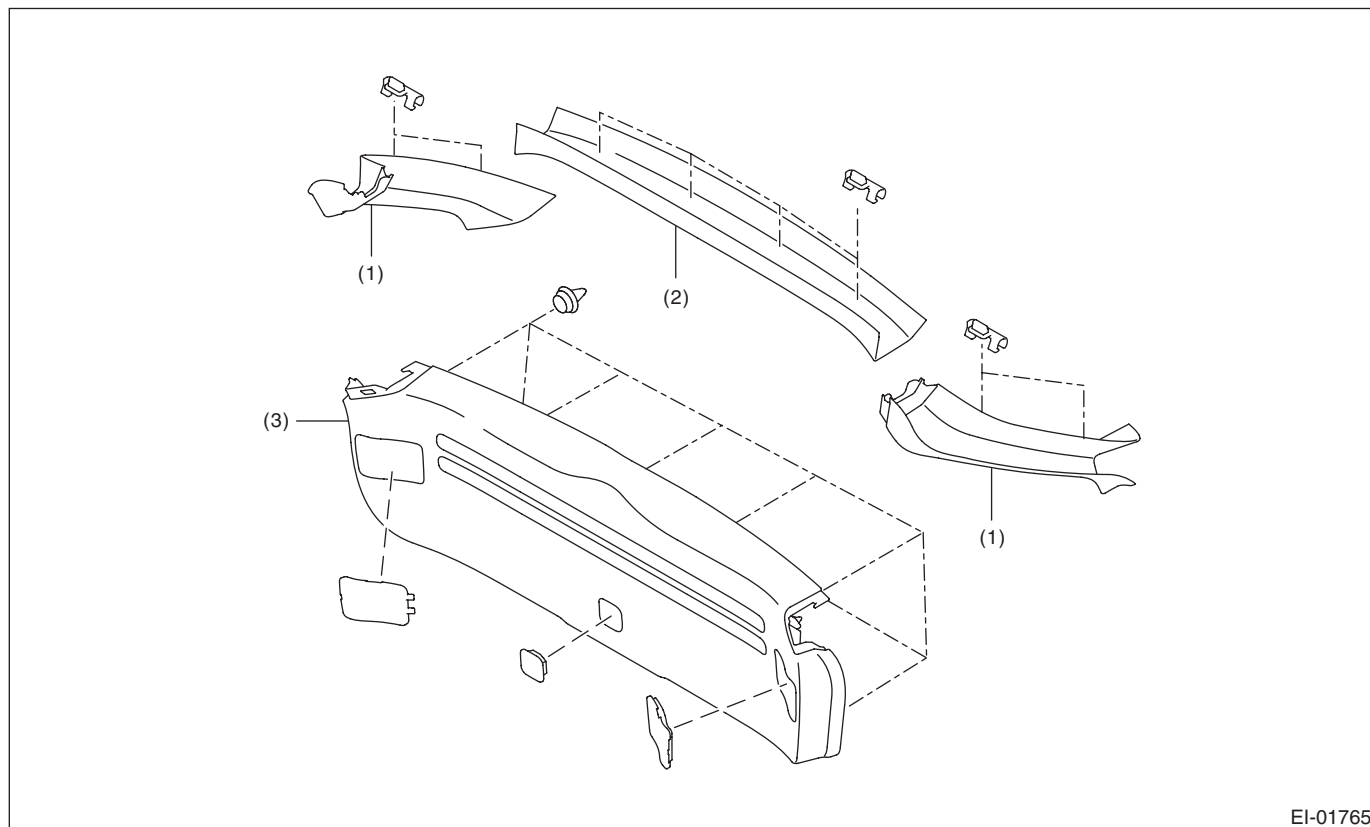


EI-01765

(1) Rear gate pillar trim

(2) Rear gate upper trim

(3) Rear gate lower trim

21.ROOF TRIM

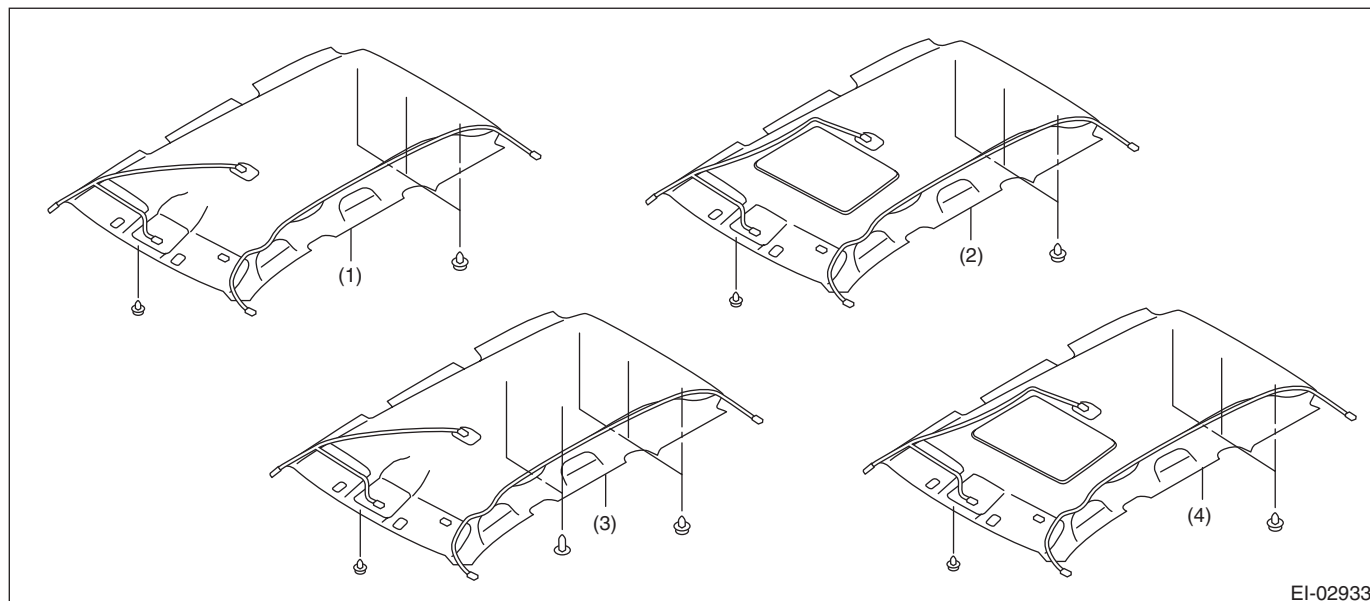

EI-02933

(1) Model without sunroof (5 door model)

(3) Model without sunroof (4 door model)


(4) Model with sunroof (4 door model)

(2) Model with sunroof (5 door model)

General Description

EXTERIOR/INTERIOR TRIM

22.ROOM INNER PARTS

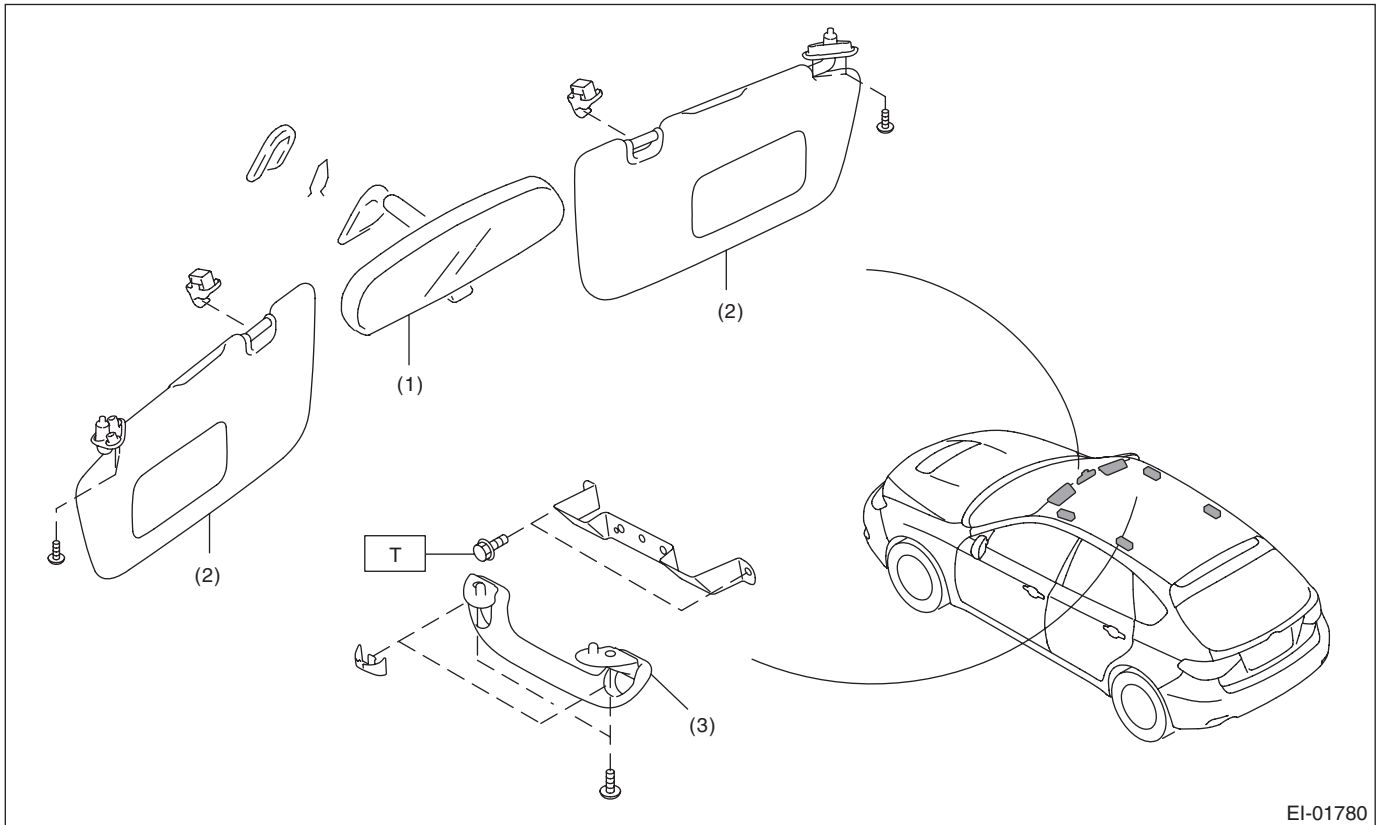


EI-01780

- (1) Room mirror
(2) Sun visor

- (3) Assist grip

Tightening torque: N·m (kgf·m, ft·lb)
T: 7.5 (0.76, 5.5)

23.HEAT SHIELD COVER

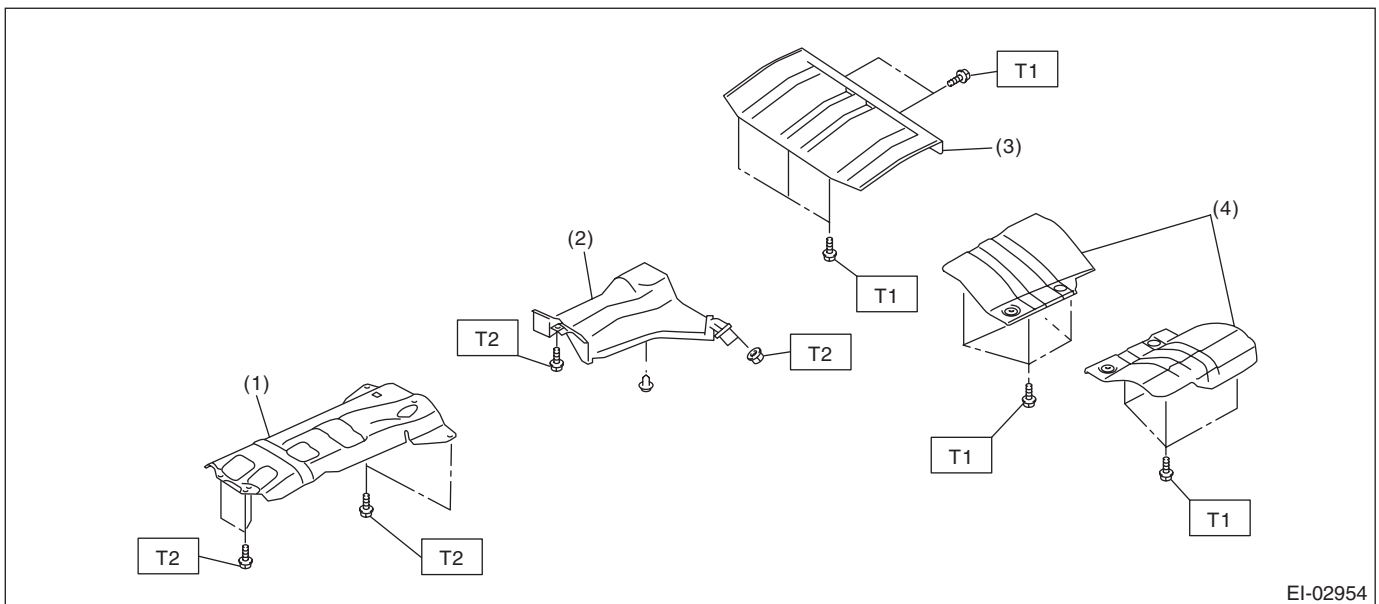

EI-02954

- (1) Front heat shield cover

- (3) Rear heat shield cover (5 door model)

- (2) Center heat shield cover

- (4) Rear heat shield cover (4 door model)

Tightening torque: N·m (kgf·m, ft·lb)

T1: 10 (1.02, 7.4)

T2: 18 (1.84, 13.3)

General Description

EXTERIOR/INTERIOR TRIM

B: PREPARATION TOOL

TOOL NAME	REMARKS
Clip remover	Used for removing trim. • KTC AP201-10A • KTC AP201-N • KTC AP203-10A • KTC AP20L-10B Or equivalent.
Clip clamp pliers	Used for removal of various clips and clamps. • KTC CCP-190 Or equivalent.