



10. Roof Spoiler

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear gate trim. <Ref. to EI-69, REMOVAL, Rear Gate Trim.>
- 3) Disconnect the connector of high-mounted stop light and the washer hose of rear washer.
- 4) Remove the bolts and nuts.

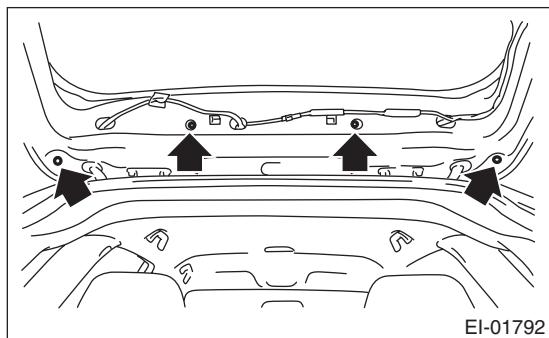

- 5) Remove the clips, and remove the roof spoiler.

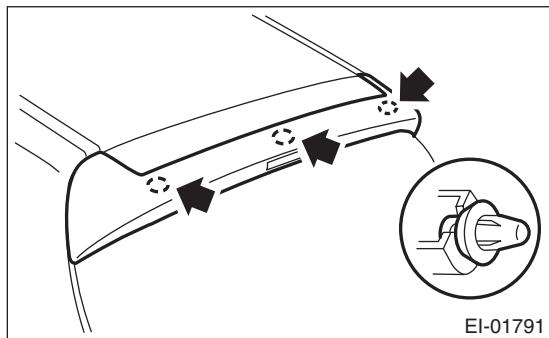

B: INSTALLATION

CAUTION:

- Improper installing may cause the water leakage, make sure the harness grommet is installed securely.
- Check that there is no foreign matter in roof spoiler between the high-mounted stop light harness or washer hose, it may cause washer defective and improper installation of spoiler.
- Check the attaching condition of cushioning materials (spacer rubbers), and replace them with new parts if they are detached from the roof spoiler.
- When replacing or reusing two nuts on the center of vehicle, apply locking agent on nuts and bolts before tightening them to the specified torque.

Install each part in the reverse order of removal.

Locking agent:

*THREE BOND 1303N (liquid type)
LOCTITE 268, 248 (solid type) 272, 243
(liquid type)
or equivalent*

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)