

11. Rear Spoiler


A: REMOVAL

1. SMALL TYPE

- 1) Disconnect the ground cable from battery.
- 2) Open the trunk lid.
- 3) Remove the high mount stop light connector (A).
- 4) Remove the rear spoiler attachment nut (B) and clip (C), and remove the rear spoiler.

CAUTION:

- When removing the nut, be careful not to drop the nut inside the trunk lid panel.
- Be careful not to cause damage during removal and installation.

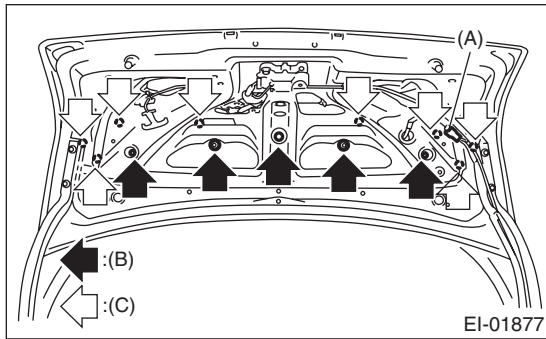


2. LARGE TYPE

- 1) Disconnect the ground cable from battery.
- 2) Open the trunk lid.
- 3) Remove the clips and the trunk lid trim.
- 4) Remove the rear spoiler attachment nut (a) and clip (b), and remove the rear spoiler.

CAUTION:

- When removing the nut, be careful not to drop the nut inside the trunk lid panel.
- Be careful not to damage the vehicle body during removal and installation.

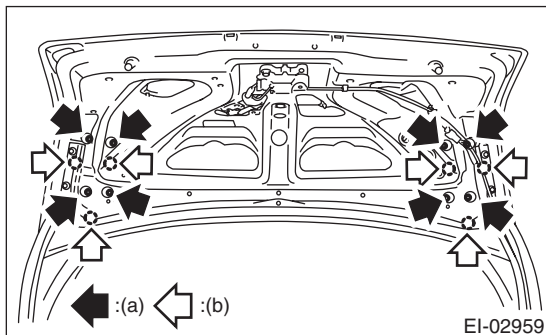

B: INSTALLATION

CAUTION:

Improper installing may cause the water leakage, make sure the harness grommet is installed securely.

- 1) Install each part in the reverse order of removal.
- 2) Clean the trunk lid and spoiler attachment surface before installation.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)