


16. Glove Box

A: REMOVAL


NOTE:

Refer to "Security and Locks" section for key cylinder replacement. <Ref. to SL-43, GLOVE BOX LID, REPLACEMENT, Key Lock Cylinders.>

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box damper.

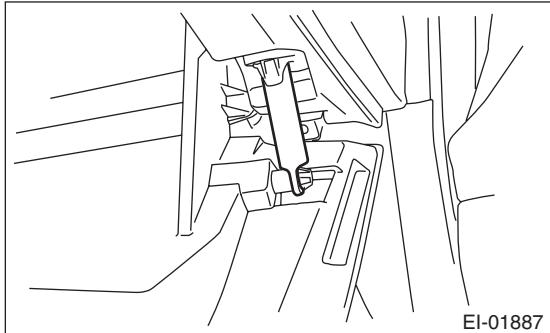

- 3) Remove the stoppers and pull the glove box lid assembly forward to remove.

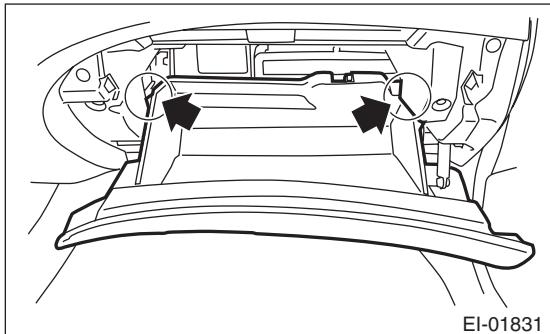

- 4) Remove the instrument panel lower. <Ref. to EI-54, INSTRUMENT PANEL LOWER, REMOVAL, Center Console.>

B: INSTALLATION

Install each part in the reverse order of removal.