



3. Front Hood Grille

A: REMOVAL


- 1) Open the front hood.
- 2) Remove the front hood insulator. <Ref. to EB-15, FRONT HOOD INSULATOR, REMOVAL, Front Hood.>
- 3) Remove screws (A) and clips (B), and remove the hood duct assembly.
- Except for STI model

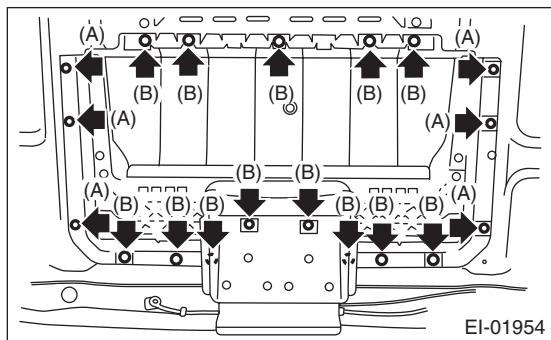

- STI model

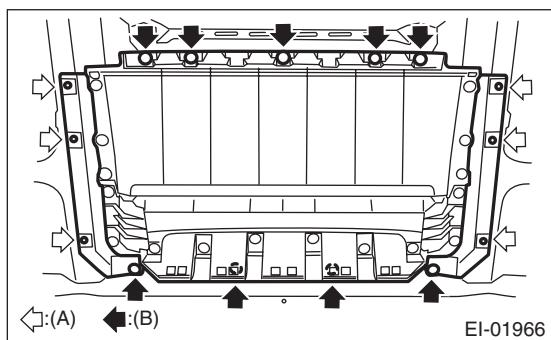

- 4) Remove the nuts (A) and clips (B), and remove the front hood grille.

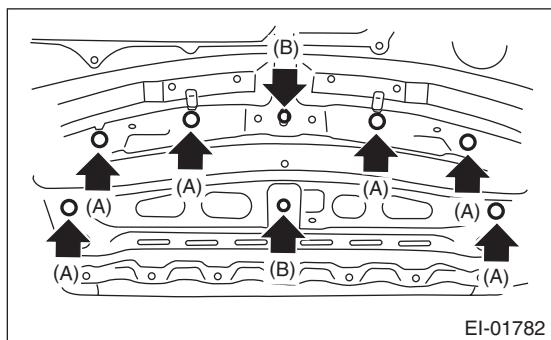


B: INSTALLATION

Install each part in the reverse order of removal.

NOTE:

Insert the hooks (B) of the front hood duct into holes (A) of the front hood.

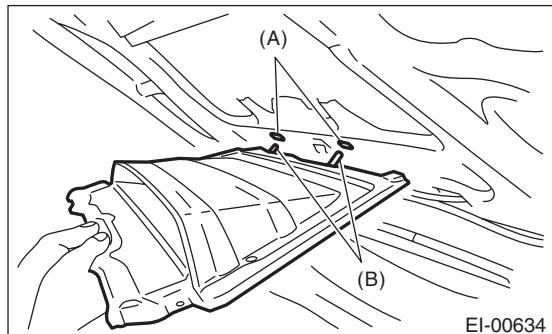

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to EI-4, FRONT HOOD GRILLE, COMPONENT, General Description.>