


31.Trunk Lid Garnish


A: REMOVAL

1) Remove the nut in the upper part of the trunk lid garnish.

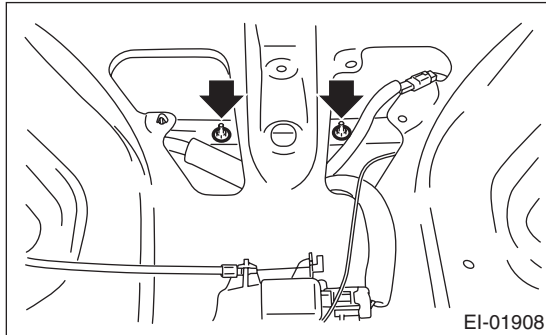

2) Disconnect the license plate light harness connector.

3) Remove the clips and the trunk lid garnish.

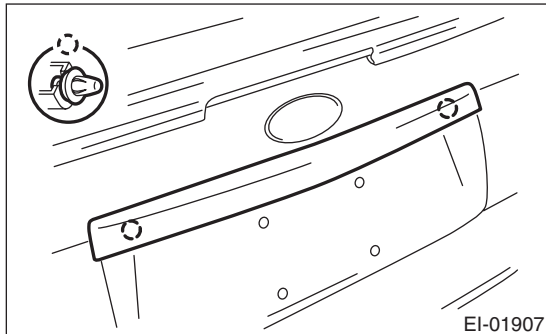

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

4.5 N·m (0.46 kgf-m, 3.3 ft-lb)