


32. Heat Shield Cover

A: REMOVAL

1. FRONT HEAT SHIELD COVER


- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from oxygen (A/F) sensor. <Ref. to EX(STI)-8, REMOVAL, Center Exhaust Pipe.>
- 3) Remove the exhaust pipe. <Ref. to EX(STI)-13, REMOVAL, Rear Exhaust Pipe.>
- 4) Remove the four bolts to remove the front heat shield cover.

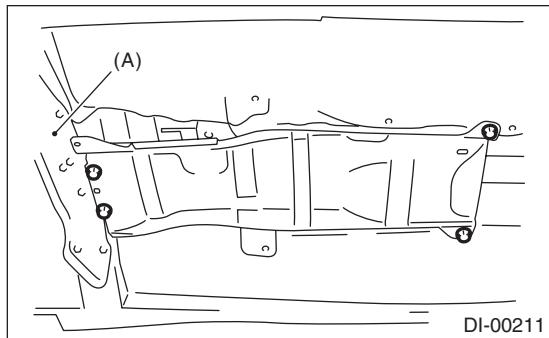

(A) Transmission mount

2. CENTER HEAT SHIELD COVER


- 1) Remove the rear exhaust pipe. <Ref. to EX(STI)-13, REMOVAL, Rear Exhaust Pipe.>
- 2) Remove the propeller shaft. <Ref. to DS-11, REMOVAL, Propeller Shaft.>
- 3) Remove the bolt (A), nut (B) and clip (C) to remove center heat shield cover.

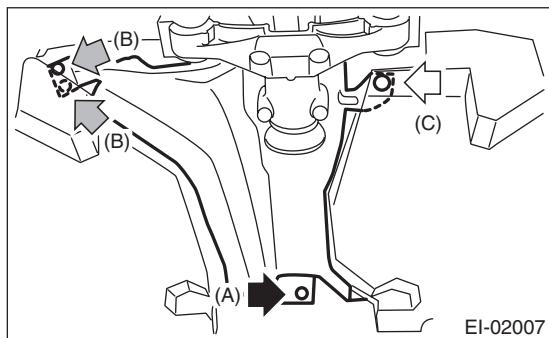


3. REAR HEAT SHIELD COVER

- 1) Remove the muffler. <Ref. to EX(STI)-15, REMOVAL, Muffler.>
- 2) Remove the bolts, and remove the rear heat shield cover.

- 5 door model

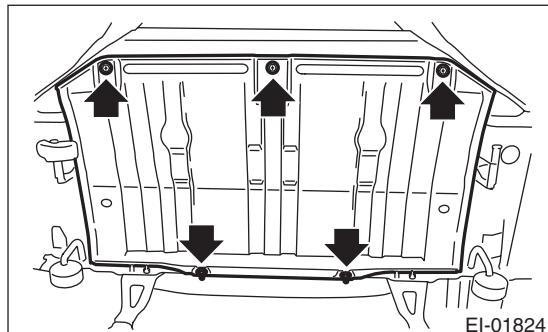

- 4 door model

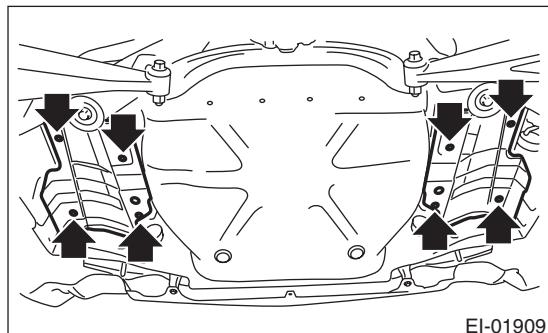

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to EI-24, HEAT SHIELD COVER, COMPONENT, General Description.>