


## 4. Front Under Cover

### A: REMOVAL

- 1) Lift up the vehicle
- 2) Remove clips (A), (C) in front fender and bolts (B), then remove the front under cover.

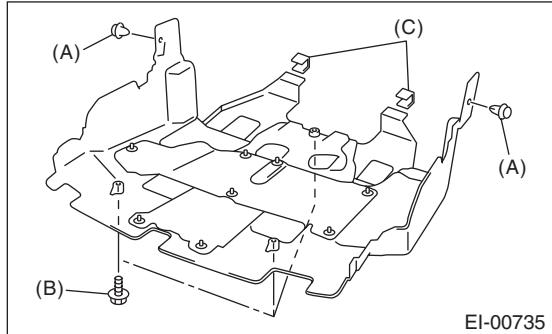

### B: INSTALLATION

Install each part in the reverse order of removal.

***Tightening torque:***

**18 N·m (1.84 kgf·m, 13.3 ft-lb)**