


6. Mud Guard

A: REMOVAL

1. FRONT MUD GUARD


- 1) Lift up the vehicle.
- 2) Remove the front wheels.
- 3) Remove the screws and clips to remove the mud guard.

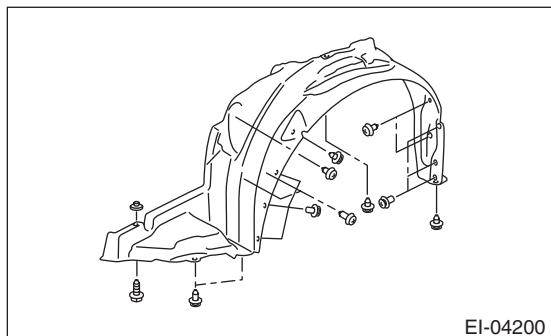

EI-04200

2. REAR MUD GUARD

- 1) Lift up the vehicle.
- 2) Remove the rear wheels.
- 3) Remove the screws and clips to remove the mud guard.

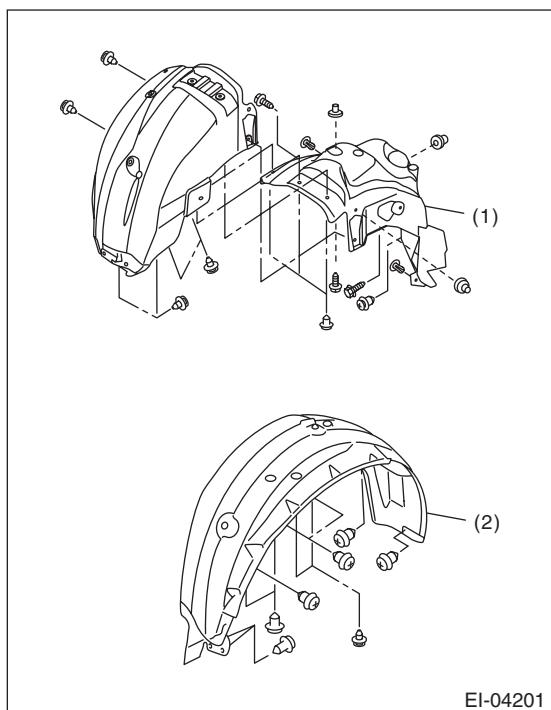

EI-04201

(1) Rear mud guard RH

(2) Rear mud guard LH

B: INSTALLATION

Install each part in the reverse order of removal.