



9. Cowl Panel

A: REMOVAL

- 1) Open the front hood.
- 2) Remove the wiper arm. <Ref. to WW-16, REMOVAL, Front Wiper Arm.>
- 3) Detach the tabs and remove the cowl panel side.

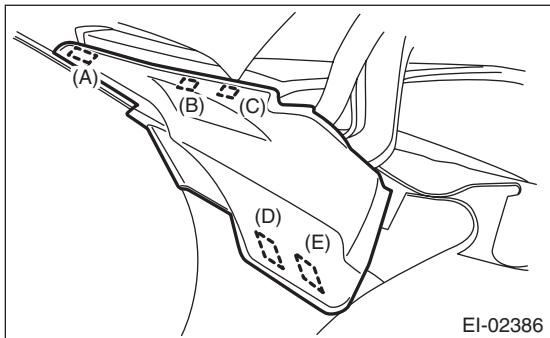


(1) Detach tabs (A), (B), and (C) from the vehicle exterior.
(2) Detach tabs (D) and (E).
4) Remove the clips (A) and (B), and remove the cowl panel.

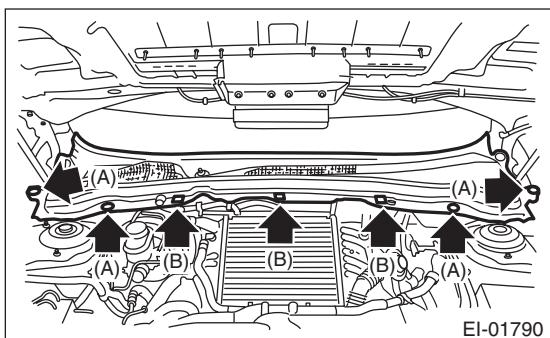

CAUTION:

When removing clip (B), push the claws of the clips from the left and right to remove.

Be careful because the clip can be damaged if you pull unnecessarily hard on them.

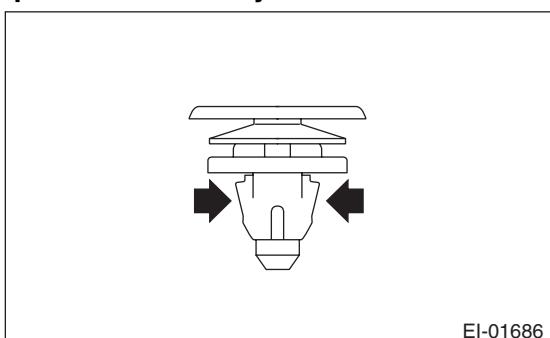


B: INSTALLATION

Install each part in the reverse order of removal.

NOTE:

Hook the claw of the cowl panel on the lower end of the windshield.

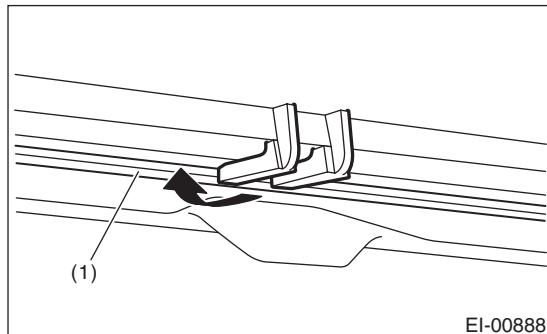

(1) Windshield cross section