

10. Remote Control Mirror Switch

A: REMOVAL


- 1) Remove the instrument panel lower cover. <Ref. to EI-49, REMOVAL, Instrument Panel Lower Cover.>
- 2) Remove the remote control mirror switch from instrument panel lower cover.

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Disconnect the remote control mirror switch connector.
- 2) Check the resistance between remote control mirror switch terminals.

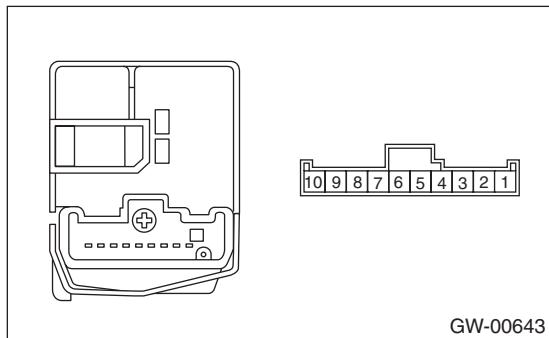

- Switch the change over switch to the right side.

Switch position	Terminal No.	Standard value
OFF	—	1 MΩ or more
UP	8 and 3, 6 and 7	Less than 1 Ω
DOWN	8 and 6, 3 and 7	Less than 1 Ω
LEFT	8 and 2, 6 and 7	Less than 1 Ω
RIGHT	8 and 6, 2 and 7	Less than 1 Ω

- Switch the change over switch to the left side.

Switch position	Terminal No.	Standard value
OFF	—	1 MΩ or more
UP	8 and 4, 6 and 7	Less than 1 Ω
DOWN	8 and 6, 4 and 7	Less than 1 Ω
LEFT	8 and 5, 6 and 7	Less than 1 Ω
RIGHT	8 and 6, 5 and 7	Less than 1 Ω

- 3) Replace the remote control mirror switch if the inspection result is not within the standard value.