


## 12. Rear Regulator and Motor Assembly

### A: REMOVAL

- 1) Remove the rear door glass. <Ref. to GW-21, REMOVAL, Rear Door Glass.>
- 2) Disconnect the motor connector.
- 3) Remove the bolts, and then remove the rear regulator and motor assembly.

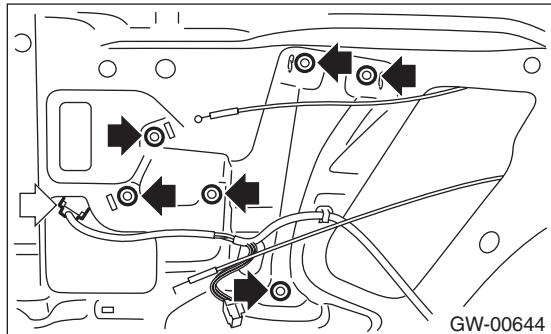

### B: INSTALLATION

Install each part in the reverse order of removal.

#### *Tightening torque:*

*Refer to “COMPONENT” of “General Description”. <Ref. to GW-5, REAR DOOR GLASS, COMPONENT, General Description.>*

### C: INSPECTION

- 1) Disconnect the motor connector.
- 2) Apply battery voltage between the motor connector terminals and check the motor operation. Check to ensure that the motor rotates in reverse direction when the terminal to which battery voltage is applied is changed.
- 3) If the inspection results in improper operation, replace the rear regulator and motor assembly.