

18. Rearview Mirror

A: REMOVAL


CAUTION:

- Never reuse the spring. When the rearview mirror assembly is removed from the mirror base, fixed force will decline and the rearview mirror assembly may come off.
- Be careful not to damage the mirror surface and windshield glass.


NOTE:

Never reuse the spring. Prepare a new spring before removal.

- 1) Turn the mirror base 90° clockwise or counter-clockwise to remove it.

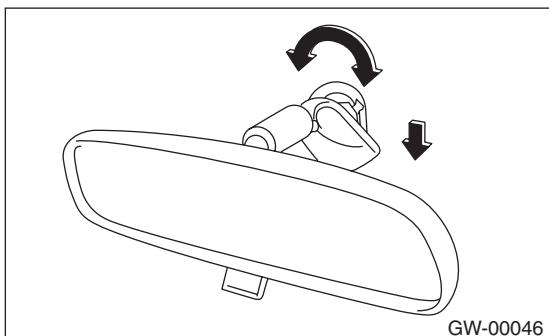

- 2) Remove the spring from the mirror base.

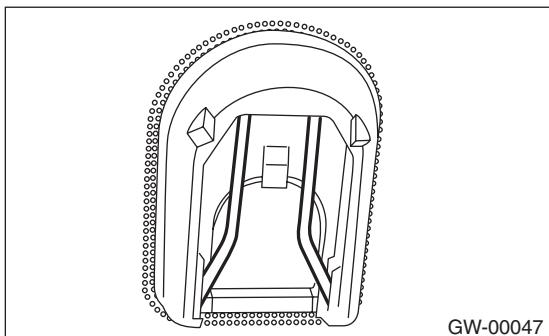

- 3) If the mirror base is damaged, replace the windshield glass.

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

Check the mirror, mirror base and spring for damage, and replace if defective.