


Control Unit (Manual A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

13. Control Unit (Manual A/C Model)


A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the ornament panel. <Ref. to EI-52, ORNAMENT PANEL, REMOVAL, Center Console.>
- 3) Remove the control wires from both sides of the heater and cooling unit.

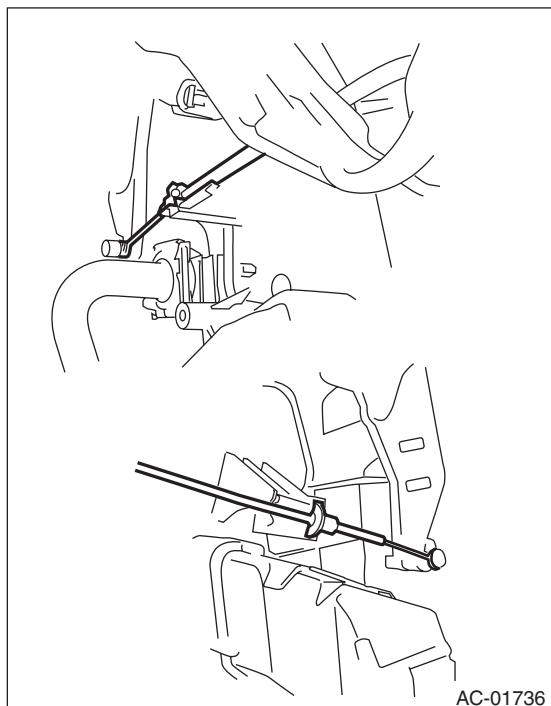

AC-01736

- 4) Remove the screws and claws, and remove the control module from the ornament panel.

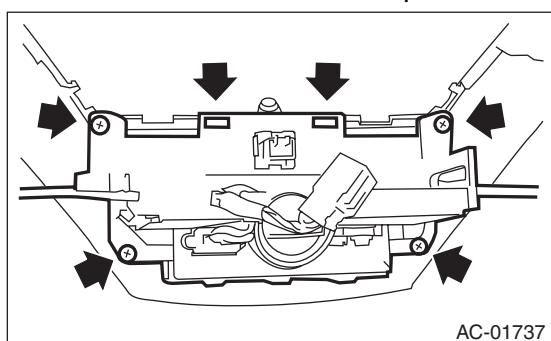

AC-01737

B: INSTALLATION

CAUTION:

Securely assemble the plate at the end of the control wire to the heater case.

Install each part in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to AC-7, CONTROL MODULE, COMPONENT, General Description.>