


Sunload Sensor (Auto A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

23. Sunload Sensor (Auto A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the audio. (model with audio) <Ref. to ET-6, REMOVAL, Audio.>
- 3) Remove the navigation unit. (model with navigation) <Ref. to ET-14, PROCEDURE, Navigation Body.>
- 4) Push out the sunload sensor from the back side of the instrument panel.

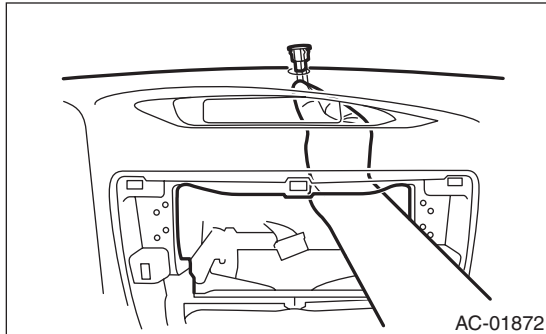

- 5) Disconnect the harness connector and remove the sunload sensor.

CAUTION:

Be careful not to damage the interior trims when removing the sensor.

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

Refer to "Sunload Sensor" of HVAC SYSTEM (AUTO A/C)(DIAGNOSTICS). <Ref. to AC(diag)-35, SUNLOAD SENSOR, Diagnostic Procedure for Sensors.>