


### 25. Air Vent Grille

#### A: REMOVAL

##### 1. CENTER GRILLE


- 1) Insert a plastic remover into the slit at the bottom of the center panel, to lift the panel.
- 2) Remove the claws and resin hook and then remove the center panel.

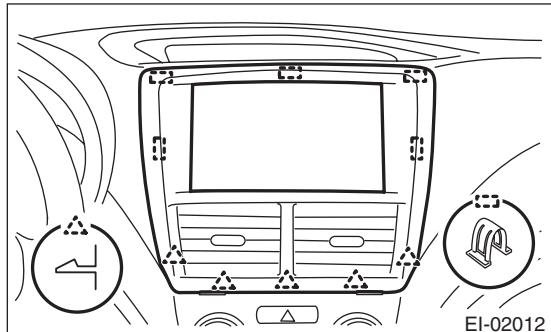

- 3) Remove the claws, and remove the air vent center grille from the center panel.

##### 2. SIDE GRILLE

- 1) Remove the ornament panel. <Ref. to EI-52, ORNAMENT PANEL, REMOVAL, Center Console.>
- 2) Remove the claws, and remove the air vent side grille.

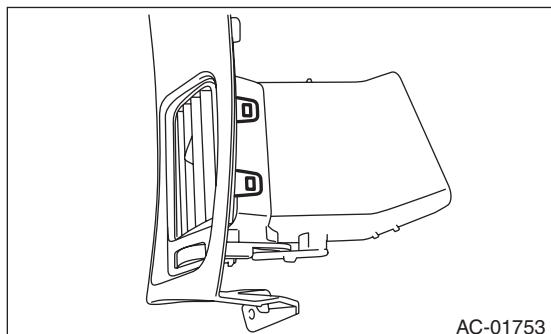

#### B: INSTALLATION

Install each part in the reverse order of removal.

#### C: INSPECTION

- 1) Check that the direction and amount of air can be adjusted smoothly, and if there is any faulty, replace the air vent grille.
- 2) Check that the adjustment can be maintained in each position, and if there is any faulty, replace the air vent grille.