


Blower Motor

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

9. Blower Motor

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Disconnect the blower motor connector.
- 3) Turn over the floor mat near the blower motor.
- 4) Remove the screws and detach the blower motor.

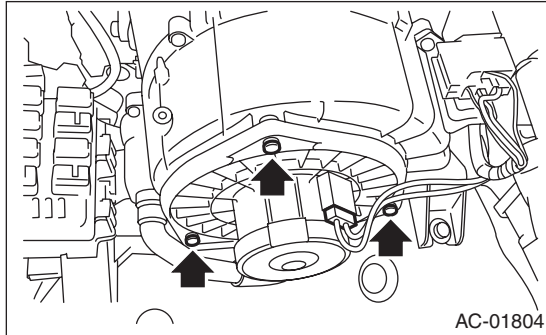


B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Disconnect the blower motor connector.
- 2) Connect the battery positive (+) terminal to terminal No. 2 of blower motor connector, and negative (-) terminal to terminal No. 1. Check that the blower motor rotates normally.

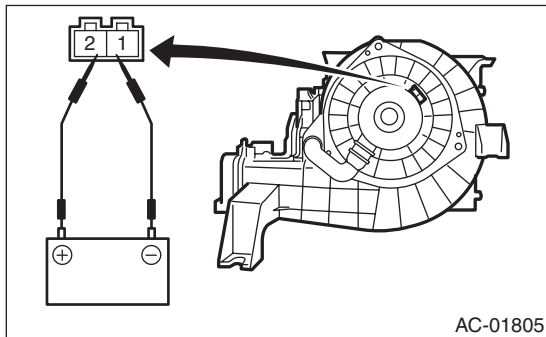

- 3) If the blower motor does not operate normally, replace the blower motor.