


9. Clock

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the audio. (model with audio) <Ref. to ET-6, REMOVAL, Audio.>
- 3) Remove the navigation unit. (model with navigation) <Ref. to ET-14, PROCEDURE, Navigation Body.>
- 4) Reach through the audio space to release the tabs from the bracket behind the instrument panel.

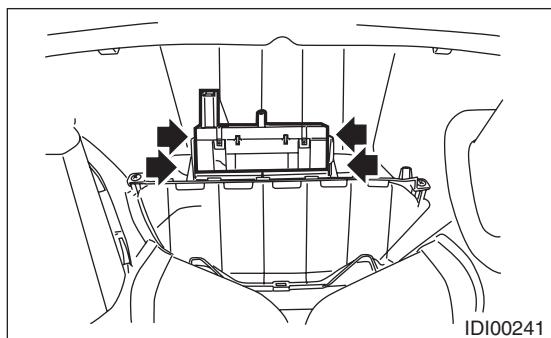

- 5) Disconnect the harness connector and remove the clock.

B: INSTALLATION

Install each part in the reverse order of removal.

Clock

INSTRUMENTATION/DRIVER INFO

SEATS

SE

	Page
1. General Description	2
2. Front Seat	6
3. Rear Seat	13
4. Seat Heater System	17