

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

1. DTC TABLE

NOTE:

When more than two DTC codes are recorded, referring to their combination will make it easy to identify the possible cause. Refer to the list for typical examples.

DTC to Check	Diagnostic Code that was displayed.				Probable cause
	Body integrated unit	ECM	VDC/ ABS CM	DCCD CM	
B1100 <Ref. to LAN(diag)-35, DTC B1100 INTEG. UNIT SYSTEM ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	B1100	—	—	—	There could be a problem in the body integrated unit.
U1221 <Ref. to LAN(diag)-57, DTC U1221 CAN-HS ECM NO-RECEIVE DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	U1221	—	C0047	—	It is possible that the ECM is faulty.
U1223 <Ref. to LAN(diag)-60, DTC U1223 CAN-HS VDC/ABS NO-RECEIVE DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	U1223	U0122	—	—	It is possible that the VDC/ABS CM is faulty.
U1226 <Ref. to LAN(diag)-62, DTC U1226 HIGH-SPEED CAN (DCCD) DATA IS NOT RECEIVED, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	U1226	—	—	—	It is possible that the DCCD CM is faulty.
U1321 <Ref. to LAN(diag)-73, DTC U1321 CAN-LS METER NO-RECEIVE DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	U1321	—	—	—	It is possible that the combination meter is faulty.
B1500 <Ref. to LAN(diag)-75, DTC B1500 KEYLESS UART COM. MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	B1500	—	—	—	It's possible that there is an internal problem in the keyless entry control module, or a open circuit in the communication line.