

9. Read Current Data

A: OPERATION

- 1) On «Main Menu» display, select {Each System Check}.
 - 2) On «System Selection Menu» display, select {Integ. unit mode}.
 - 3) On «Integ. unit mode failure diag» display, select {Current Data Display & Save}.
 - 4) Using the scroll key, scroll the display screen up or down until the desired data is shown.
- <Ref. to LAN(diag)-14, DISPLAY OF DATA, OPERATION, Subaru Select Monitor.>