

## 11. Combination Base Switch Assembly


### A: REMOVAL

- 1) Remove the driver's airbag module. <Ref. to AB-15, REMOVAL, Driver's Airbag Module.>


#### WARNING:

**Before handling the airbag module, refer to "CAUTION" of "General Description" in the "AB" section. <Ref. to AB-5, CAUTION, General Description.>**

- 2) Remove the steering wheel. <Ref. to PS-13, REMOVAL, Steering Wheel.>
- 3) Remove the combination switch.
  - Combination switch (light): <Ref. to LI-11, REMOVAL, Combination Switch (Light).>
  - Combination switch (wiper): <Ref. to WW-7, REMOVAL, Combination Switch (Wiper).>
- 4) Remove the screws, and then remove the roll connector.

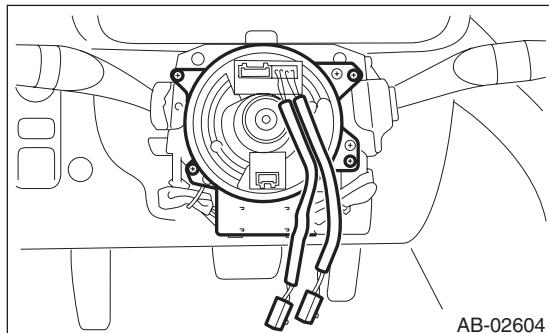

- 5) Remove the screws, disconnect the harness connector and remove the combination base switch assembly.

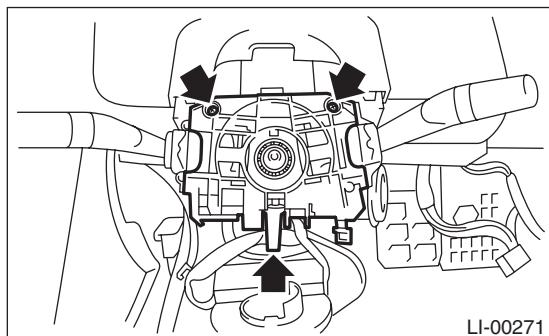

### B: INSTALLATION

- 1) Before installing steering wheel, be sure to adjust the direction of roll connector with steering. <Ref. to AB-27, ADJUSTMENT, Roll Connector.>
- 2) Install each part in the reverse order of removal.

### C: INSPECTION

#### 1. COMBINATION BASE SWITCH ASSEMBLY

Inspect the combination base switch assembly and roll connector for cracks or deformation. If any damage is found, replace with a new part.