



## 16. Front Fog Light Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the screw and clips, and turn over the mud guard.

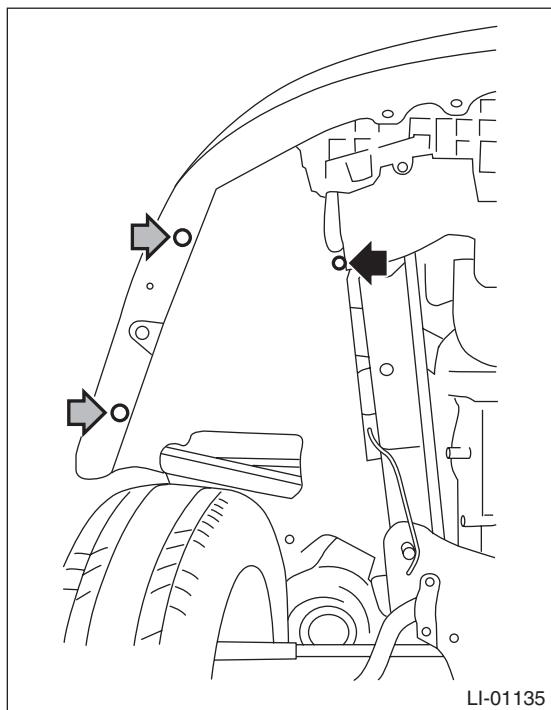


- 3) Disconnect the bulb connector.
- 4) Remove the bolts, then remove the fog light assembly.

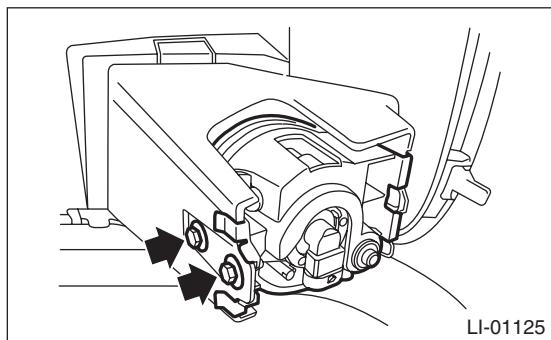

#### NOTE:

Remove the bracket as required.

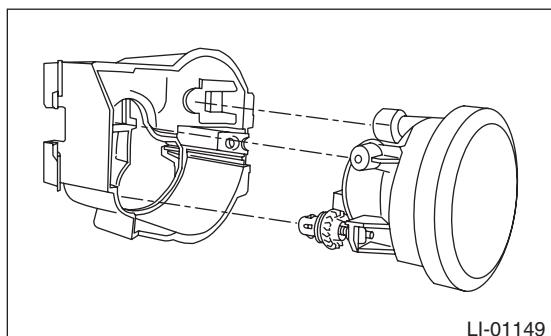

### B: INSTALLATION

- 1) Install each part in the reverse order of removal.

#### Tightening torque:

**7.5 N·m (0.76 kgf·m, 5.5 ft-lb)**

- 2) Adjust the fog light beam. <Ref. to LI-21, FOG LIGHT AIMING, ADJUSTMENT, Front Fog Light Assembly.>

### C: ADJUSTMENT

#### 1. FOG LIGHT AIMING


- 1) Before checking the fog light beam level, be sure of the following:

- The area around the fog light has not sustained any accident, damage or other type of deformation.
- Vehicle is parked on a level surface.
- The inflation pressure of tires is correct.
- Vehicle's fuel tank is fully filled.

- 2) Bounce the vehicle several times to normalize the suspension.

- 3) Make certain that someone is seated in the driver's seat.



- 4) Remove the clips and turn over the mud guard.

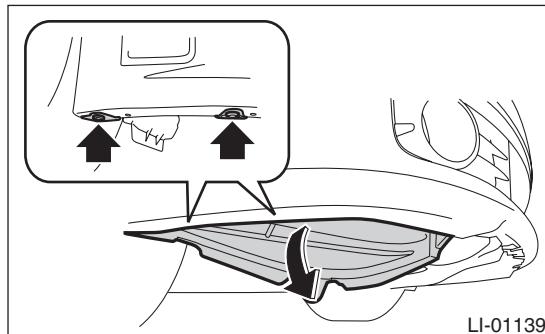

# Front Fog Light Assembly

## LIGHTING SYSTEM

5) Adjust the front fog light pattern by inserting a Philips screwdriver to the adjusting hole (1).

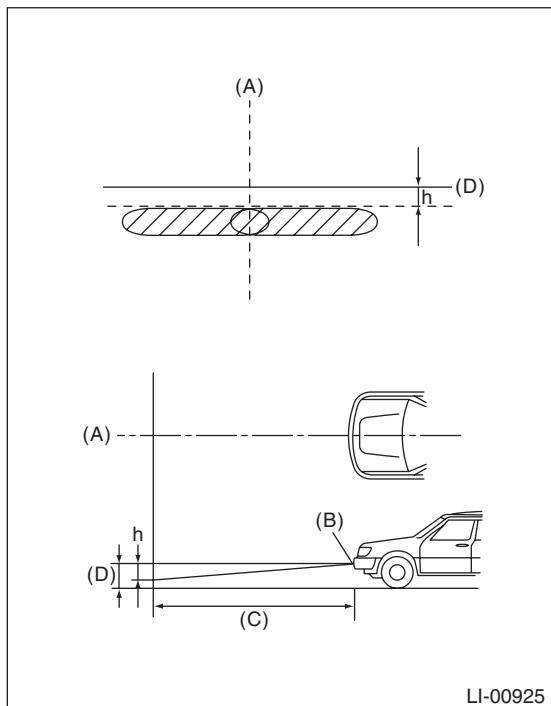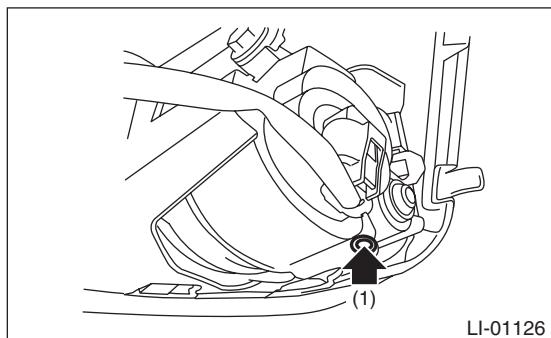

- (A) Vehicle center
- (B) Bulb center marking
- (C) 3 m (10 ft)
- (D) Height of fog light center

h mm (in) at 3 m (10 ft)
60 (2.38)