



17. Front Fog Light Bulb

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the clips and turn over the mud guard.

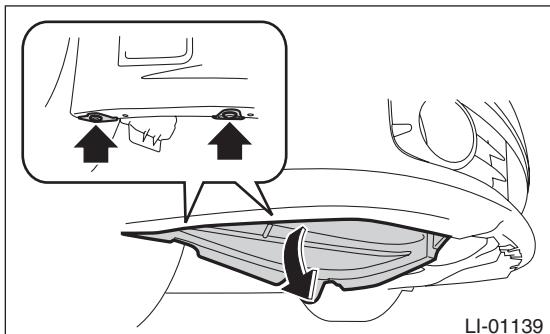

- 3) Disconnect the bulb connector.
- 4) Rotate the bulb then detach the fog light bulb.

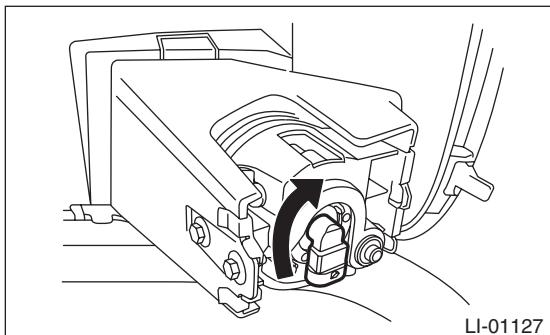

B: INSTALLATION

CAUTION:

Align the bulb tabs with the fog light securely, push the bulb fully, and then rotate it.

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.