


19. Rear Combination Light Assembly

A: REMOVAL


1. 4 DOOR MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trunk room side trim. <Ref. to EI-63, REMOVAL, Trunk Room Trim.>
- 3) Disconnect the rear combination light connector.
- 4) Remove the nuts and detach the rear combination light.

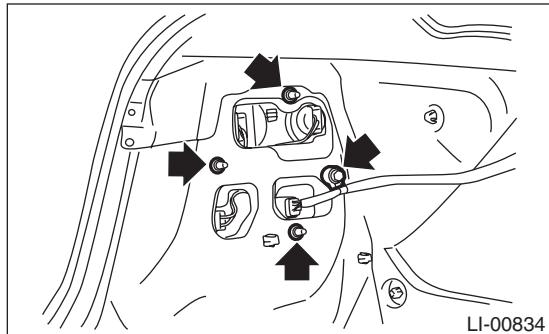

2. 5 DOOR MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the bolts, and then detach the rear combination light by pulling it to the rear side of vehicle.

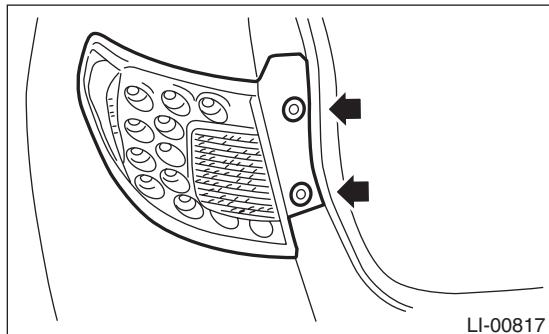

- 3) Disconnect the harness connector and remove the rear combination light.

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

4 door model

4.5 N·m (0.46 kgf·m, 3.3 ft-lb)

5 door model

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

C: INSPECTION

1. 4 DOOR MODEL

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.

2. 5 DOOR MODEL

- 1) Install the rear combination light assembly and check that it blinks normally.
- 2) If it fails to blink normally, replace the rear combination light assembly with a new part.

NOTE:

Since LED (Light Emitting Diode) is used for the tail light/stop light bulb, replace the rear combination light assembly if the LED burns out.