


21. Rear Turn Signal Light Bulb

A: REMOVAL


1. 4 DOOR MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trunk room side trim cover. <Ref. to EI-63, REMOVAL, Trunk Room Trim.>
- 3) Turn the socket and remove the bulb.

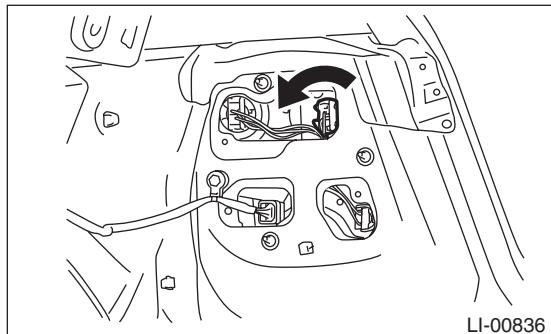

2. 5 DOOR MODEL

- 1) Remove the rear combination light assembly. <Ref. to LI-25, 5 DOOR MODEL, REMOVAL, Rear Combination Light Assembly.>
- 2) Turn the socket and remove the bulb.

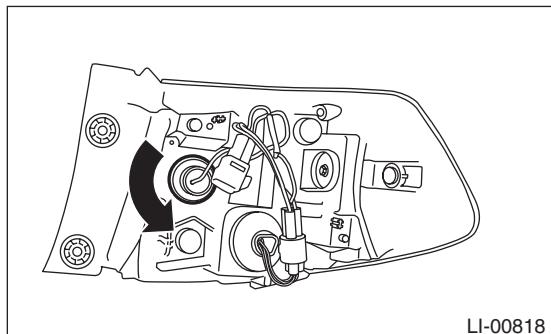

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.