


23. Rear Finisher Light Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear gate trim. <Ref. to EI-69, REMOVAL, Rear Gate Trim.>
- 3) Disconnect the rear finisher light connector.
- 4) Remove the nuts, and then remove the rear finisher light assembly.

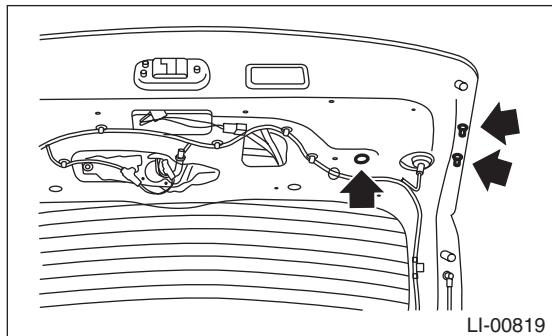

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

4.5 N·m (0.46 kgf-m, 3.3 ft-lb)