


25. License Plate Light

A: REMOVAL

1. 4 DOOR MODEL


- 1) Disconnect the ground cable from battery.
- 2) Remove the license plate light mounting screw (A) and then remove the lens.

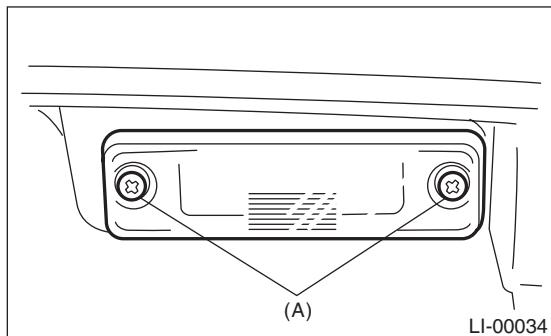


- 3) Remove the bulb.
- 4) Remove the trunk lid garnish. <Ref. to EI-73, REMOVAL, Trunk Lid Garnish.>
- 5) Remove the license plate light assembly harness.

2. 5 DOOR MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the license plate light while pushing it to the left and pulling it.

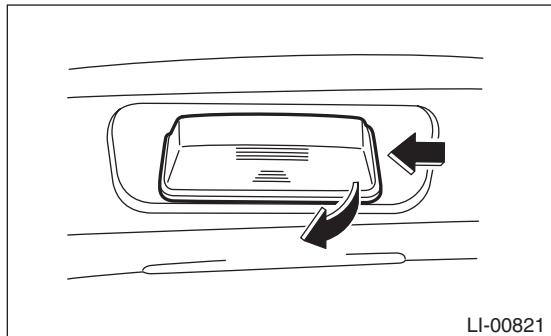

- 3) Disconnect the harness connector, and remove the socket (A).

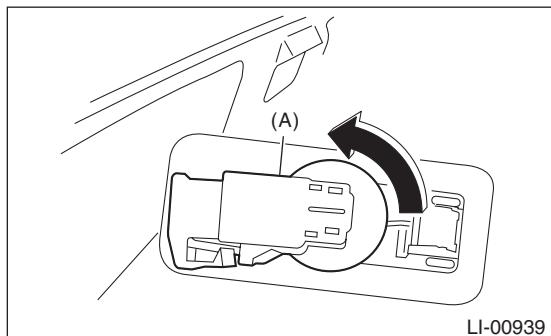

- 4) Remove the bulb.

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.