



## 27. Spot Map Light

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the lens (A) and spot map light mounting screws (B).
- Model without sunroof

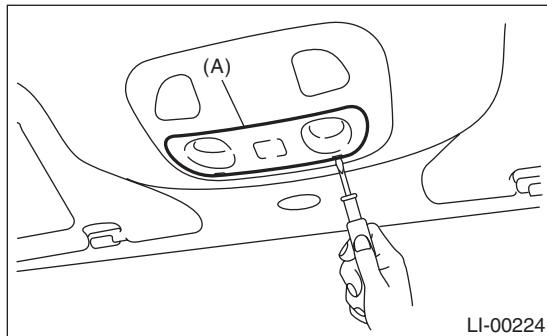


LI-00224

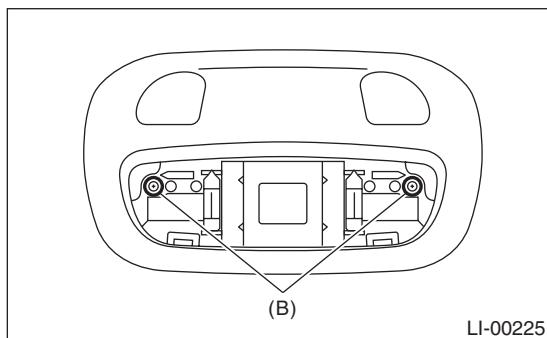


LI-00225

- Model with sunroof

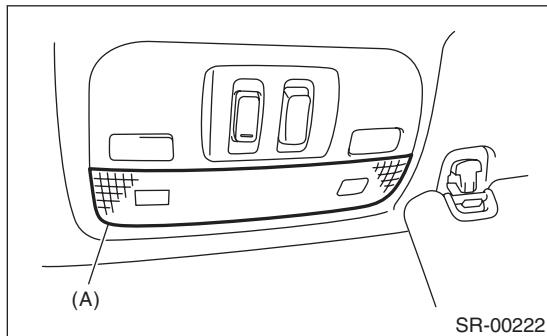

SR-00222

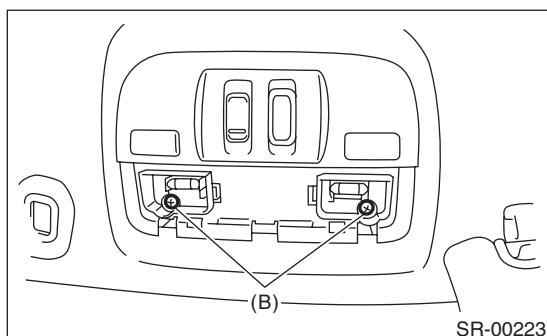

SR-00223

- 3) Disconnect the harness connectors and remove the spot map light.
- 4) Remove the bulb.

### B: INSTALLATION

Install each part in the reverse order of removal.


### C: INSPECTION

#### 1. SPOT MAP LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.


#### 2. SPOT MAP LIGHT SWITCH

- 1) Remove the spot map light.
- 2) Check the resistance of spot map light.
- Model without sunroof

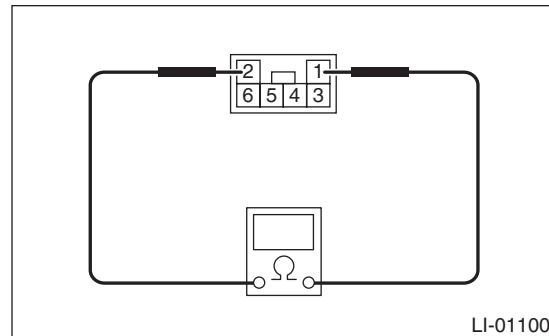

LI-01100

- Model with sunroof

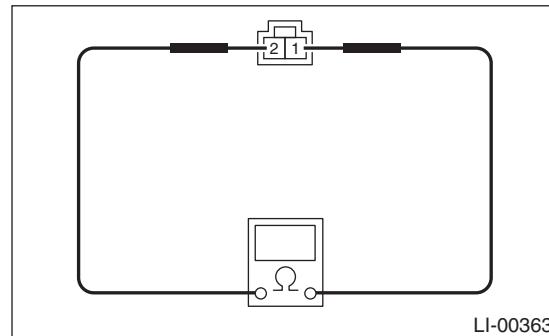

LI-00363

Switch position	Terminal No.	Standard value
OFF	1 and 2	1 MΩ or more
ON	1 and 2	18±5.4 Ω

- 3) Replace the spot map light if the inspection result is not within the standard value.