
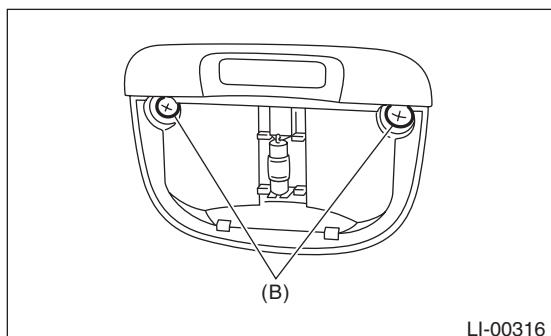


28. Room Light

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the lens (A) and room light mounting screws (B).

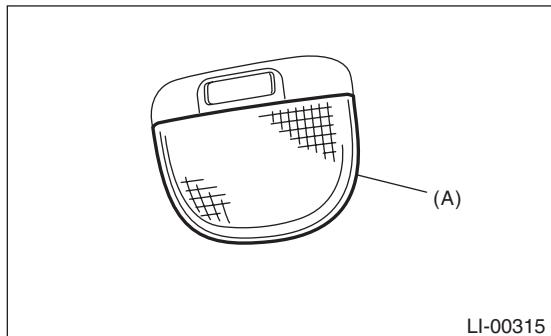

- 3) Disconnect the harness connector and remove the room light.
- 4) Remove the bulb.

B: INSTALLATION

Install each part in the reverse order of removal.


C: INSPECTION

1. ROOM LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.

2. ROOM LIGHT SWITCH

- 1) Remove the room light.
- 2) Measure the resistance between room light switch terminals.

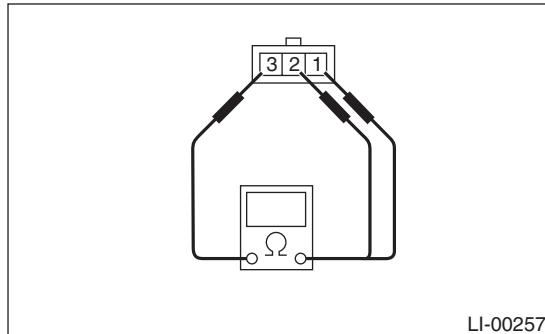

Switch position	Terminal No.	Standard value
OFF	—	1 MΩ or more
ON	1 and 3	1.5±0.5 Ω
DOOR	2 and 3	1.5±0.5 Ω

- 3) Connect terminal No. 3 to the battery positive terminal and terminal No. 1 and No. 2 to the battery ground terminal, and check room light operation.

Switch position	Light status
OFF	Light OFF
ON	Light ON
DOOR	Light ON

- 4) Replace the room light if it is found defective.