



29. Luggage Room Light

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Insert a flat tip screwdriver into the edge of the luggage room light body to remove the luggage room light.

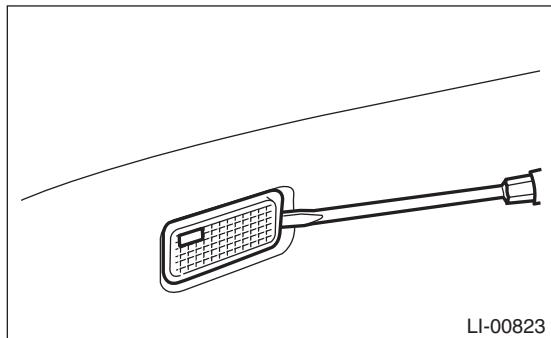

- 3) Disconnect the harness connector and remove the luggage room light.
- 4) Remove bulb (A).

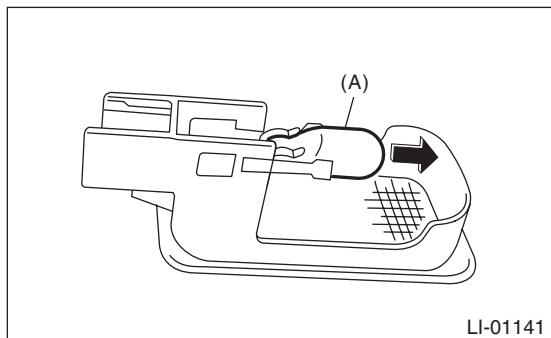

B: INSTALLATION

Install each part in the reverse order of removal.


C: INSPECTION

1. LUGGAGE ROOM LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description. >
- 3) Replace the bulb if it is found defective.

2. LUGGAGE ROOM LIGHT SWITCH

- 1) Remove the luggage room light.
- 2) Measure the resistance between luggage room light switch terminals.

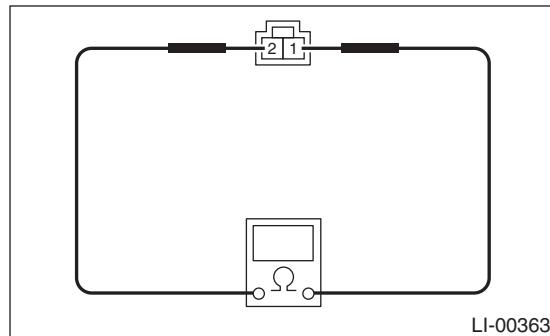

Switch position	Terminal No.	Standard value
OFF	1 and 2	1 MΩ or more
ON		Less than 1 Ω

- 3) Replace the luggage room light if the inspection result is not within the standard value.