



31. Ignition Switch Illumination

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the screws and remove the steering column cover lower.

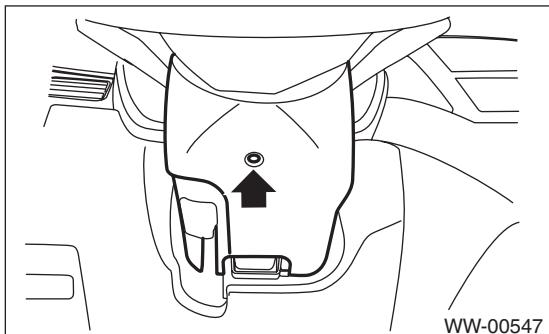

- 3) Remove the harness cover lock.
- 4) Remove the screws and detach the knee protector.

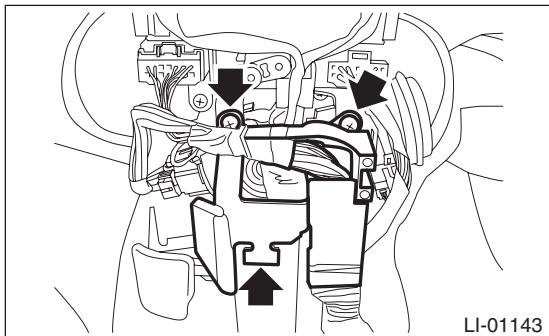


- 5) Remove the screws and remove the steering column cover upper.

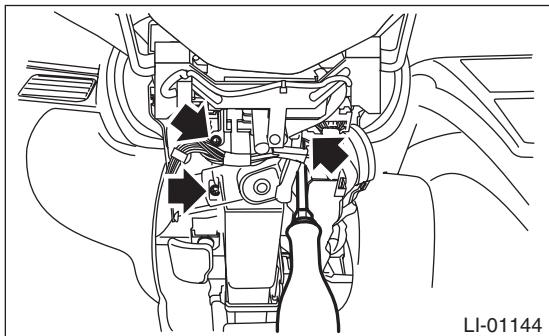

- 6) Remove the instrument panel lower cover. <Ref. to EI-49, REMOVAL, Instrument Panel Lower Cover.>
- 7) Disconnect the ignition switch illumination connector (A).

- 8) Turn the ignition switch illumination connector to the left and remove it.

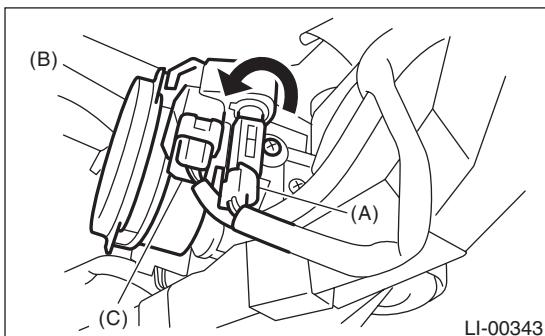

(A) Ignition switch illumination connector
(B) Ignition switch illumination
(C) Immobilizer antenna connector

B: INSTALLATION

Install each part in the reverse order of removal.

Ignition Switch Illumination

LIGHTING SYSTEM

C: INSPECTION

Step	Check	Yes	No
1 CHECK THE IGNITION SWITCH ILLUMINATION. Make sure the ignition switch illumination illuminates when driver's side door is open.	Does the ignition switch illumination illuminate?	Ignition switch illumination is normal. Go to step 2.	
2 CHECK THE IGNITION SWITCH ILLUMINATION. Make sure the ignition switch illumination blinks when the ignition switch is turned to ON.	Does the ignition switch illumination blink?	Check the function setting of body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Check the ignition switch illumination circuit. <Ref. to SL-25, CHECK IGNITION SWITCH ILLUMINATION, INSPECTION, Keyless Entry System.>