


34.Door Switch

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the screw, and pull out the door switch.

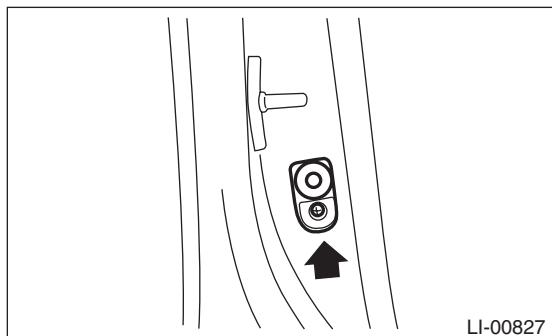

- 3) Disconnect the harness connector and remove the door switch.

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

Refer to the door switch inspection of the room light system. <Ref. to LI-10, DOOR SWITCH, INSPECTION, Room Light System.>

Door Switch

LIGHTING SYSTEM

WIPER AND WASHER SYSTEMS

WW

	Page
1. General Description	2
2. Wiper and Washer System	6
3. Combination Switch (Wiper)	7
4. Wiper Blade	11
5. Washer Tank and Motor	14
6. Front Wiper Arm	16
7. Front Wiper Motor and Link	17
8. Front Washer Nozzle	19
9. Rear Wiper Arm	20
10. Rear Wiper Motor	21
11. Rear Washer	22