

4. Front Fog Light System

A: WIRING DIAGRAM

Refer to "Front Fog Light System" in WI section.
<Ref. to WI-94, WIRING DIAGRAM, Front Fog Light System.>


B: INSPECTION

1. FRONT FOG LIGHT SWITCH

Measure the resistance between front fog light switch terminals. <Ref. to LI-11, INSPECTION, Combination Switch (Light).>

2. FRONT FOG LIGHT RELAY

1) Connect terminal No. 4 to the battery positive terminal and the terminal No. 3 to the battery negative terminal, and check the resistance value between the front fog light relay terminals.

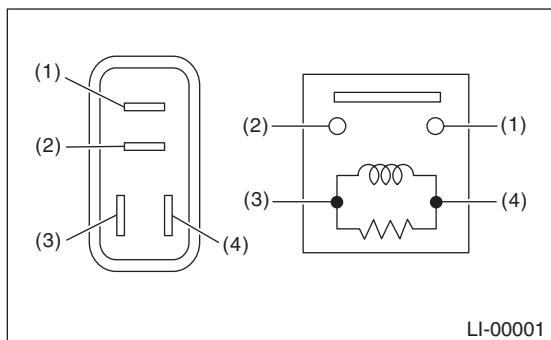

Continuity	Terminal No.	Specification
Yes	1 and 2	Less than 1 Ω
No		1 MΩ or more

2) If the result of the inspection is not at the standard value, replace the front fog light relay.

C: NOTE

For operation procedures of each component of the front fog light system, refer to the respective section.

- Front fog light assembly: <Ref. to LI-21, Front Fog Light Assembly.>
- Front fog light bulb: <Ref. to LI-23, Front Fog Light Bulb.>
- Combination switch (light): <Ref. to LI-11, Combination Switch (Light).>
- Combination base switch: <Ref. to LI-14, Combination Base Switch Assembly.>