



9. Combination Switch (Light)

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the screws and remove the steering column cover lower.

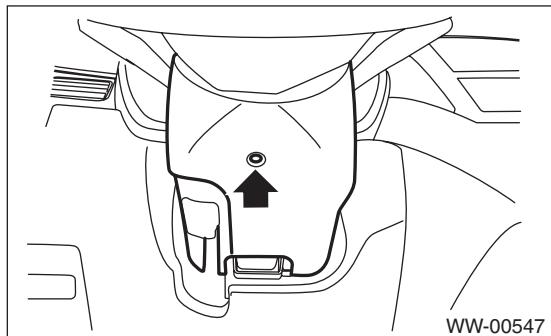

- 3) Remove the harness cover lock.
- 4) Remove the screws and detach the knee protector.

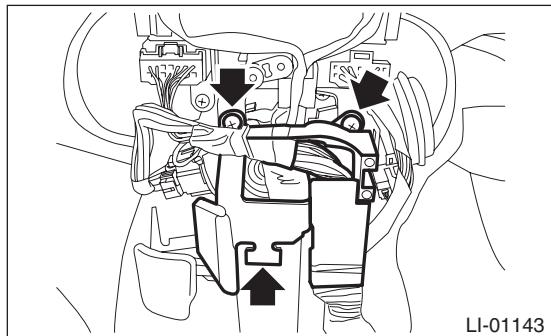


- 5) Remove the mounting screws of steering column cover upper.

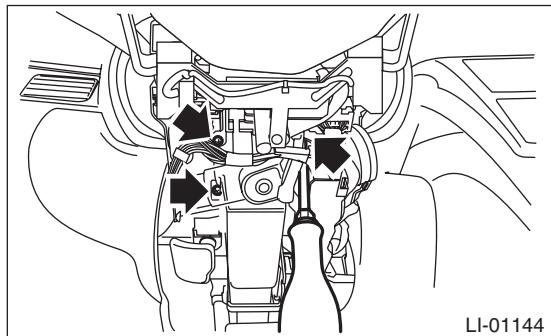

- 6) Disconnect the connector from combination switch.

- 7) Remove the screws which secure the switch, then remove the combination switch.

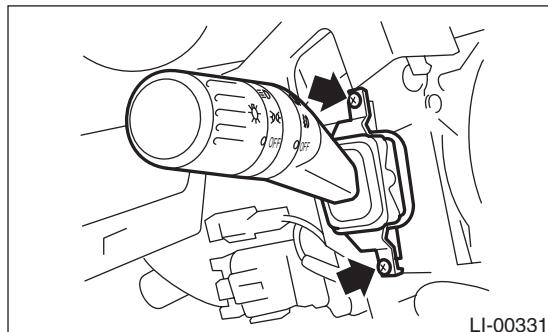


B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Disconnect the combination switch connector.
- 2) Check the resistance between combination switch terminals.

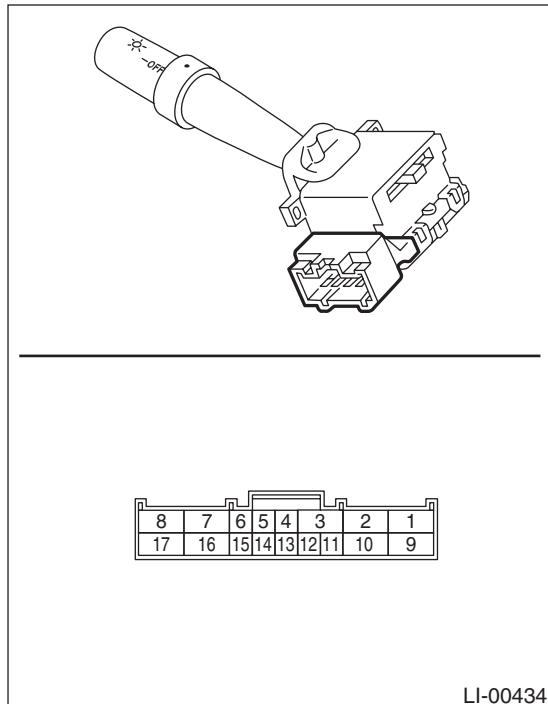

- 3) Replace the combination switch (light) if the inspection result of each switch is not within the standard value.

Combination Switch (Light)

LIGHTING SYSTEM

1. LIGHTING SWITCH

Switch position	Terminal No.	Standard value
OFF	—	1 MΩ or more
Tail	14 and 16	Less than 1 Ω
Head	13, 14 and 16	Less than 1 Ω

2. DIMMER & PASSING SWITCH

Switch position	Terminal No.	Standard value
Passing	7, 8 and 16	Less than 1 Ω
High beam	7 and 16	Less than 1 Ω

3. TURN SIGNAL SWITCH

Switch position	Terminal No.	Standard value
Left	1 and 2	Less than 1 Ω
Neutral	—	1 MΩ or more
Right	3 and 2	Less than 1 Ω

4. FRONT FOG LIGHT SWITCH

Switch position	Terminal No.	Standard value
OFF	—	1 MΩ or more
ON	11 and 10	Less than 1 Ω