

10. Clear Memory Mode

A: OPERATION

- Clear the memory in the following steps after the malfunction is repaired.
- For details to clear the DTC, refer to “Airbag System (Diagnostics) Subaru Select Monitor”. <Ref. to AB(diag)-26, Subaru Select Monitor.>