


6. Rear Seat Belt

A: REMOVAL


1. OUTER SEAT BELT ASSEMBLY RH & LH

- 1) Remove the luggage floor mat.
- 2) Remove the rear seat cushion. <Ref. to SE-13, REMOVAL, Rear Seat.>
- 3) Remove the seat belt lower anchor bolt.

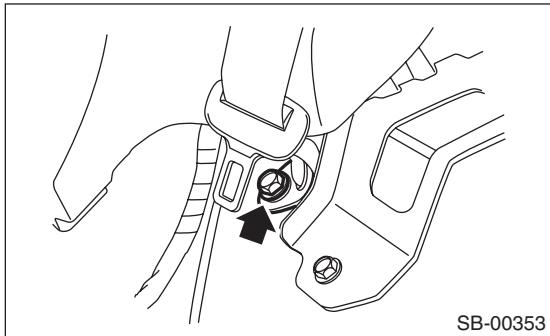


- 4) Remove the rear quarter trim. <Ref. to EI-60, REMOVAL, Rear Quarter Trim.>
- 5) Remove the outer seat belt assembly.

• 5 door model
Remove the nut.

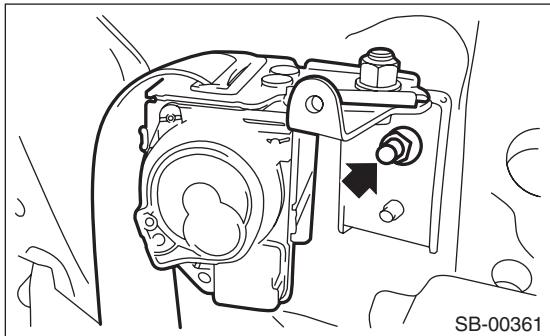


CAUTION:

Do not remove the bolt and nut securing the retractor and bracket.

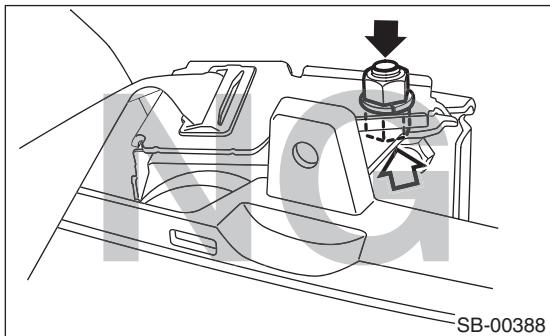


- 4 door model
Remove the bolt.

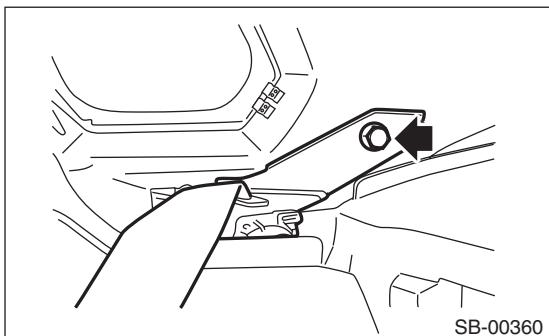


2. SHOULDER SEAT BELT CENTER ASSEMBLY (5 DOOR MODEL)

- 1) Remove the shoulder anchor bolt cover (A).
- 2) Remove the shoulder anchor bolt (B) and remove the shoulder anchor from the quarter pillar.

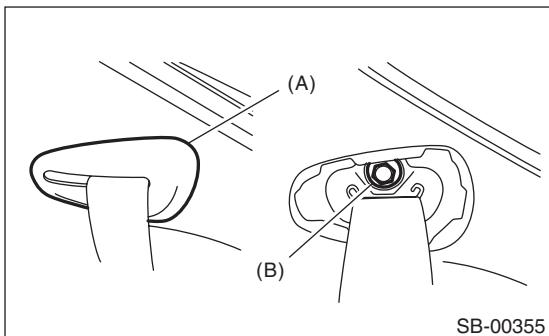


- 3) Remove the rear quarter trim. <Ref. to EI-60, REMOVAL, Rear Quarter Trim.>
- 4) Remove the bolts, and then detach the outer belt center assembly.

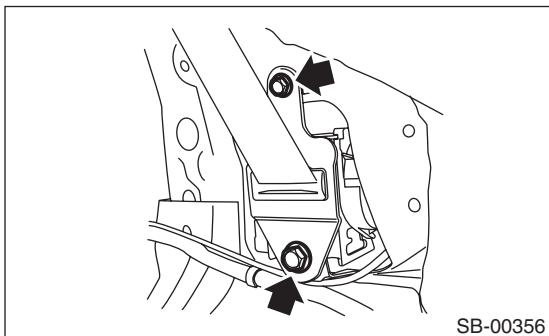


3. SHOULDER SEAT BELT CENTER ASSEMBLY (4 DOOR MODEL)

- 1) Remove the rear seat. <Ref. to SE-13, REMOVAL, Rear Seat.>
- 2) Remove the rear quarter trim. <Ref. to EI-60, REMOVAL, Rear Quarter Trim.>
- 3) Remove the rear shelf trim. <Ref. to EI-62, REMOVAL, Rear Shelf Trim.>
- 4) Remove the bolts, then remove the shoulder seat belt assembly.

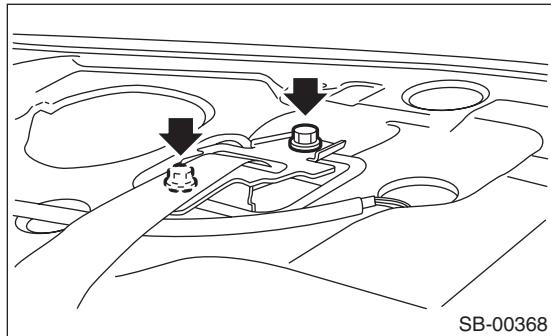


- 5) Remove the seat belt lower anchor bolt.

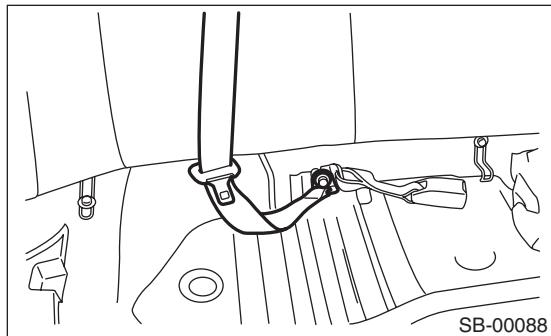

4. CENTER SEAT BELT ASSEMBLY

- 1) Remove the rear seat cushion.
- 2) Remove the bolts, then remove the center seat belt assembly.

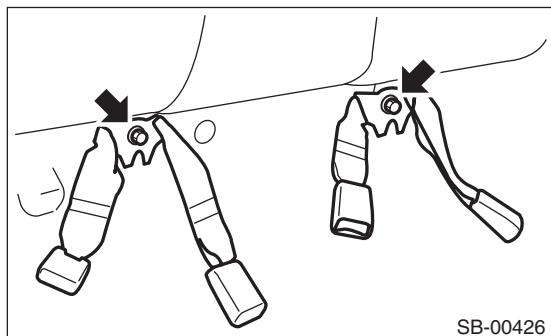

B: INSTALLATION

CAUTION:

- During installation, make sure that the seat belts are not twisted.
- After installation, make sure that the seat belts are smoothly extended and wound.
- Make sure that the center seat belt is securely installed.


- 1) Install each part in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SB-3, REAR SEAT BELT, COMPONENT, General Description.>

- 2) Turn the seat belt as shown in the figure.

- LH side

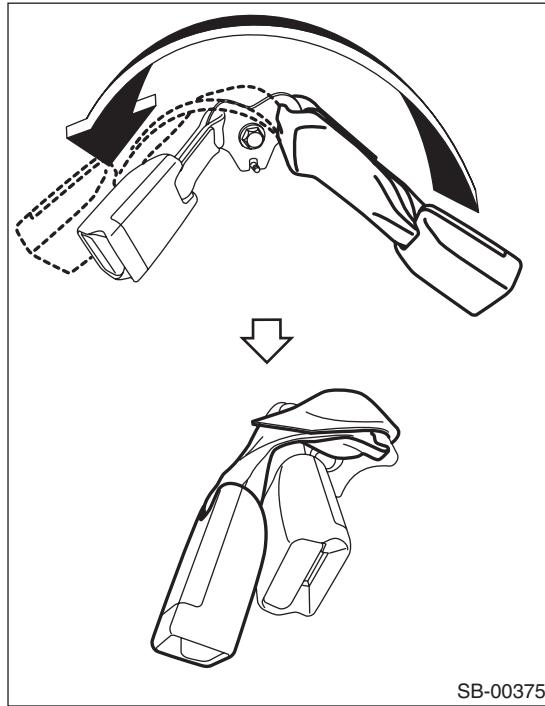


SB-0375


Rear Seat Belt

SEAT BELT SYSTEM

- RH side (5 door model only)

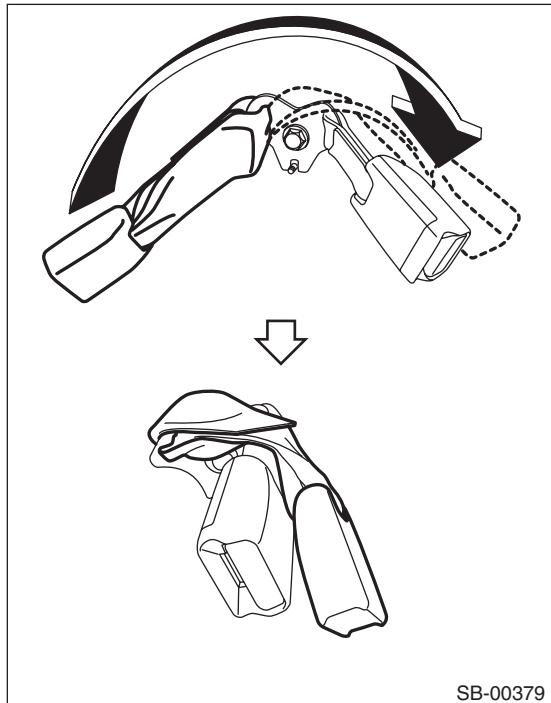

- 3) Install the seat cushion and pull out the center seat belt assembly as follows.

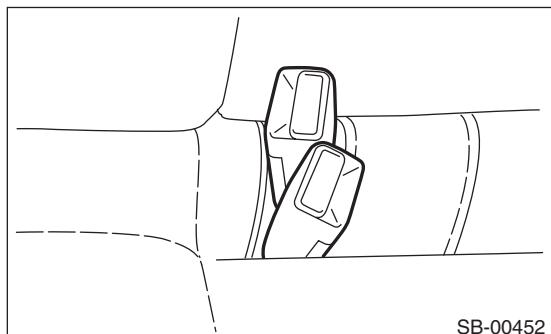

C: INSPECTION

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent or worn.
- Seat belt is abnormally wound or extended.
- Inner seat belt is deformed or damaged.
- Seat belt buckle cannot be engaged properly.

LIGHTING SYSTEM

LI

	Page
1. General Description	2
2. Headlight and Tail Light System	4
3. Day Time Running Light System	5
4. Front Fog Light System	6
5. Turn Signal Light and Hazard Light System	7
6. Back-up Light System	8
7. Stop Light System	9
8. Room Light System	10
9. Combination Switch (Light)	11
10. Headlight Beam Leveler System	13
11. Combination Base Switch Assembly	14
12. Headlight Assembly	15
13. Headlight Bulb	17
14. Front Turn Signal Light Bulb	19
15. Front Side Marker Light Bulb	20
16. Front Fog Light Assembly	21
17. Front Fog Light Bulb	23
18. Side Turn Signal Light Assembly	24
19. Rear Combination Light Assembly	25
20. Tail/Stop Light Bulb	26
21. Rear Turn Signal Light Bulb	27
22. Rear Side Marker Light Bulb	28
23. Rear Finisher Light Assembly	29
24. Back-up Light Bulb	30
25. License Plate Light	31
26. High-mounted Stop Light	32
27. Spot Map Light	33
28. Room Light	34
29. Luggage Room Light	35
30. Trunk Room Light	36
31. Ignition Switch Illumination	37
32. Day Time Running Resistor	39
33. Reflex Reflector	40
34. Door Switch	41