


### 3. Rear Seat

#### A: REMOVAL

**CAUTION:**

- Airbag system satellite safing sensor is located in the lower of the rear seat cushion center. Read the cautions and warnings described in "AIRBAG SYSTEM" section before removing the rear seat. <Ref. to AB-5, CAUTION, General Description.>
- The airbag system is fitted with a backup power supply. After disconnecting the battery ground cable, the airbag may operate if you do not wait for 60 seconds before starting the service of airbag system.


- 1) Disconnect the ground cable from battery, and wait for 60 seconds or more before starting work.
- 2) Remove the rear seat cushion.

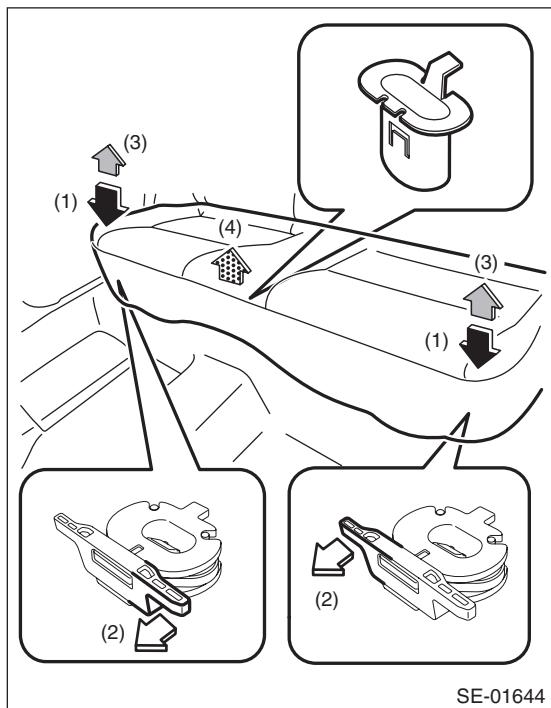

- (1) Push the corners of the seat cushion from above.
- (2) While pushing the corners of the seat cushion from above, pull the knob of the seat cushion hook towards yourself.
- (3) While pulling the knob towards yourself, disconnect the hooks by lifting up the seat cushion.
- (4) Pull up the front center part of the seat cushion and disconnect the center hook.


**CAUTION:**

If the center hook is disconnected from the vehicle body, replace the hook with the new part to prevent the decline of the fixed force of the seat.

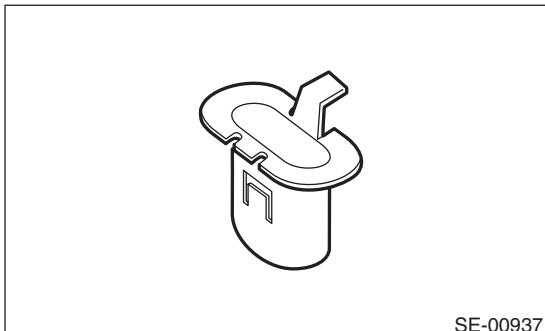


SE-00937

- (5) Remove the hook (A) by pushing it back while lifting the front side of the seat cushion, and remove the seat cushion.

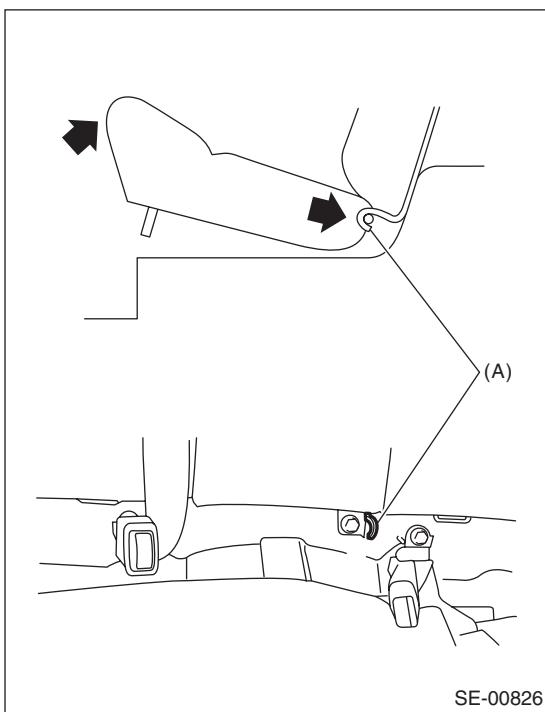

SE-00826


- 3) Remove the headrest, and then tilt the backrest forward.
- 4) Remove the luggage floor mat. (5 door model)
- 5) Turn over the mat to remove the bolt.

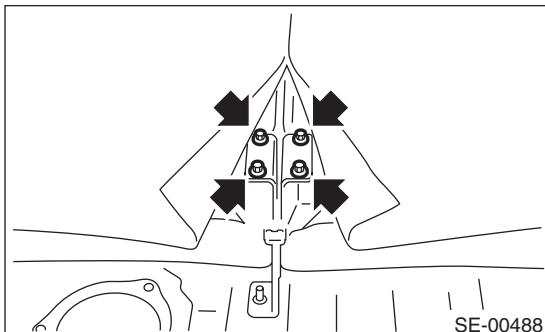

SE-00488

## SEATS

6) Remove the backrest from the hinge assembly LH (hinge assembly RH). (5 door model)

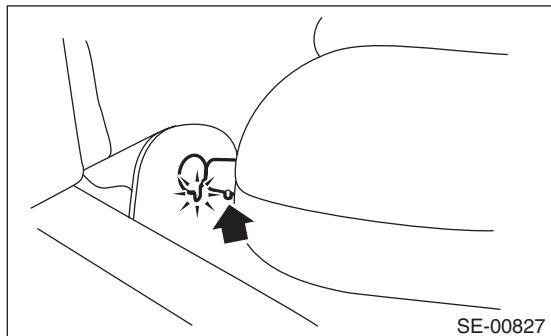


### NOTE:

The backrests cannot be detached while pin positions of the hinge assembly and backrests are not aligned.

## B: INSTALLATION

### CAUTION:

If the center hook is disconnected from the vehicle body, replace the hook with the new part to prevent the decline of the fixed force of the seat.

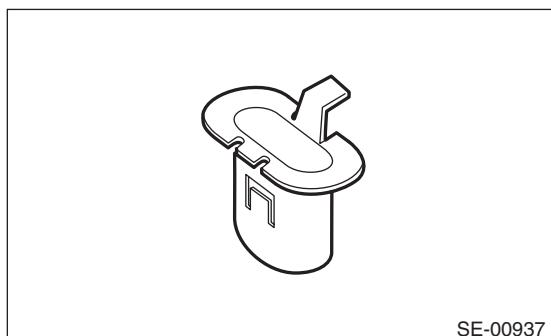


Install each part in the reverse order of removal.

### Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SE-4, REAR SEAT, COMPONENT, General Description.>


## C: DISASSEMBLY

- 1) Remove the rear seat. <Ref. to SE-13, REMOVAL, Rear Seat.>
- 2) Remove the armrest hinge cover in the direction of arrow (black), and loosen the screws to remove the armrest. (4 door model)

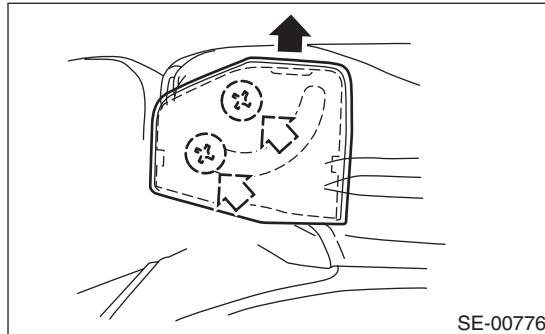


### NOTE:


The armrests cannot be detached while the backrest assembly RH and armrest side pin positions are not aligned.

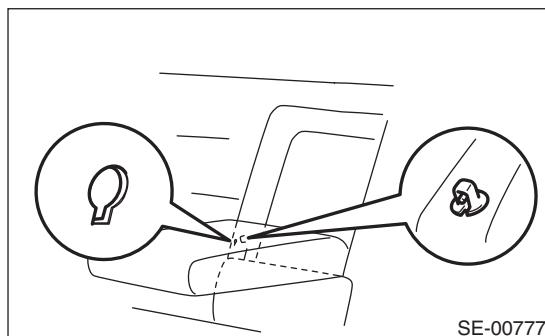


- 3) Remove the backrest knob. (Screw-in type)

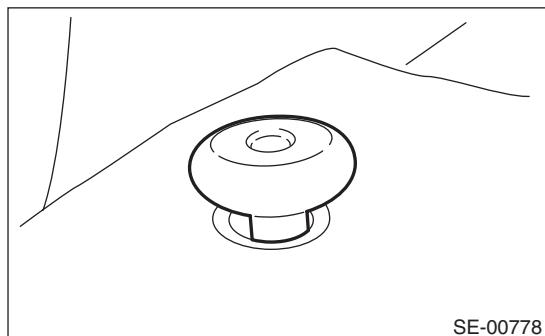


- 4) Remove the seat back latch cover.

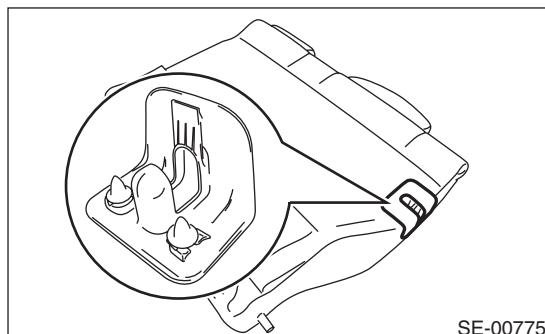


5) Turn over the backrest cover, and remove the hog rings.

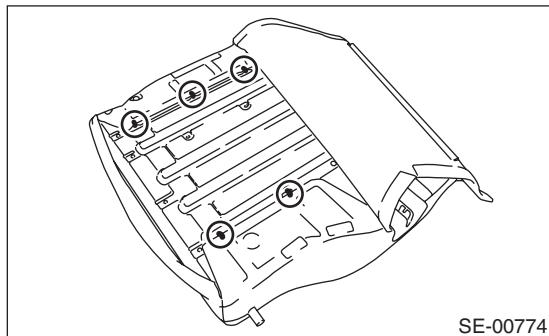

6) Remove all the hog rings which fix the backrest frame and backrest pad.  
 7) Remove the headrest bushing.  
 8) Remove the backrest pad and backrest cover from the backrest frame.  
 9) Disassemble the backrest assembly LH following the procedures described above.  
 10) Remove all the hog rings of the seat cushion, and separate the seat cushion cover and seat cushion pad.  
 11) Open the plastic fastener, and then remove the headrest cover from the headrest.

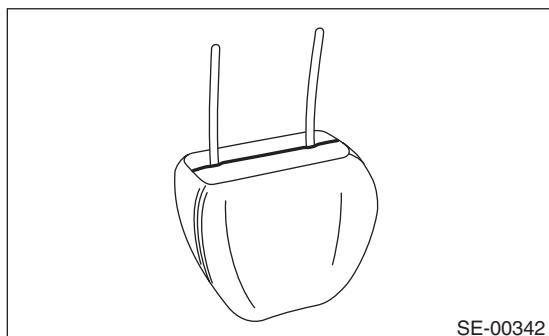

12) Remove the plastic fastener and hog rings, and then remove the armrest cover. (4 door model)

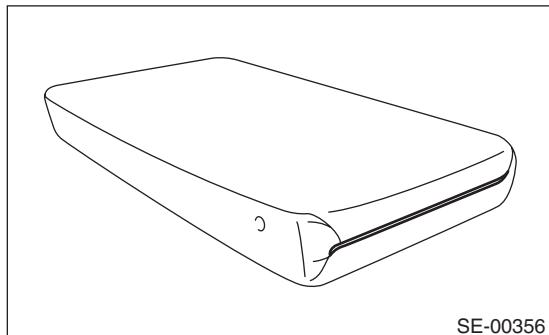

## D: ASSEMBLY


### CAUTION:

- Do not reuse hog rings.
- Secure the hog ring using hog ring pliers.
- Install the hog rings to the specified points securely and make sure that there is no wrinkle or twisting on backrest cover.

1) Assemble the seat cover in the same manner as the front seat. <Ref. to SE-9, ASSEMBLY, Front Seat.>

2) Make sure that all hog rings (A) are attached securely.


- Backrest (4 door model)

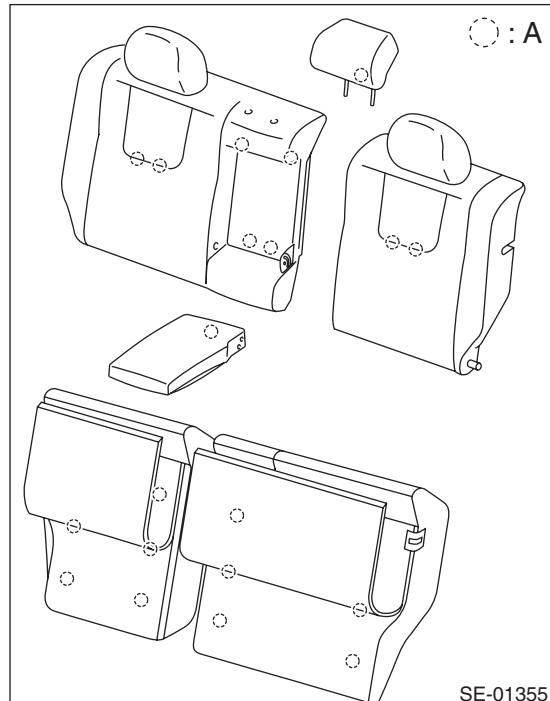


## Rear Seat

### SEATS


- Backrest (5 door model)

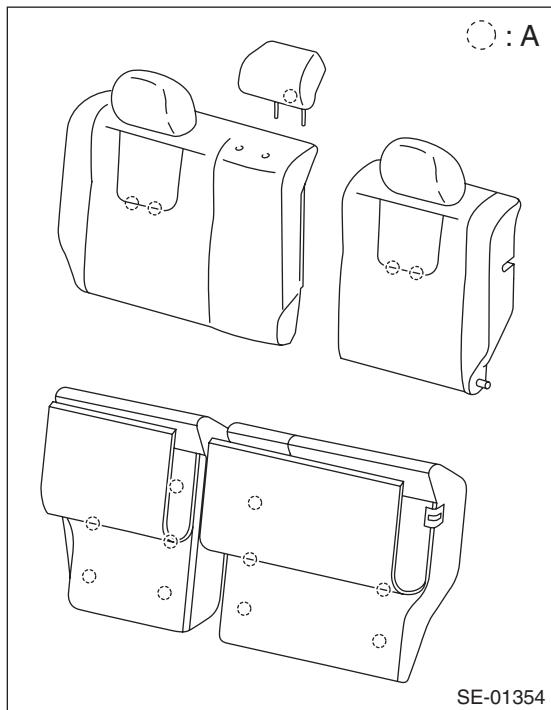

- Seat cushion (leather seat)

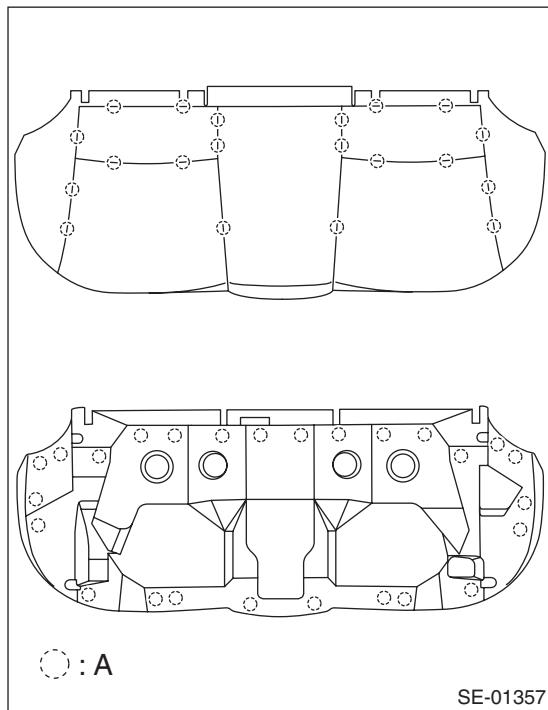

- Seat cushion (fabric seat)

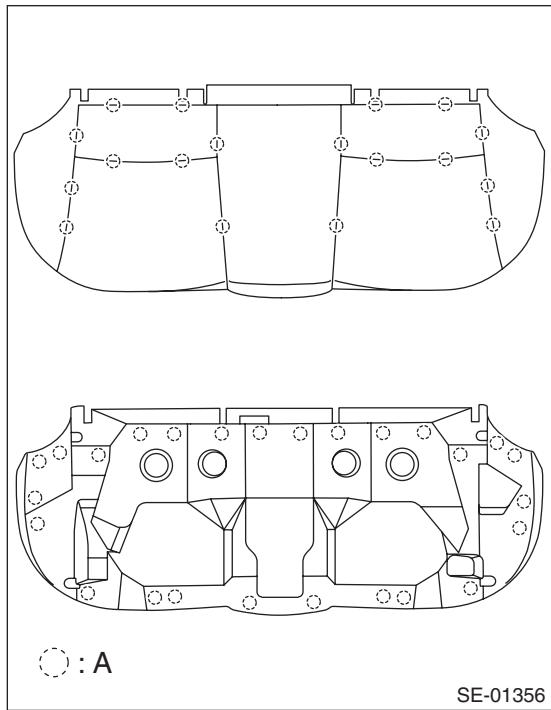

3) Assemble each part in the reverse order of disassembly.

**NOTE:**

- Do not contaminate or damage the cover.
- While installing the hog rings, prevent the seat from getting wrinkled.