


## 10. Rear Door Latch and Door Lock Actuator Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear door trim. <Ref. to EI-45, REMOVAL, Door Trim.>
- 3) Remove the wire from the rear inner remote. <Ref. to SL-33, REMOVAL, Rear Inner Remote.>
- 4) Remove the sealing cover. <Ref. to EB-24, REMOVAL, Rear Sealing Cover.>
- 5) Remove the rear door glass. <Ref. to GW-21, REMOVAL, Rear Door Glass.>
- 6) Disconnect the door lock actuator connector.
- 7) Remove the screws, and remove the rear door latch and door lock actuator assembly.

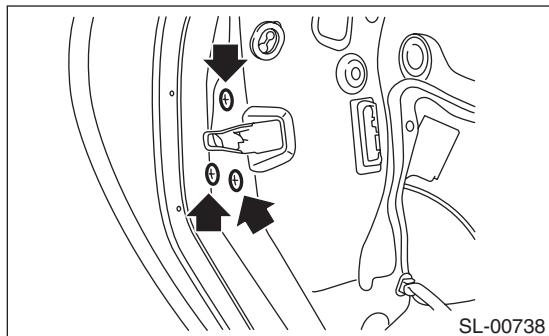

### B: INSTALLATION

Install each part in the reverse order of removal.

#### Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SL-2, DOOR LOCK ASSEMBLY, COMPONENT, General Description.>

#### NOTE:

Make sure the child safety lock works correctly after installation.

### C: INSPECTION

#### 1. DOOR LATCH

Check if the rear door latch operates normally.


- If the cable or rod is faulty, replace the rear door latch and door lock actuator assembly.

#### 2. LOCK ACTUATOR

- 1) Disconnect the ground cable from battery.

- 2) Disconnect the door lock actuator harness connector.

- 3) Connect the battery to door lock actuator terminals.

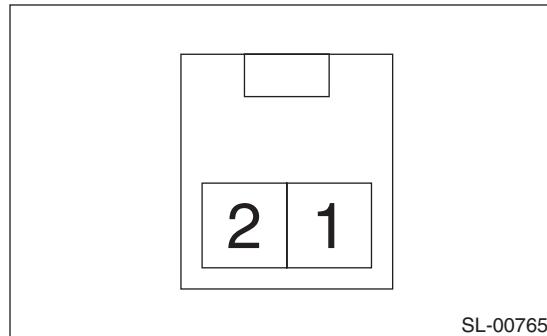

Actuator operation	Terminals	
	No. 1	No. 2
Lock → Unlock	–	+
Unlock → Lock	+	–

- 4) If the actuator does not operate normally, replace the rear door latch & door lock actuator assembly.