


### 11. Rear Gate Opener Button

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear gate trim. <Ref. to EI-69, REMOVAL, Rear Gate Trim.>
- 3) Remove the rear gate garnish. <Ref. to EI-72, REMOVAL, Rear Gate Garnish.>
- 4) Disconnect the harness connector of the rear gate opener button.
- 5) Hold down the rear gate opener button hook, and remove the rear gate opener button.

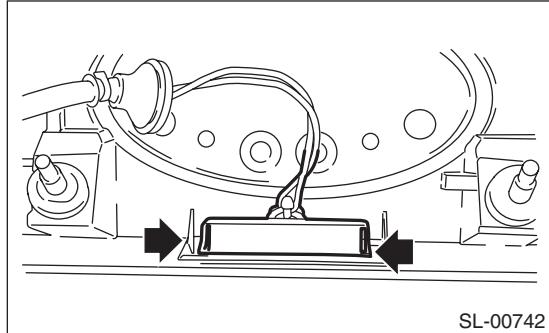

#### B: INSTALLATION

**CAUTION:**

**Make sure that the harness grommet is securely installed.**

**If not properly installed, this may cause leaks.**

Install each part in the reverse order of removal.

#### C: INSPECTION

- 1) Disconnect the rear gate opener button harness connector.
- 2) Check the resistance between rear gate opener button connector terminals.

Switch	Terminal No.	Standard
Open	1 and 2	Less than 1 $\Omega$
Close		1 M $\Omega$ or more

- 3) Replace the rear gate opener button if the inspection result is not within the standard value.