


13. Trunk Lid Latch and Actuator Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Disconnect the harness connector to remove the trunk opener cable.
- 3) Remove the bolts, and remove the trunk lid latch & actuator assembly.

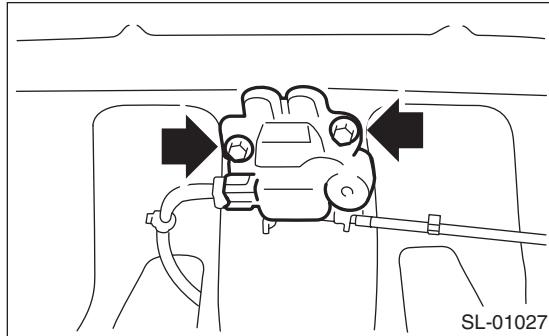

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SL-3, REAR GATE LOCK AND TRUNK LID, COMPONENT, General Description.>

NOTE:

Apply grease to the movable part.

C: INSPECTION

1. TRUNK LID LATCH


Check if the trunk lid latch operates normally.

- If latch deformation, abnormal wear, or unsmooth lock operation is observed, replace the rear gate latch & actuator assembly.

2. LOCK ACTUATOR

- 1) Disconnect the connector of trunk lid latch and actuator assembly.

- 2) Connect the battery to the lock actuator terminals.

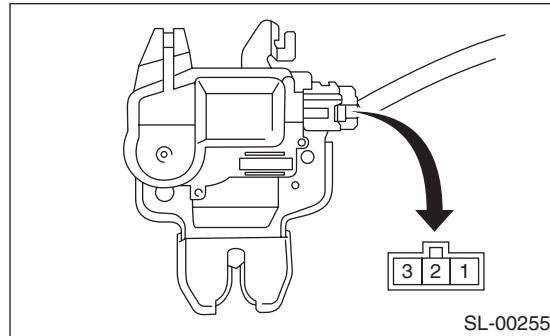

Actuator operation	Terminals	
	No. 1	No. 2
Lock → Unlock	-	+

- 3) If the actuator does not operate normally, replace the trunk lid latch & actuator assembly