


14. Front Hood Lock Assembly

A: REMOVAL

- 1) Open the front hood.
- 2) Remove the front bumper face. <Ref. to EI-31, FRONT BUMPER FACE, REMOVAL, Front Bumper.>
- 3) Remove the bolts, and then detach the front hood lock assembly.
- 4) Remove the release cable from the lock assembly.

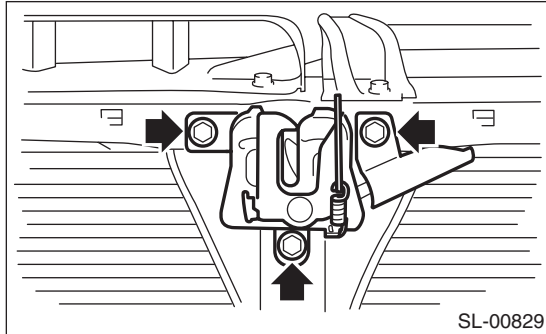

B: INSTALLATION

- 1) Install each part in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to SL-4, FRONT HOOD LOCK AND REMOTE OPENERS, COMPONENT, General Description.>


NOTE:

Apply grease to the movable part.

- 2) Adjust the fog light beam. (Model with fog light)
<Ref. to LI-21, FOG LIGHT AIMING, ADJUSTMENT, Front Fog Light Assembly.>

C: ADJUSTMENT

- 1) Loosen the bolt, and adjust the lock assembly while moving it up and down.

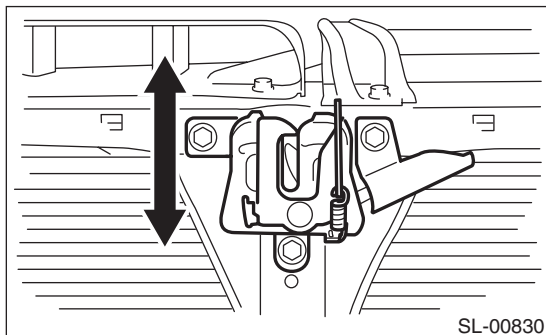

- 2) After adjustment, tighten the bolts securely.

D: INSPECTION

Check if the front hood lock assembly operates normally.

- If latch deformation, abnormal wear, or unsmooth lock operation is observed, replace the front hood lock assembly.